Micro-Professor Manual



Micro-Professor™ MPF-II User's Manual

CHAPTER	1 UMPACKING AND INSTALLATION
	1.1 Unpacking 3
	1.2 Connecting TV
	1.3 The Power Supply 6
	1.4 Test and adjustment7
	1.5 Attaching the Software Cartridge
	1.6 Connecting the Cassette Recorder 10
	1.6.1 Load Data from the Cassette Recorder 10
	1.6.2 Store the Data in the Cassette 12
	1.7 Joystick (JSK)
	1.8 Full-size Keyboard (FSK) 14
	1.9 The Printer
CHAPTER	2 HARDWARE DESCRIPTION
	2.1 Introduction to MPF-II Hardware 19
	2.2 The Power Supply
	2.3 The Main Board 22
	2.4 Keyboard 23
	2.4.1 Keyboard Specifications 23
	2.4.2 The Functions of the Keys 26
	2.4.3 Single Keystroke BASIC Commands 27
	2.5 Video Display 29
	2.5.1 The Video Display Connector 29
	2.5.2 Display Modes 29
	2.5.3 Video Screen Display Buffer 29
•	2.5.4 Screen Pages

2.5.5 Screen Switches

	2.6 Sc	een Display Summary 32
	2.6.1	Specifications of Video Display 32
	2.6.2	Text Mode 32
	2.6.3	Low Resolution Graphics
	2.6.4	High Resolution Graphics
	2.7 Inj	out/Output Expansion 50
	2.7.1	Speaker ; 50
	2.7.2	Cassette Interface 50
	2.7.3	Printer Interface 51
CHARTER	2 MO	NUTOD PROCRAM
CHAPTER	3 100	NITOR PROGRAM
	3.1 Re	set55
		Cold Reset (Cold Start)
		Warm Reset (Warm Start)
		ter Monitor Program56
	3.2.1	Communicate with the Monitor 56
	3.2.2	Read the Contents of Memory 57
	3.2.3	Alter the Contents of Memory 60
	3.3 W	rite and Execute Machine Language Programs 67
	3.4 01	ther Monitor Commands69
	3.5 Sc	me Interesting Features of the Monitor 70
	3.6 M	onitor Command Summary
	3.6.1	Examine the Contents of Memory71
	3.6.2	Alter the contents of Memory71
	3.6.3	MOVE and VERIFY71
	3.6.4	WRITE to and READ from tape71
	3.6.5	GO and LIST72
	3.6.6	Other Commands
	3.6.7	Useful Subroutines

CHAPTER	4 MEMORY STRUCTURE
	4.1 Introduction
	4.2 RAM Area 82
	4.2.1 Zero Page 83
	4.2.2 Page One 84
	4.2.3 Page Two 84
	4.2.4 Page Three 84
	4.2.5 Page Four through Page Seven 84
	4.3 ROM Area 85
	4.4 Input/Output Locations 86
CHAPTER	5.1 Standard Output
	5.1.2 Adjusting the Text Window of the Screen 92
	5.1.3 Setting Display Mode: Normal or Inverse 93
	5.2 Standard Input
	5.2.1 RDKEY 94
	5.2.2 GETLN 95
	5.3 Internal I/O 97
	5.3.1 Data Output
	5.3.2 Data Input 97
	5.3.3 Toggle Switches
	5.3.4 Soft Switches 99
	E 4 De de la constante de la c

APPENDIX A APPENDIX B

APPENDIX C

6502 INSTRUCTION SET 109

GLOSSARY 123 SCHEMATIC OF KEYBOARD..... 133


_


UNPACKING AND INSTALLATION


1 · 1 Unpacking

Welcome to use the MPF-II! At first, please check the following parts you should have with your MPF-II:

- MPF-II Microcomputer (Fig.1-1)
- . AC-DC Switching Power Supply (Fig.1-2)
- TV/Video Monitor Interfacing Cable (Fig.1-3)
- TV/Computer Switch Box (Fig.1-4)
- . Recorder Line
- . "Micro-Nurse"--Self-Diagnosis Cassette
- . Two Name-Plates--"One Key Basic" and "Graphic"
- . Manual for "Micro-Nurse"
- Installation Manual
- MPF-II User's Manual

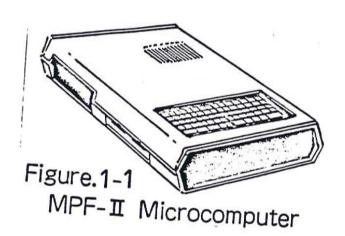

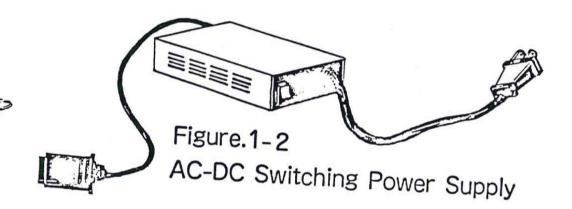

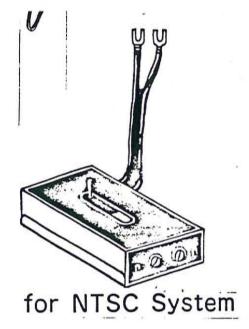

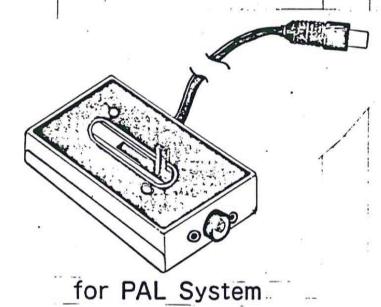


Figure.1-4 Switch Box

1 · 2 Connecting TV

Connect the cable from the MPF-II TV/Computer Swich Box. (Fig.1-5) Disconnect the outdoor VHF antenna from

television set, connect it to TV/Computer Switch Box which is switched to the side

marked "TV". (Fig.1-5) Connect the two cables TV/Computer Switch Box to VHF antenna terminals on the television set. (Fig.1-5)

Switch the TV/Computer Switch side marked "COMPUTER". If you Box to

side marked "COMPUTER". If you want to watch TV, just slide the switch to the "TV" side. If you have a coaxial cable, disconnect the cable from your television, then screw the cable into the impedance-matching transformer and attach it to the switching box. (Consult your local Multitech dealer or distributor, if you don't know exactly what to do.) If you have a monitor, connect the cable from

MPF-II to the monitor.

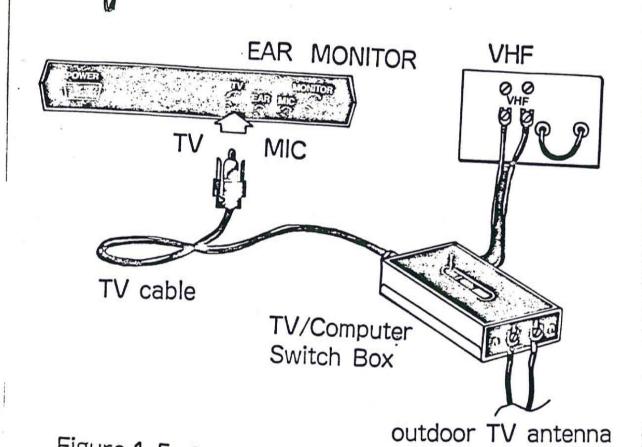


Figure.1-5 Connecting TV


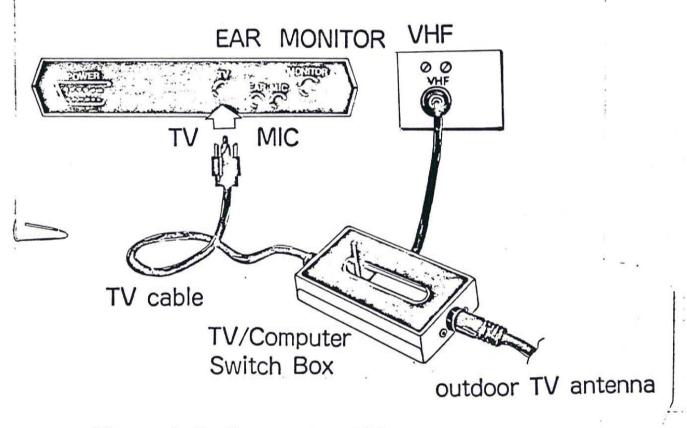


Figure.1-5 Connecting TV

1 · 3 The Power Supply

- Plug the power cord of the Switching Power Supply into the wall outlet. (Fig.1-6)....
- Turn the Switching Power Supply on, the red 2. power-on LED indication light will illuminate.
- Turn the Switching Power Supply off. 3.
- Connect the DC output line of the Switching
- Power Supply to your MPF-II. (Fig.1-6)
 Turn on the Switching Power Supply, your MPF-5. II will beep.
- 6. If it does not beep, press the RESET key; if it beeps after the RESET key was released, the
- power is supplied properly.

 If the MPF-II does not beep, repeat the 7. procedure from the beginning.

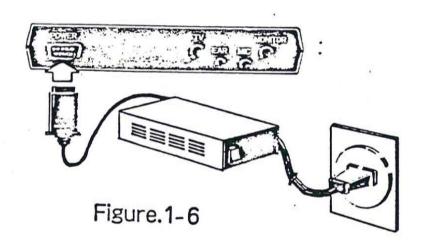

1. Set the television on the channel 13; if your TV set only has push-button channel selector, please adjust the selector until the screen clearly and stably shows:

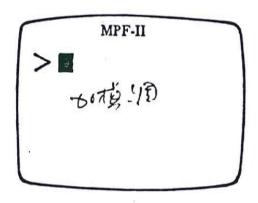


Fig. 1-7

> and are tow special signs the computer uses to communicate with us. ">" indicates the beginning of a line, and is called a prompt or a prompt character. " reminds a user that the computer is ready to receive a character. It is referred to as a cursor.

2. Now, key in the following program:

10 GR 20 FOR I=0 TO 7 30 COLOR = I 40 VLIN 0,47 AT 2*I 50 NEXT I RUN

(This is a BASIC program, if you have any question, consult the Microprofessor-II dealer in your area.)

3. After you have executed the above program, your TV screen/video display should show seven vertical lines in green, purple, white, green, orange, blue and white.

- 4. Now, the MPF-II has been installed correctly.
- Let's begin to test the memory space.

 5. Enter the command NEW, and then press the RETURN key; key in ?FRE(Ø), and then press the RETURN key, your MPF-II will show the number "-26629". (The unmber -26629 is only approximate number.) If your MPF-II displays a number close to the above number, then the memory of your MPF-II is all right.


1 . 5 Attaching the Software Cartridge

 Always turn off the switching power supply to prolong the life of your MPF-II and protect the electronic components when inserting or removing the software cartridge.

Plug the software cartridge into your MPF-II

properly. (Fig. 1-9)

3. Turn on the switching power supply, your MPF-II will execute the program in the software cartridge immediately.

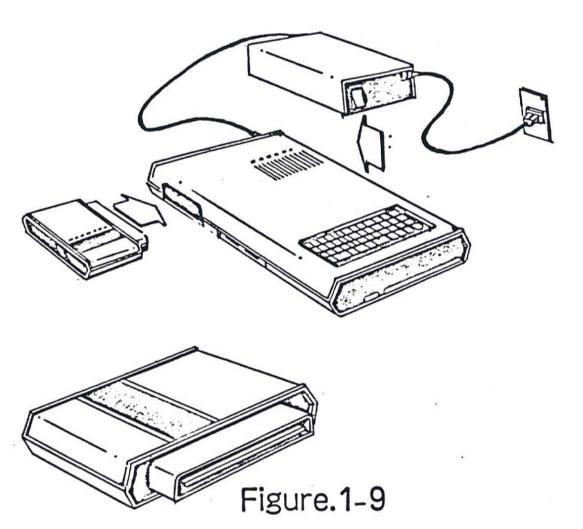

Installing the Software Cartridge

1 . 6 Connecting the Cassette Recorder

1.6.1 Load data from the cassette recorder

a. Get a recorder line, connect one end of it to the miniature jack marked "EAR" or "EXT SP" on the recorder and the other end to the jack marked "EAR" on the MPF-II. Then set the volume control of your recorder over middle loudness. See Fig. 1-10

· ·

Note if you use either of the following two types of tape recorder, you can use the attached MPF-II recorder line.

- * Single channel (MONO) recorder
- * Two channel stereo recorder with two discrete phone jacks marked "EAR" or "EXT SP". You can plug the recorder line to any of the jacks marked "EAR" or "EXT SP".
- * If your stereo recorder has only one jack for sound output, you can not use the attached recorder line. You have to use the recorder line especially designed for use with stereo recorders.




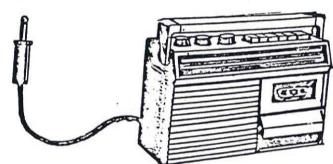


Figure.1-10

Connectting the Cassette Recorder

- b. Put the tape into the recorder, rewind it to the starting point.
- c. Key in "LOADT" if there is a filename for the data, type it in the quotation mark " ". If the program stored on tape doesn't have a filename, proceed to the next step.
- d. Play the recorder, then press the RETURN key.
- e. As soon as the MPF-II begins reading the tape, the screen will display the state of the tape loading operation.

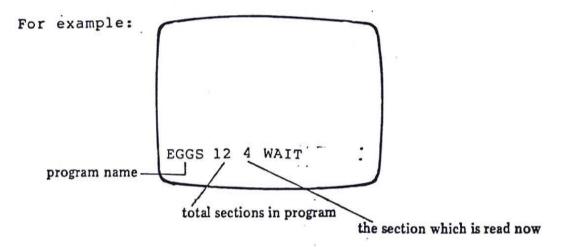

- f. If there is more than one file on a tape, you can get the file needed by information showed on the screen. Press FF(fast forward) key on the recorder, then the PLAY key repeatedly to find the desired file.
- g. If the file is not loaded successfully, check:
 l) if the recorder line is properly connected,
 2) if the volume of the recorder is properly set, and then start the procedure over.
- h. If the tape (of MPF-II fomated tape) is loaded successfully, the screen will display an "OK". Now you may press RUN and RETURN to execute the program already loaded into the memory of the MPF-II.
- i. When any error happened, check if the connection is made properly.
- j. As soon as it finished reading the data, the screen will display OK. Now, key in RUN, the MPF-II will begin to execute the program.

1.6.2 Store the data in the cassette

- a. Connect the recorder line from the hole "MIC" on the recorder to the hole "MIC" on the MPF-II.
- b. Press RECORD, PLAY on the recorder.

Note if you use either of the following two types of tape recorder, you can use the attached MPF-II recorder line.


- * Single channel (MONO) recorder
- * Two channel stereo recorder with two discrete phone jacks marked "EAR" or "EXT SP". You can plug the recorder line to any of the jacks marked "EAR" or "EXT SP".
- * If your stereo recorder has only one jack for sound output, you can not use the attached recorder line. You have to use the recorder line especially designed for use with stereo recorders.
- c. If the data is written in BASIC, key in SAVET,
 " " (you may type in the filename in the quotation mark.), and then RETURN.
- d. If the data is not written in BASIC, key in CALL-159 then type in as follows:

starting address . ending address W filename, RETURN


e. Once the data was stored successfully onto the tape, the MPF-II will beep and show "OK" on the screen.

. 7 Joystick (JSK)

 The optional joystick is used for game applications. You may connect the joystick to the MPF-II in accordance with the illustration below.

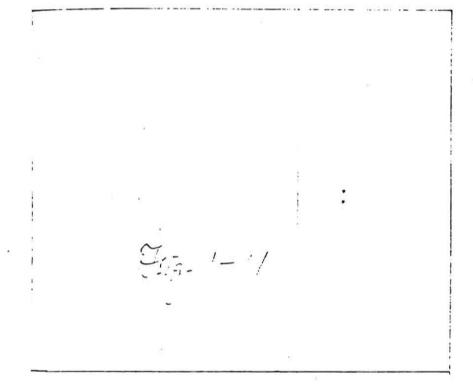

- 2. The joystick is used to control the directions of game movements. Four directions are allowed. The button is equivalent to the key on the MPF-II keyboard, which is used for shooting in most game applications.
- The schematic of the joystick is provided in Appendix.

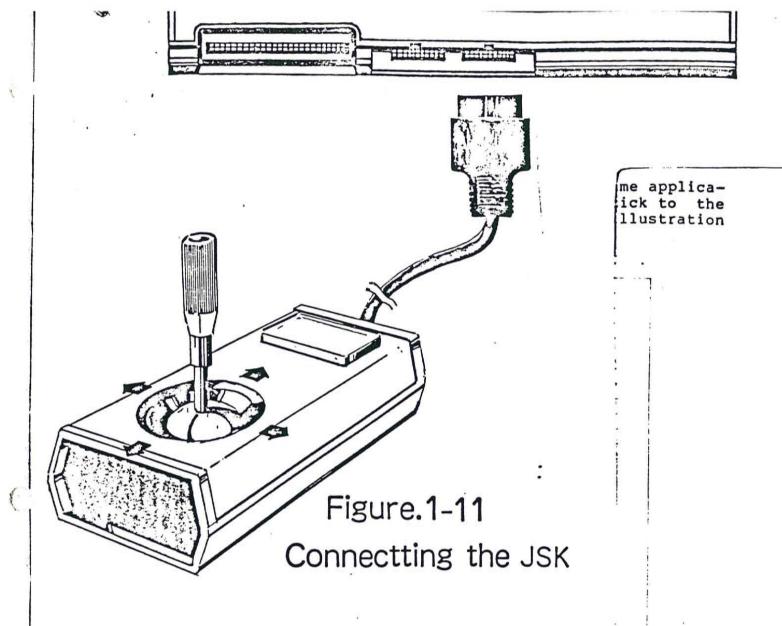

of game movements. Four directions are allowed. The button is equivalent to the key on the MPF-II keyboard, which is used for shooting in most game applications.

The schematic of the joystick is provided in Appendix. · o ruii-size neypoara...

 The optional full-size keyboard is designed for those who prefer standard typewriter keyboard. You may connect the full-size keyboard to the MPF-II in accordance with the illustration below.


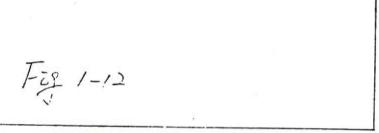


Fig. 1-12 Full-size Keyboard

2. The specifications of the MPF-II are the same as the standard MPF-II keyboard except that the full-size keyboard has 55 keys, while the standard MPF-II keyboard has only 49 keys. This is because six more keys are added on the full-size keyboard for the users to use the keyboard more conveniently. The six keys and their corresponding keys on the standard MPF-II keyboard are listed in the table below.

On FSK-MPF	On MPF-II
FIRE x 2 SHIFT x 2 x 2 x 2 x 2 x 1	SHIFT x 1 X 1 X 1 X 1 X 1 X 1 X 1

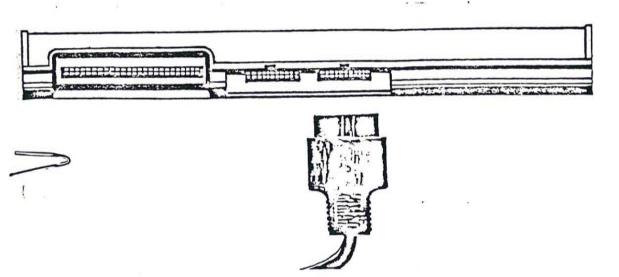

Note that the up key is only for decoration.

Still, there are four keys marked differently on the full-size keyboard. The four keys and their corresponding keys on the standard MPF-II keyboard are listed in the following table.

On MPF-II

CONTROL

 The schematic of the full-size keyboard is provided in Appendix.

1 . 9 The Printer


The printer with connector line for MPF-II is optional. Connect it to your MPF-II as the following figure shows.

Fig. 1- 3

Fig.1-13

- 2. Turn on the power of the printer.
- To copy the characters or graphics from screen, you can hold down the CONTROL key while pressing the P key or type HC directly on the screen. Note: HC stands for Hard Copy. This command enables you to print what's on the screen on paper.
- Three commands for the printer in BASIC: a. PRTON - Print out everything after each PRINT command both on the TV PRINT command both on the TV screen and the printer.

 PRTOFF - After typing in this command, each time you use the PRINT
 - command, information will printed on the screen.
 - HC Copy the characters or graphics from TV screen to the printer.

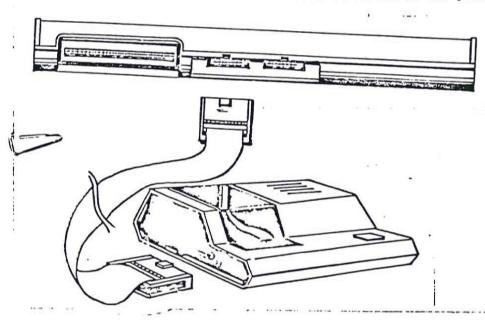

CHAPTER 2		

HARDWARE DESCRIPTION

2 • 1 Introduction to MPF-II Hardware

The major components of the MPF-II are switching power supply, the MPF-II main board, keyboard, and video display.

2.1.1. The specifications of the MPF-II are listed as follows:

- 1) The central processing unit (CPU): The CPU of the MPF-II is an R6502 microprocessor.
- 2) The read only memory (ROM): The ROM capacity of the MPF-II totals 16K byte. It contains system monitor program and BASIC interpreter.
- 3) The read/write memory (random access memory): It is used to store user's program or data. (MPF-II contains 64K dynamic RAM).
- 4) Video display:
 The video display (either a monitor or a TV) has
 three modes of operation—text mode, low resolution graphics mode, and high resolution graphics
 mode.
- The MPF-II's keyboard has 49 keys, including alphanumerical keys (A to Z, Ø to 9), function keys, and special signs such as #, \$,...
- 6) EAR and MIC jacks: The ear and microphone jacks are used to store or retrieve data into (from) cassette tapes.
- 7) Edge connector for ROM (software) cartridges:
 A socket at the upper left side of the MPF-II is
 reserved for software cartridges. When a ROM
 cartridge is connected to the MPF-II, the MPF-II
 will execute the program stored in the software
 cartridge.
- 8) Printer edge connector: A printer socket is reserved for interfacing to printers with Centronics interface for making hard copies.

- 9) Edge connector for joystick and full-size keyboard: A socket is reserved for either a joystick or a full-size keyboard.
- 10) An 8 ohm, 1/4W speaker is built inside the MPF-II cabinet.



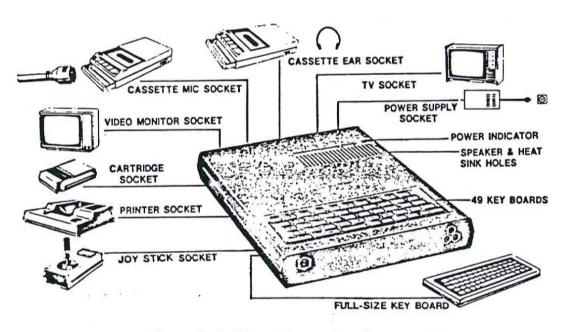


Fig. 2-1 The Micro-Professor II

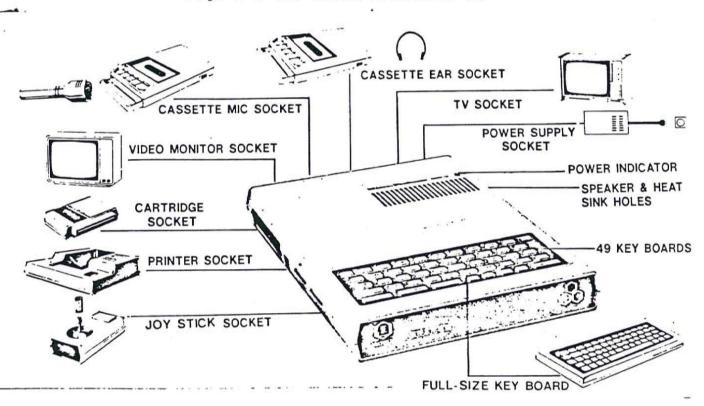

2 • 2 The Power Supply

Three voltages are supplied to the MPF-II: +5V, -5V, and +12V. The power supply of the MPF-II is of switching type. The input voltage is 110VAC or 220VAC, and the output power are: +5V, 3.0 A; -5V, 100 mA; and +12V, 250 mA. Fig.2-2 shows the pin assignments of the power supply connector.

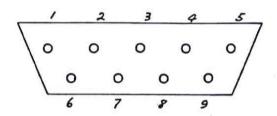

Pin 1 supplies +12V Pin 2,3,4 supply +5V Pin 5 supplies -5V Pin 6,7,8,9 are for ground

Fig. 2-2 The Pin functions of the Power Supply

2 · 3 The Main Board

Opening the MPF-II cabinet, you will see a dark green printed circuit board (PCB). It is the MPF-II microcomputer itself. About 50 integrated cir-cuits (IC) are installed on the main board. Among the ICs, there is a 40-pin R6502, which is the brain of the MPF-II. It is capable of performing more than 500,000 additions or subtractions per second. It is one of today's most widely used microprocessors.

The 6502 is an 8-bit microprocessor, which means it handles data eight bits at a time. It is capable of accessing 64K bytes (65,536 bits) of data and operates on an instruction set containing 56 instructions. This microprocessor has 13 addressing modes through which it accesses the data stored in memory.

To the right of the ROM cartridge edge connector, two 28-pin ICs are installed side by side. The two ICs are for storing:

- 1) monitor programs
- BASIC interpreter

Below the leftside of the two 28-pin ICs, there are eight 16-pin ICs. These ICs are used as the RAM of the MPF-II, which can store 64K of bytes of data (depending on the model you own). You are actually write your programs or data unto the RAM of your MPF-II when you write a program (or data) or run your program. Note that when the power of the MPF-II is turned off, all the data stored in the RAM is lost.

Through the ICs and other components of the MPF-II, you and the MPF-II can communicate with each other. After the MPF-II has processed the programs or data, it will display the results on the video monitor. By looking at what's displayed on the video monitor or TV, you will know what the MPF-II is doing. At the upper leftside of the MPF-II, there is a 50-pin peripheral connector (also called software cartridge edge connector, which can be used to connect with peripheral devices other than ROM cartridges. For example, a floppy disk drive can be connected to the MPF-II through the peripheral connector.

2 · 4 Keyboard

A user has to key in his program or data using the keyboard of the MPF-II.

2.4.1. Keyboard specifications:

The MPF-II keyboard consists of 49 keys, which can generate 153 ASCII codes. The 153 ASCII codes (in hexadecimal) are listed in table 2-1.

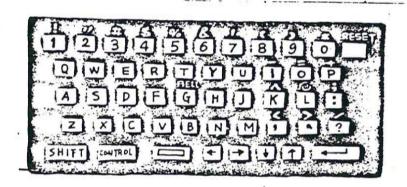


Fig. 2-3 MPF-II Keyboard

K	ry	Alone	CTRL	SHIFT	CTL-SHT	Key	Alone	CTRL	SHIFT	CTL-SHT
Spi	sce .	A0	A0	A0	34	J	CA	8A	F2 5F	F2 5C
0	•	BO	В0	AA	35	KA	СВ	8B	DE	41
1	1	B1	B1	A1	F2 41	L Ø	cc	8C	œ	42
2	-	B2	B2	A2	F2 42	M	CD	8D	F2 72	F2 5D
3	#	B3	B3	A3	F2 43	N	CE	8E	F2 63	F2 53
4	\$	B4	B4	A4	F2 44	0 -	CF	8F	BD	43
5	%	B5	B5	A5	F2 45	P +.	D0	90	AB	44
6	&	B6	B6	AB	F2 48	a	D1	91	F2 64	. F2 48
7		B7	45	A7	F2 47	R	D2	92	F2 67	F2 4B
8	(B8	B8	A8	36	S	D3	93	F2 6D	F2 55
9)	B9	B9	A9	37	Т	D4	94	F2 5E	F2 4C
;	;	BA	BA	BB	38	U	D5	95	F2 70	F2 4E
,	<	AC	AC	ВС	39	V	D6	96	F2 6B	F2 5B
	>	AE	AE	BE	3A	W	D7	97	F2 65	F2 49
?	1	BF	BF	AF	3B	×	D8	98	F2 6F	F2 57
A		C1	B1	F2 6C	F2 54	Y	D9	99	F2 71	F2 4D
В		C2	82	F2 62	F2 52	Z	DA	9A	F2 6E	F2 56
С		СЗ	83	F2 6A	F2 5A	RETURN	BD.	8D	8D	40
D		C4	84	F2 68	F2 58	+	88	88	88	3C
E	_	CS	85	F2 66	F2 4A	+	95	95	95	3 D
F		C6	86	F2 69	F2 59	1	F1	F1	F1	3E
G		C7	87	F2 60	F2 50	†	FO	FO	FO	3F
н		C8	88	F2 61	F2 51	SHIFT	FF	FF	FF	FF
1	_	C9	89	AD	F2 4F	CONTROL	FF	FF	FF	FF

Table 2-1 ASCII Code and their Corresponding Keys

The CONTROL key is used to generate control codes to the MPF-II, while the ←, →, √, ↑ keys are used for moving cursor. To find the decimal ASCII codes, use table 2-2.

Table 2-2 ASCII Character Set

In table 2-2, the abbreviations of ASCII control characters are represented in two and three lower case letters. But not all characters present in the ASCII character set can be generated by the MPF-II keyboard. For example, the two columns of lower case characters on the left, __, [, and control characters such as fs, us, rub can not be used on the MPF-II.

To obtain the decimal or hexadecimal value of any characters listed in the above table, you can add the decimal or hexadecimal numbers on the leftmost column to the numbers over the column in which a character appears.

.1) RESET: The RESET key itself does not generate key code. It is directly connected to the microprocessor 6502. When this key is pressed, the MPF-II stops processing. As soon as this key is released, the MPF-II is initialized and starts a reset cycle.

The SHIFT and CONTROL keys: The two keys do not generate key codes either. But when using together with other keys, the two keys will generate useful key codes.

- 2) Refer to the schematics marked with SHEET 1 of 1, MPF-II KEYBOARD. If only the alphabetical keys was pressed, the codes generated by the keyboard are shown on the upper right part of each circle.
- 3) The pressing of alphanumeric keys while holding down the SHIFT key will generate key codes shown on the upper left part of the circles.
- 4) The pressing of alphanumeric keys while holding down the CONTROL key will generate the key codes on the lower left part of the circles.
- 5) Holding down the SHIFT, CONTROL, and alphanumeric keys will generate the key codes shown in the lower right part of the circles.
- 6) The MPF-II uses 50 special signs (please refer to the graphics nameplate packaged together with the MPF-II). These special signs can be used in your programs for displaying special shapes. But these special signs can not be used for arithmetic Before keying in these special signs, rations. you have to press CONTROL and B simultaneously, then you can type in the special signs accordance with the principles set forth in rules 3) and 5). When you have finished keying in the special signs, be sure to type CONTROL and B simultaneously to return to normal keyboard function.

2.4.3 Single Keystroke BASIC Commands

Normally each BASIC command consists of several English characters such as PRINT, IF...THEN, GOTO etc. Each time you type in a command, you have to press several keys. For your convenience, the single keystroke BASIC command feature was incorporated into the MPF-II. With this feature, you only have to press a key to enter a BASIC command. (Please refer to the diagram below and the attached SINGLE KEYSTROKE BASIC COMMAND NAMEPLATE.)

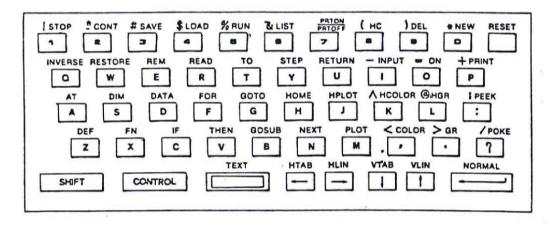


Fig 2-4 Nameplate for single keystroke cammands

To enter a single kdystroke BASIC command, you have to press the single keystroke BASIC command keys while holding down the SHIFT and CONTROL keys. Note that the PRION is an on-and-off (toggle type) switch. Pressing this key once will change the status from PRINT-ON to PRINT-OFF or from PRINT-OFF to PRRINT-ON.

For your convenience, the keys used for entering single keystroke BASIC commands are so arranged as for you to these keys easily. Related keys are grouped access example, the most frequently used For together. system and utility commands are positioned in the upper By upper row, we mean the row on row on the keyboard. the keyboard that is farthest from you. Refer to Fig.2-5. The commands used for graphics can be entered by using the single keystroke BASIC command keys located at the lower right part of the keyboard. Keys used for commands related to the flow of control located at the center of the keyboard, while commands are entered using the keys Input/output bordering the keys related to the flow of roughly control.

Keys used for entering single keystroke BASIC commands are usually paired. For example, the IF, THEN, GOTO, and GOSUB keys are paired close together so you can enter these commands conveniently. Other examples of the paired keys are LOAD, SAVE; READ, DATA; DEF,FN; STOP, CONTINUE, etc. It pays studying the nameplate for single keystroke BASIC commands just for a few minutes.

The function of the NORMAL command is just the opposite of that of the INVERSE. This is also reflected through the positioning of the keyboard. The NORMAL key is located at the lower right corner of the keyboard, while the INVERSE key at the upper left corner of the keyboard.

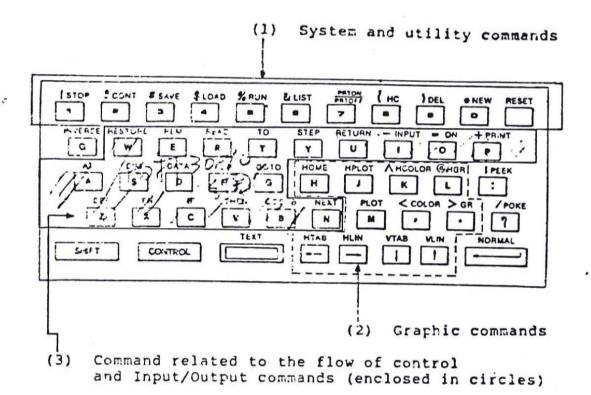


Fig 2-5 Nameplate for single keystroke cammands

2 · 5 Video Display

2.5.1 The Video Display Connector

When holding an MPF-II with the keyboard toward you, the side panel which is the farthest from you is referred to as the back panel on which you can see the connectors reserved for the power supply, ear and microphone jacks, and two holes marked TV and MONITOR, respectively.

A cable (sometimes known as RCA phone cable) is provided for connecting your MPF-II and the video display (which may be either a TV or a monitor). If you choose to connect your MPF-II with a TV, then you must find a switch box which is about two and a half inch long to connect to your video connector cable.

2.5.2 Display Modes

Three display modes are available for the MPF-II:

- 1) TEXT MODE: In text mode, the MPF-II has a display format of 24 rows by 40 columns of alphanumeric characters and special signs. Each character is comprised of a character font of 5 by 7 dot matrix. A one-dot wide space on either side of a character and above each character is used to keep the words apart.
- 2) LOW RESOLUTION GRAPHICS MODE: The MPF-II can display an array of 40 blocks wide and 48 blocks long. Each block may come in any of the six colors: black, white, blue, orange, purple, and yellow. No space is reserved between blocks. Thus, two adjacent blocks form a bigger block.
- 3) HIGH RESOLUTION GRAPHICS MODE: The MPF-II provides an array of 280 dots wide and 192 dots high. Each dot has the same size as that in text mode. Each dot may come in any of the six colors provided also in low resolution graphics mode.

2.5.3 Video Screen Display Buffer

The source of information used in text, low resolution graphics, and high resolution graphics modes is stored in the same area.

2.5.4 Screen Pages

The source of information needed to form a screen

display are actually stored in two areas whose size is exactly the same. One of them is called "primary page", and the other is called "secondary page". The secondary page is needed for storing screen information which you want to display instantly. But if your MPF-II is of the version with only 16K RAM, the primary page or "page 1" is actually the secondary page or "page 2". The memory locations used for screen display information are illustrated in Table 3.

Table 2-3 Screen Display Memory Locations

Page 1		Page 2			
	Starting A	Address			
Hexadecimal	Decimal	Hexadecimal	Decimal		
2000 8192		3FFF :	16383		
	Ending Ad	dress			
A000 40960		BFFF	49151		

2.5.5. Screen Switches

To decide which mode and page is to be used for screen display, we use screen switches. However, you can not touch and see these switches, because these switches are controlled by the software (program) of the MPF-Each switch corresponds to a specific memory II. location. Each time a program is used to turn on or turn off (toggle) a switch, it simply references the specific memory location of that switch. Though data is read from or written to that memory location each time the program references that memory location, it is the reference of that memory location that actually toggles the switch. Since these switches controlled by the software, they are generally known as "soft switches".

There are four memory locations used as soft switches. They come in pairs. Therefore, when one switch is turned on, the other in the pair is always off. Table 4 lists the addresses of the switches:

Table 2-4 Screen Switches

Addre	ess				
Hex	Decimal		Functions		
CØ5Ø	49232	-16304	Display graphics mode		
CØ51	49233	-16303	Display text mode		
CØ54	49236	-16300	Display page 1		
CØ55	49237	-16299	Display page 2		

2 · 6 Screen Display Summary

2.6.1 Specifications of Video Display

Display Type: Memory mapped into the RAM

 Display Mode: Text mode, low resolution graphics mode, high resolution graphics mode.

3) Text display format: 960 characters (24 rows by 40 columns)

4) Character font: 5 by 7 dot matrix

5) Character mode: Normal, inverse

6) Character set: 64 upper case ASCII characters

7) Graphics capability: 1920 blocks (40 by 48) for low resolution graphics, 53760 dots (280 by 192) for high graphics mode.

8) Number of colors: six colors for both low and high resolution graphics modes.

2.6.2 Text Mode

In text mode, the MPF-II is capable of displaying a screen of 24 rows and 40 columns. Characters displayed on the screen are stored in the video display buffer. Each character position corresponds to one memory location, which can be used to store any of the ASCII code of 64 characters—26 upper case English letters, 10 numerals, and 28 special characters. Each character is displayed as a 5 by 7 dot matrix with a one—dot space on both side of the character and above the character to keep the word apart.

Fig. 2-5 shows the 64 characters that can be displayed on the screen

Fig 2-5 MPF-II Character Set

In low resolution graphics mode, the screen can display an array of 40 by 48 blocks, while each block may come in any of the six colors available on the MPF-II. But the blocks come in only white and grey on monochrome monitors.

Table	2-5	Low Resolu	ution Grap	hics C	olors
Decimal	Hex	Color	Decimal	Hex	Color
Ø	\$0	black	8	\$8	Purple
1	\$1	green	9	\$9	green
2	\$2	purple	10	\$A	purple
3	\$3	white	11	\$B	white
4	\$4	green	12	\$C	white
5	\$5	orange	13	\$D	orange
6	\$6	blue	14	\$E	blue
7	\$7	white	15	\$F	white

If color does not show up on your color TV screen, you can adjust a screw (which connects to a variable capacitor on the MPF-II main board) at the bottom of the MPF-II until color shows up on your screen. The shade of color may vary, depending on different brands of color TVs. You may use the color trimmer on your screen to make adequate adjustment.

2.6.4 High Resolution Graphics

When your MPF-II operates in high resolution graphics mode, the screen displays an array of 53,760 dots (280 by 192). Each dot may come in one of the six colors--white, black, green, blue, orange, purple.

When operating in high resolution graphics mode, the MPF-II fetches screen information from a memory area consisting of 8,192 bytes. This memory area is known as display buffer. The display buffer is divided into two areas: page 1 and page 2. The memory range of page 1 or primary page is from 2000H (hexadecimal) or 8192 (decimal) through 3FFFH or 16383, and the memory range

of page 2 is from A000H (or 40960) through BFFFH (or 49151).

In text and low resolution graphics modes, the two memory areas of page 1 and page 2 are also used for screen buffer.

Each dot displayed on the screen (when the MPF-II operates in high resolution graphics mode) represents one bit in the screen buffer. The seven bits of a byte is displayed on the screen, while the remaining bit is used for selecting color for the seven bits displayed on the screen.

Each line on the screen requires 40 bytes of information. The first bit of the first byte is displayed as the leftmost bit (or at the leftmost position of a line), followed by the second bit, third bit through the seventh bit. The eighth bit of the first byte is used for selecting color, so it is not displayed. Following the seventh bit of the first byte is the first bit of the second byte, and the first bit of the third byte follows the seventh bit of the second byte. Therefore, each line consists of

7 (dots) \times 40 (bytes) = 280 (dots)

On a black-and-white TV or video monitor, if a dot whose corresponding bit is 1 or "on", the dot appears in white on the screen; if the dot whose corresponding bit is Ø or "off", the dot comes in black on the screen.

However, on a color TV or monitor, the color of a dot determined not only by whether its corresponding bit is on or off, but also by the position where the dot appears on the screen. If the corresponding bit of the dot is off, the dot will come in black. But if the corresponding bit of the dot is on, the color of dot will be decided by its position on a screen. If the dot appears on the column Ø, leftmost column, or on even-numbered columns, it will come in purple. If it appears on column 279, rightmost column, or any of odd-numbered columns, it will appear in green. If two dots come side by side, they will be in white. the dot which is contained in a byte with the eighth bit being one, then the purple and green colors will be replaced by blue and orange colors.

In high resolution graphics mode, there are six colors available. However, they are subject to the following limitations:

- Dots on even-numbered columns only come in black, blue, or purple.
- Dots on odd-numbered columns only come in black, green, or orange.
- 3) Each byte must come in either purple/green or blue/orange. It is absolutely impossible that purple/orange, purple/blue, green/orange, green/blue come in the same byte.

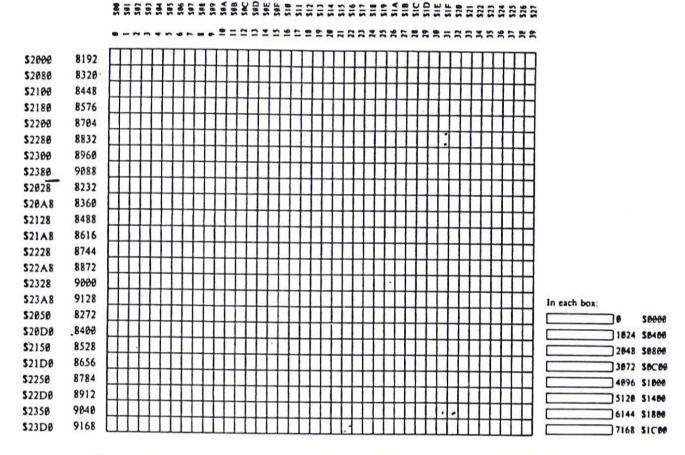


Fig. 2-6 Map of the High Resolution Graphics Mode

2.6.5 Graphic Pattern Display

The MPF-II can display 50 special patterns as shown on the "Special Pattern Keyboard Overlay". Type in the following program and execute the program, then the special patterns will be displayed on the screen. You can compose your own graphics and pictures, using these patterns.

> >10 FOR I= 193 TO 242 >20 PRINT I; " "; CHR\$(242); CHR\$(I) >30 NEXT >RUN 193 _ 194 _ 195 -196 = 197 198 = 200 1 199 201 202 203 204 206 🗷 207 205 208 = 209 F 210 = 211 = 212 4 213 215 216 214 219 l 217 -218 221 \ 222 • 220 / 224 1 223 0 225 T 227 F 228 4 226 4 229 * 230 + 231 🛧 233 ¬ 234 -232 r 235 237 5 236 / 240 X 238 4 239 '

> > 242 +

Every pattern consists of eight bytes.

241 ÷

The special patterns displayed on the screen correspond to the value table for the special patterns (Table 2-6.) From the value table, it is obvious that each pattern is built up with eight bytes. Each group of 8-byte values is preceded by a hexadecimal number as an identifier. The hexadecimal identifiers start from ØlH and end at 32H (H stands for hexadecimal). Therefore, there are 50 different groups of 8-byte values (32H = 50 decimal).

If we use the codes represented by the 20th group of 8-byte values (preceded by the hexadecimal identifier 14H) to generate a pattern, we have to find the eight

values, using Table 2-6. The eight values are 0, 40H, 60H, 70H, 78H, 7CH, 7EH, 7FH. Of the eight bits of each byte, only seven bits--bit 0 through bit 6--will be displayed. Bit 7 of each byte in a group is used for selecting color. The pattern identified by 14H now looks like:

Note that bit 7 is the high order bit. Thus, the second byte is actually 01000000 (binary), and the third byte is 01100000 (binary), etc.

Each bit represents a dot of a special pattern. When the content of a bit is "0", the bit will not be displayed on the screen. If the content of a bit is "1", it turns on a dot and the dot will be displayed. Now the illuminated dots will show on the screen as follows:



```
GRTABL:
101
         DEFB
                  0
         DEFB
                  0
         DEFB
                  0
                  0
         DEFB
         DEFB
                  0
         DEFB
                  0
         DEFB
                  0
         DEFB
                  Ø7FH
102
         DEFB
                  0
         DEFB
                  0
         DEFB
                  0
         DEFB
                  0
         DEFB
                  0
         DEFB
                  0
         DEFB
                  Ø7FH
         DEFB
                  07FH
, 03
                  0
         DEFB
         DEFB
                  0
         DEFB
                  0
                  0
         DEFB
         DEFB
                  0
                  07FH
         DEFB
         DEFB
                  Ø7FH
         DEFB
                  Ø7FH
104
         DEFB
         DEFB
                  0
                  0
         DEFB
                  Ø
         DEFB
         DEFB
                  Ø7FH
         DEFB
                  Ø7FH
         DEFB
                  07FH
                  07FH
         DEFB
; 05
         DEFB
                  0
         DEFB
                  0
         DEFB
                  0
         DEFB
                  07FH
                  07FH
         DEFB
         DEFB
                  Ø7FH
                  07FH
         DEFB
         DEFB
                  Ø7FH
```

; 07	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	9 97FH 97FH 97FH 97FH 97FH
; ØB	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	0 07FH 07FH 07FH 07FH 07FH 07FH
, 09	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	01H 01H 01H 01H 01H 01H 01H
; 0A	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	03H 003H 003H 003H 003H 003H 003H
	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	07H 07H 07H 07H 07H 07H 07H

1 0B		2000
	DEFB DEFB DEFB DEFB DEFB DEFB	OFH OFH OFH OFH OFH OFH OFH
, oc	DEFB DEFB DEFB DEFB DEFB DEFB	1FH 1FH 1FH 1FH 1FH 1FH 1FH
; 0D	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	3FH 03FH 03FH 03FH 03FH 03FH 03FH
; 0E	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	07FH 07FH 07FH 07FH 07FH 07FH 07FH
, 0F	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	000H 055H 02AH 07FH 0B0H 0D5H 0AAH 0FFH

; 10		
. 11	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	9 9 97FH 9 9 97FH 9
,112	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	98H 98H 78H 98H 98H 78H 98H
-	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	08H 08H 07FH 08H 08H 7FH 08H 08H
, 13	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	981 981 981 981 981 981 981
, 14	DEFB DEFB DEFB DEFB DEFB	0 40H 60H 70H 78H 7CH

7EH

7FH

DEFB DEFB

DEFB DEFB DEFB DEFB DEFB DEFB DEFB	0 01H 03H 07H 0FH 1FH 3FH 07FH
DEFB DEFB DEFB DEFB DEFB DEFB DEFB	0 07FH 7EH 7CH 7BH 70H 60H 40H
DEFB DEFB DEFB DEFB DEFB DEFB DEFB	0 07FH 03FH 1FH 0FH 07H 03H 01H
DEFB DEFB DEFB DEFB DEFB DEFB DEFB	07FH 0 0 0 0 0
DEFB DEFB DEFB DEFB DEFB DEFB DEFB	0 0 0 07FH 0 0
	DEFBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBB

DEFB

DEFB

DEFB

3EH

1CH


0

; 1F				1			
; 20	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	0 1CH 22H 22H 22H 22H 2CH 1CH 0H	!				ż
	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	08H 08H 08H 08H 7FH 0				,	
; 21	DEED		<u>*</u>		0.0		
	DEFB DEFB DEFB DEFB DEFB	0 0 0 0 07FH 0BH	* ************************************	+	:		
	DEFB DEFB	08H					
; 22	DEFB	VON					
	DEFB DEFB DEFB DEFB DEFB DEFB	98H 98H 98H 96H 96H 98H 98H					
; 23							
. 24	DEFB DEFB DEFB DEFB DEFB DEFB DEFB	08H 08H 08H 08H 78H 08H 08H					
; 24	DEFB DEFB DEFB	0 08H 1CH 3EH					

	DEFB	7FH					
	DEFB	1CH					
	DEFB	3EH					
; 25	DEFB	0					
	DEFB	36H	v	1			
	DEFB	7FH	1	1			
	DEFB	7FH					
	DEFB	7FH					
	DEFB	3EH					
	DEFB	1CH				3	
, 26	DEFB	ØBH	(4)				
, 20	DEFB	0					
	DEFB	ØBH					
	DEFB	1CH					
	DEFB	3EH					
	DEFB	7FH	*				
	DEFB DEFB	3EH 1CH	8				
Ī	DEFB	ØBH			:		
; 27				Ē			
13.15.153	DEFB	0					
İ	DEFB	1CH					
	DEFB DEFB	1CH 7FH					
	DEFB	7FH					
	DEFB	6BH					
	DEFB	ØBH					
	DEFB	3EH					
; 28	DEED		(4)				
	DEFB DEFB	Ø	(6)				
	DEFB	ĕ	¥.				
	DEFB	Ø					
	DEFB	78H					
	DEFB	ØBH	*				
	DEFB DEFB	ØBH ØBH					
; 29	DEFE	DON			(4)		
,	DEFB	0					
	DEFB	0					
	DEFB	ø					
	DEFB	0					
	DEFB DEFB	ØFH ØBH					
	DEFB	ØBH					
	DEFB	ØBH					

; 2A			
_ / _ //	DEFB	ØBH	
	DEFB	ØBH	
	DEFB	ØBH	
1	DEFB DEFB	78H 0	
	DEFB	ø	
	DEFB	0	
	DEFB	0	ii .
, 2B	DEFB	ØBH	
	DEFB	ØBH	
	DEFB	ØBH	
	DEFB	ØFH	. *
1	DEFB DEFB	0	
÷	DEFB	ø	
1	DEFB	0	
, 2C	DEED		X
	DEFB DEFB	9	1
	DEFB	0 0	:
	DEFB		
1	DEFB DEFB	60H	
	DEFB	ØBH	
1	DEFB	ØBH	1
, 20		_	
	DEFB DEFB	0	
	DEFB	ø	
	DEFB	0	
	DEFB	3H	
	DEFB DEFB	04H 08H	9
	DEFB	ØBH	
, 2E			8
y _i	DEFB DEFB	Ø8H	
	DEFB	10H	
	DEFB	60H	
	DEFB DEFB	0	
	DEFB	ø	
	DEFB	ø	
; 2F			
	DEFB DEFB	ØBH	a a
	DEFB	04H	
	DEFB	Ø3H	

-	DEFB	0			
	DEFB	0			
	DEFB	0	i		
	DEFB	ø	į		
; 30	D2. D	- X	1		
130	DEFB	41H			
	DEFB		1		
		22H			,
	DEFB	14H			
	DEFB	ØBH ·			
	DEFB	ØBH :			
•	DEFB	14H			
	DEFB	22H			
	DEFB	41H '			
; 31					
	DEFB	Ø			
	DEFB	ØBH			
	DEFB	ØBH :			
	DEFB	0		4	
	DEFB	07FH			
	DEFB	0			
	DEFB	ØBH			
	DEFB	ØBH	*	•	
; 32				•	
, 52	DEFB	08H			
	DEFB	ØBH			
	DEFB	ØBH			
	DEFB	ØBH			
	DEFB	7FH			
	DEFB	ØBH			
	DEFB	ØBH			
	DEFB	ØBH			

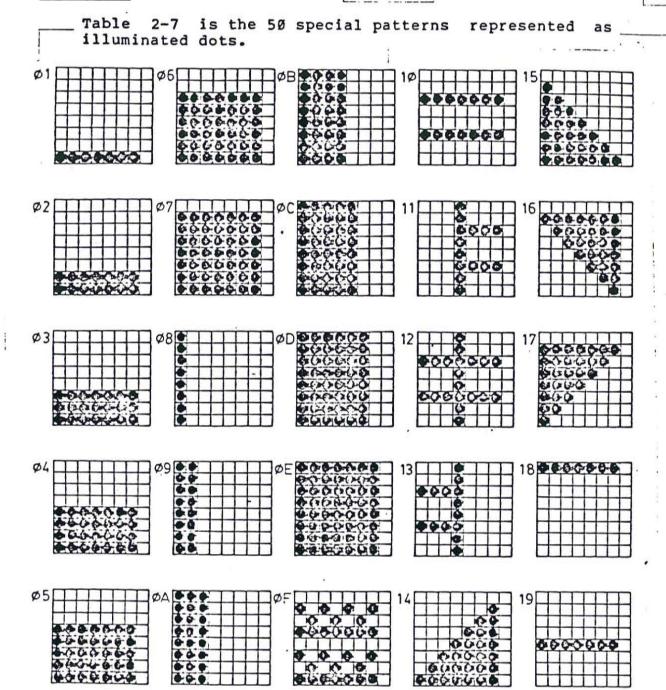

2 • 7 Input/Output Expansion

2.7.1 Speaker

On the upper right part of MPF-II mainboard, there is a built-in speaker. You can program the speaker to generate various sounds.

The speaker is controlled by a "soft" switch. The switch can put the paper cone in two positions: "in" and "out". Every time a program references the memory location coresponding to the switch, the state of the speaker is changed. Each time the state of the speaker is changed, the speaker generates a tone. By changing the state of the speaker frequently and continuously, you can generate a tone from the speaker.

The memory location associated with the soft switch is 49200 or -16336 (decimal). The hexadecimal equivalent of that value is C030H. When this location is referenced, the speaker will generate a tone.

A program may reference this location by reading from or writing into the location. It is the "referencing" the location that change the state of the speaker. The value that is read from or written into the memory location has nothing to do with the flipping of the soft switch for speaker.

Note that when the 6502 microprocessor performs a "write" operation, it must first perform a "read" operation. Therefore, if you reference the soft switch by writing a value into its associated location, you are actually throwing the switch twice. To a toggle-type switch like the soft switch for the speaker, after a "write" operation is completed, the state of the switch remains unchanged.

2.7.2 Cassette Interface

On the back panel (when holding an MPF-II with the keyboard toward you, "top", "bottom", "front", "back", "left", "right" mean the physical top, bottom, front, back, reght, and left of the MPF-II.) of the MPF-II, there are two small holes marked EAR and MIC, respectively. You can plug a cable with a phone plug on each end to your MPF-II and cassette recorder. Then you can store your program from MPF-II to the tape, or load your program from tape to MPF-II.

Note when you load a program from tape to the MPF-II, one end of the cable should plug to EAR of the MPF-II, while the other end of the cable should connect to EAR or OUT on the cassette recorder. If you store a program from the MPF-II to tape, one edn of the cable should plug to MIC of the MPF-II, while the other end of the cable should connect to the jack marked MIC or IN on the cassette recorder.

The connector marked MIC is connected to another soft switch on the MPF-II main board. Like that for the speaker, the soft switch for cassette interface is also a toggle type switch (a two-position switch). The memory location associated with the switch is : 49184 or -16352 (decimal), C020H (hexadecimal). The program that converts data into recordable tone resides in the monitor program.

The other connector marked EAR is for reading program from tape to the MPF-II. Its major purpose is to decode information stored on tape and to load the decoded data into the MPF-II. Thus, a program stored on tape can be loaded back to the MPF-II for execution.

The input circuit of the MPF-II takes lV peak-to-peak signal from EARPHONE on the recorder and converts the signal to a string of ones and zeroes. Each time the signal received by the input circuit changes from positive to negative or from negative to positive, the state of the input circuit will be changed. Ιf input circuit was sending ones, it will start sending zeroes, and vice versa. A program can judge by the value of the memory location 49168 or -16368 or C010H the state of the input circuit. If the value of the location is greater than or equal to 128, then the state of the input circuit is one. Otherrwise, the stateof the input circuit is zero.

2.7.3 Printer Interface

On the left panel of the MPF-II, there is a connector marked PRINTER. The connector provides printer interface to MPF-II printer or other printers with parallel interface. The pin-out of the printer connector is illustrated in Fig. 2-7.

۸,	CHAPTER	3		

MONITOR PROGRAM

After power up your MPF-II or press the RESET your MPF-II will start a reset cycle. The cycle begins by jumping and executing a subroutine in monitor program. The reset cycle 1) first sets the soft screen switch of video display so the MPF-II will operate in text mode, 2) sets the text window to a full screen size, 3) moves the output cursor to the bottom line of the screen, and 4) sets the character display to normal mode. Those are the series of operations performed by the MPF-II, each time you press the RESET key. In addition, there are two locations in the monitor ROM which are used to determine whether a reset cycle is initialized by powering up the MPF-II or by pressing the RESET key. If a reset cycle is initialized by powering up the MPF-II, it is performing a "cold reset"; otherwise the MPF-II initializes a "warm reset".

3.1.1 Cold Reset (Cold Start)

The cold reset is performed when you turn on your MPF-II. The reset cycle first clears the screen display, displays "MPF-II" on the top line of the screen, and sets two specific memory locations.

3.1.2 Warm Reset (Warm Start)

If you press the RESET key after the MPF-II has already completed a cold start, then the MPF-II will perform a warm start, return to the current language you use, and keep your program and parameters intact.

Resided in the ROM of the MPF-II is the system monitor program, which controls all programs entered and run on the MPF-II and services all programs. Under system monitor conrol, you can

- Read and change the values in different memory locations.
- 2) Write your program in machine language and run such program on the MPF-II.
- 3) Save and write programs to or from your MPF-II.
- 4) You can move the contents of a memory range to a specified area in memory.
- 5) You can compare the contents of a memory range with the contents of another specified memory range.
- 6) You can leave the monitor program and enter any other programs.

3 · 2 Enter Monitor Program

The entry point of MPF-II monitor program is at the memory location FF61H (H stands for hexadecimal. We will refer to hexadecimal numbers with the ending H hereafter.) For your convenience (since you may use the address in decimal in BASIC programming), the entry point is 65377 or -159. You can enter the monitor by calling this location, using the CALL -159 instruction.

Once you entered the monitor program, the monitor prompt @ and cursor will appear at the left edge of the screen. Now the monitor is ready to accept a standard input line. After you have typed an input line, the monitor will not respond unless you press the carrage return key which is marked (located at the lower right corner on the MPF-II keyboard.) Each input line to the monitor may consist of up to 255 characters. If you want to terminate your stay in the monitor, you can stroke the CONTROL, C, and carriage return. One other way to do this is to press the RESET key.

3.2.1 Communicate with the Monitor

communicate with the monitor, you must give three types of information to it: command, address, and data. Data and addresses should be given in hexadecimal to the monitor. The decimal numerals from Ø through 9 are used to represent hexadecimal numerals from Ø through 9, and the letters A, B, C, D, E, F are used to represent the decimal numbers from 10 to 15. Thus, a hexadecimal digit can be used to represent any of the 16 decimal numbers from Ø to 15, and two hex digits can be used to represent any of the 256 decimal numbers from 0 to 255, and four hex digits can be used to represent 65536 decimal numbers from Ø to 65535. In the MPF-II, every memory location is numbered with four hex digits, and the contents of each memory location are represented by two hex digits.

When the monitor looks for an address, it is actually looking for a group of four hex digits. If a hex digit group (an address) has less than four digits, the monitor assumes the hex digit group comes with leading zero(s). If an address contains more than four hex digits, the monitor will truncate the number and only receive the last four hex digits.

The monitor recognizes 17 different command charac-

Some of them are used for punctuation, and the rest (which are upper-case letters) are for issuing commands to the monitor. The first letter of monitor command is used as a control character. the screen does not echo the control characters, be sure to use the control characters carefully. knowledge of two special memory locations -- the last opened location and the next changeable location -- is necessary to communicate with the monitor properly. The last opened location is the location you last accessed. The next changeable location is location you may access immediately. Frequently, the last opened location is identical with the next changeable location. You would learn more about two locations in the course of familiarizing with the monotir commands.

3.2.2 Read the contents of memory

Read the contents of a memory location

Type in an address on the input line, the monitor will respond by displaying the address you just typed and the contents of this address. For example,

@FB00

F800- 4C aF900

F900- F8

Every time the monitor display the contents of an address, it remembers that location as the the last opened location. It also regards the location as the next changeable location.

2) Read the contents of a memory block

Typing a period (.) and an address will cause the monitor to perform a memory dump, dumping the contents from the last opened location to the location you typed following the period.

@FA00

FAOO- DB

FA01- 62 5A 48 26 62 94 88 FA08- 54 44 C8 54 68 44 E8 94 QF800

F800- 4C 0.F812

F801- CA EF 4A 08 20 F5 F8 F808- 20 73 FC A5 09 28 90 02 F810- 69 0F 85 D.F82A

F813- 09 60 86 EA EA F818- EA 20 00 F8 C4 2C B0 11 F820- C8 20 C8 EF 90 F6 69 01 F828- 48 20 00

While performing a memory dump, note the followings:

- a. The dumped data displayed on the first output line following the input line (command line) shows the contents in the locations following the last opened location.
- b. Every output line displays contents of no more than eight locations.
- c. In addition to the first output line, all other output lines' beginning addresses end either with a Ø or an 8.

When the monitor performs a memory dump, it first displays the contents of the location immediately following the last opened location. Then it displays the contents of the following locations one after the other until it proceeds to the location whose address ends with either a Ø or an 8. Contents whose address ends with 0 or 8 are displayed in a new output The monitor will continue dumping contents of memory until proceeding to the location you specified after the period. When the monitor stops memory dumping, location you specified will be considered by the MPF-II as the last opened address.

If the address you specified is less than the address of the last opened location, then only the contents of the single location immediately following the last opened location are to be displayed.

@F200.F22F

F200- 00 1C 22 2A 3A 1A 02 3C F208- 00 08 14 22 22 3E 22 22 F210- 00 1E 22 22 1E 22 22 1E F218- 00 1C 22 02 02 02 22 1C F220- 00 1E 22 22 22 22 22 1E F228- 00 3E 02 02 1E 02 02 3E 0F900.F910

F900- F8 69 BF 20 ED FD CA DO F908- EC 20 48 F9 A4 2F A2 06 F910- E0

A simpler way to look into the contents of a memory range (block) is to type in the address of the last opened location, a period, and the ending address.

3) Dumping memory by pressing the carriage return key: Another simpler to perform a memory dump

By pressing the carriage return key, the MPF-II will perform a memory dump to display an output line beginning with the contents of the last opened location. At the same time, the monitor will remember the address of the last displayed location as the last opened location.

0FB05

F805- 20 a ← F5 FB a ←

F808- 20 73 FC A5 09 28 90 02 0F832

F832- A0 a ← → 2F D0 02 A0 27 a ← →

F838- 84 2D A0 27 A9 00 85 30

- 3.2.3 Altering the contents of memory
- 1) Alter the contents of a single memory location

We have mentioned before that the last opened location is usually the next changable location. To change the contents of a location, type in a ":" and the data you intend to write into a location.

2420

0420- 00

a:12

3420

0420- 12

a

Now the value of the next changable location has been changed to 12. If you are not certain of the last opened location, simply type the address of the location whose contents you intend to change, a colon, and the data you want to write to that location. After you have typed in the new data, the original data was changed.

0420:23

9420

0420- 23

a

2) Alter the contents in consecutive memory locations

To change the contents in consecutive memory locations, you don't have to press an address, a colon, and a value for each location. The monitor allows you to change the contents of 85 consecutive memory locations at a time. All you have to do is to type in the starting address of the memory range, a colon, and a series of data separated by spaces. If you omit the starting address, the MPF-II assumes that the next changable location is the starting address.

9400:12 23 34 45 56 67 78 89

2400

0:4 5 6 7

2420.427

0420- 00 01 02 03 04 05 06 07 a

4) Move a memory range to a new location

The MOVE command allows you to move a whole memory range to a new location. To complete this task, you have to tell the MPF-II:

- a. The destination where you wish to move the memory range to.
- b. The starting address of the memory range.
- c. The last address of the memory range.

The memory range can be specified the same as before. The first letter of the MOVE command "M" should follow the memory range in upper case. The "<" mark is used to point to the destination. To move a memory range, you should first tell the monitor the destination by typing the address of the destination, then following by the starting address of the memory location, a period, the last address, and finally the upper case command M. The format of the command looks like

[Destination] < [Starting address] . [Last address]

2460.46F

0460- 00 00 00 00 00 00 00 0468- 00 00 00 00 00 00 00 0400:00 11 22 33 44 55 66 77 88 99 AA BB CC DD EE FF

2400.40F

0400- 00 11 22 33 44 55 66 77 0408- 88 99 AA BB CC DD EE FF 0460<400.40FM

2460.46F

0460- 00 11 22 33 44 55 66 77 0468- BB 99 AA BB CC DD EE FF 0470.477

2470.477

0470- 00 11 22 33 44 55 66 77 a

If the value of the last address is less than the value of the starting address, then the contents of only one memory location will be moved to the destination. If the address of destination is inside the memory range to be moved, then the following may happen:

2420.437

0420- 00 00 00 00 00 00 00 00 0428- 00 00 00 00 00 00 00 0430- 00 00 00 00 00 00 0420:00 11 22 33 44 55 66 77 88 99 AA BB CC DD EE FF

@426<420.42FM

2420.437

0420- 00 11 22 33 44 55 00 11 0428- 22 33 44 55 00 11 22 33 0430- 44 55 00 11 22 33 00 00

5) Compare the contents of two memory range

You can use the monitor to compare the contents of two memory ranges, using the same command format as you use to move a memory range. The command format is listed as follows:

[Destination] < [Starting address] . [Ending address] V

The upper-case letter "V" is the first letter of the monitor command VERIFY. To instruct the MPF-II to verify the contents of two memory ranges, you have to type

Destination Address: The starting address of a memory range whose contents are to be compared with those of another memory range;

A Left Caret;

The starting address of the memory range you want to compare its contents with those contained in the destination memory range;

A period;

The ending address of the memory range you want to compare its contents with those contained in the destination memory range;

The capital letter "V".

2400:00 11 22 33 44 55 66 77

2410<400.407M

2410<400.407V

2406: AA

2410<400.407V

0406-AA (66)

a

In case the monitor finds discrepancy, it will display the address where discrepant value was found and the disagreeing values. If there is no discrepancy, nothing will be displayed. Note when discrepancy happens, the displayed address is an address in the original memory range, which you specified following the left caret.

Save the contents of a memory range on tape

The WRITE monitor command is used to save the contents of up to 65536 memory locations on cassette tape. You have to tell the monitor the beginning and last addresses of a memory range. The command formats are shown below

- a. [Starting address].[Last address]W[filename]
- b. [Starting address].[Last address]WA

The capital letter "W" is the first letter of the WRITE command.

The capital letter of "A" is used to tell the monitor that the format of the tape you want to write to is compatible to APPLE II formated tape.

The first WRITE command format is used when writing data into MPF-II formated tapes. A filename may be specified by typing in no more than 6 alphanumeric letters.

The second WRITE format is especially designed for writing data into APPLE II formatted tapes.

In order to allow a recorder to save data correctly, you have to set it to record mode before typing the carriage return key. Let the tape recorder run a few seconds before pressing the carriage return key. The monitor will first write a "leader tone" unto the tape, and then write data to the tape.

It takes one second for the MPF-II monitor to write a leader tone to an MPF-II formatted tape, and about 10 seconds to write a leader tone to APPLE II formatted tape.

After the monitor has saved the data of a memory range on a tape, it will generate a "beep" and display another prompt. A good habit is to rewind the tape and label the the starting and ending addresses of the memory range you just saved on the tape. 2400.40F

0400- 00 01 02 03 04 05 06 07 0408- 08 09 0A 0B 0C 0D 0E 0F 0400.40FW "TEST" OK

In addition to the leader tone, it takes 35 seconds to write the contents of 4,096 memory locations to a tape. The monitor will write a checksum on the tape after it has written all the contents of the memory range. The checksum is a partial sum of all the values of the memory range. When the MPF-II reads back a stored a tape in the future, it will determine if the reading is performed without mistake by examing the checksum.

Read back a memory range from tape

You can use the READ command to read back the memory range stored on tape with the WRITE command. Remember that the contents of a memory range must be read back to the same memory locations from which they were stored previously. The monitor will put the contents of a memory range to a RAM area in the MPF-II, whose size is exactly the same as that occupied by the memory range stored on tape. The READ commands are listed as follows:

- a. [Sarting address].[Last address]R[Filename]
- b. [Starting address].[Last address]RA

The first command format is used to find the specified filename in the tape, and then put the file in the RAM of MPF-II specified by the starting address and the last address.

The second format reads data from APPLE II formatted tapes and put the data in a memory range specified by the given starting address and the ending address.

If you write a file onto tape using MPF-II command format, then you have to use the same command format to read data values back into the MPF-II. If you write a file onto tape using the APPLE II compatible command format, you have to use the same command format to read data values back from tape to the MPF-II.

Remember that after you have typed in monitor commands, don't press the carriage return key too hastily. If your tape is of MPF-II format, pressing carriage return and then the PLAY key on the tape recorder will cause the monitor to read the data values stored on tape. If your tape is of APPLE II format, you have to press the PLAY key on the recorder. You will first hear the leader tone. Because the MPF-II needs about three seconds to lock on to the frequency, you shall wait for several seconds to let the tape pass by before pressing the carriage return key.

9400:0000000000000000

2400.40F

0400- 00 00 00 00 00 00 00 00 00 00 0408- 00 00 00 00 00 00 00 00 00 00 00 00

TEST 01 01 WAIT. DK

2400.40F

0400- 00 01 02 03 04 05 06 07 0408- 08 09 0A 0B 0C 0D 0E 0F a

After the monitor has finished reading data values from tape, it will produce a checksum. The monitor will compare this checksum with that it just read in from tape. If the two match, it will produce a prompt on the screen. If the two disagree, the ERR message will display on the screen.

2400L					
90					
0400-	A9	C1		LDA	#\$C1
0402-	20	ED	FD	JSR	\$FDED
0405-	18			CLC	
0406-	69	01		ADC	#\$01
0408-	C9	DB		CMP	#\$DB
040A-	DO	F6		BNE	\$0402
040C-	60			RTS	
040D-	FF			???	
040E-	FF			7??	
040F-	FF			???	
0410-	00			BRK	
0411-	11	22		DRA	(\$22),Y
0413-	33			223	ASTRONOS POR MAN ANT ME
0414-	44			???	*
0415-	55	66		EOR	\$66,X
0417-	77			223	71
0418-	00			BRK	
0419-	00			BRK	
041A-	00			BRK	•
041B-	00			BRK	•
a					

The lines above are the program we discussed a moment ago. The lines with ??? is just there to fill up the screen.

3 • 4 Other Monitor Commands

You can set the contents of the two memory locations, which is used by the COUT subroutine (Please refer to a detailed explantion of the COUT subroutine in section 3.6.) to switch the video display to either Inverse or Normal mode. The monitor commands NORMAL and INVERSE are used to set the video display mode.

@F800.F80F

F800- 4C CA EF 4A 08 20 F5 FB F808- 20 73 FC A5 09 28 90 02 a1

@F800.F80F

F800- 4C CA EF 4A 08 20 F5 FB F808- 20 73 FC A5 09 28 90 02 aN

@F800.F80F

F800- 4C CA EF 4A 08 20 F5 FB F808- 20 73 FC A5 09 28 90 02

Type in the above program and see how it works.

Pressing CONTROL, C, and the carriage return key allows you to return to the language you were using before entering the monitor. If you were in BASIC before entering the monitor program, the pressing of the three keys lets you return to BASIC. The system monitor can also perform some simple hexadecimal addition and subtraction. You can do some examples by following the procedures listed below

[Value] + [Value]

[Value] - [Value]

[Value] represents a hexadecimal number. See the following examples:

010+12 =22 03A-B =2F 0EE+3 =F1 05-B =FD

3

3.5 Some Interesting Features of the Monitor

We have mentioned that the MOVE command can be used to copy the data values in a memory range into another range of memory. It can fill up a memory range with the data values we set. Therefore, we can store a few data values into a memory range.

@500 : 11 22 33 44

Remember we have entered four data values into a memory range. Then you are requested to give a special command to the monitor

[ADDR1+NUMBER] < [ADDR1] . [ADDR2-NUMBER] M

Here NUMBER represents the number of values. In our case now, the number of values is four. The special MOVE command you just entered will duplicate the four values as a set pattern and fill the pattern throughout the memory range specified.

2400:11 22 33 44

2404<400.41FM

9400.41F

0400- 11 22 33 44 11 22 33 44 0408- 11 22 33 44 11 22 33 44 0410- 11 22 33 44 11 22 33 44 0418- 11 22 33 44 11 22 33 44

You can play the same trick with the VERIFY command to check whether a pattern of values has been stored in a memory range or if the locations of a memory range contains the same value.

@400:0

2401<400.41FM

2401<400.41FV

2404:02

2401<400.41FV

0403-00 (02)

0404-02 (00)

බ

3.6.1 Examine the contents of memory

[ADDR]

Examine the contents of a single memory location.

[ADDR1].[ADDR2]

Examine the contents of the memory range specified by ADDR1 and ADDR2

3.6.2 Alter the contents of memory

[ADDR]: [VAL1] [VAL2]
Put the values behind the colon into the memory range starting at ADDR.

: [VAL1] [VAL2]....

Put the values following the order VAL1, VAL2... into the memory range starting at the next changable location.

3.6.3 MOVE and VERIFY

- a. [ADDR1] < [ADDR2]. [ADDR3] M</p>
 Move the contents from ADDR2 through ADDR3 to the memory range with the starting address ADDR1.
- b. [ADDR1]<[ADDR2].[ADDR3]V</p>
 Verify the contents of the memory range from ADDR2
 through ADDR3 with the memory range starting at ADDR1.

3.6.4 WRITE to and READ from tape

- a. [ADDR1].[ADDR2]W[FILENAME] Write filename and the data values from the memory range ADDR1.ADDR2 onto MPF-II formatted tape.
- b. [ADDR1].[ADDR2]R[FILENAME] Locate filename, read the data from tape, and put the data into the memory location ADDR1.ADDR2. The command applies to tapes saved with MPF-II format command.
- c. [ADDR1].[ADDR2]WA Write the data values in the memory range ADDR1.ADDR2 to tape. (APPLE II compatible format)

3.6.7 Useful Subroutines

You can apply the useful subroutines listed below in your machine language programs. To use these subroutines, all you have to do is to set the values of proper memory locations or registers, and execute a JSR instruction. Then the MPF-II will perform the desired functions and return with 6502 registers set as described.

1. COUT

[Address]: FDEDH

[Function]: It is the standard character output subroutine. The character to be output should be in the accumulator. COUT calls the current character output subroutine whose address is put in locations 36H and 37H, normally COUT1.

COUT1

[Address]: FDFØH

[Function]: Its function is to display the character in the accumulator on the screen at the current cursor position and advance the cursor. Before it displays the character, it will reference the locations controlling the setting of the inverse/normal mode. So the character in the accumulator will be displayed in accordance with the video display mode. It also controls three characters—carriage return, line feed, and bell. The COUT1 returns with all registers unchanged.

SETINV

[Address]: FE8ØH

[Function]: Sets the display to inverse mode. All characters will be displayed in black on a monochrome background. It will return with the value of register Y set to 7FH. The contents of all other registers remain unchanged.

4. SETNORM

[Address]: FE84H

[Function]: Sets video display to normal mode. All

output characters will appear in white on a dark screen. The value of register Y is set to 00H. All other registers are kept intact.

5. CROUT

[Address]: FD8EH

[Function]: Generates a RETURN character to the current output device.

6. CROUT1

[Address]: FD8BH

[Function]: Clears the screen from the current cursor position to the edge of the text window, then calls CROUT1.

7. PRBYTE

[Address]: FDDAH

[Function]: Prints a hexadecimal byte. The subroutine outputs the contents of the accumulator as a hexadecimal byte to the current output device. The contents of the accumulator are changed after execution of this subroutine.

8. PRHEX

[Address]: FDE3H

[Function]: Prints a hex digit. PRHEX outputs the low order nibble of the accumulator as a hex digit. The contents of the accumulator are changed after execuion of this subroutine.

9. PRNTAX

[Address]: F941H

[Function]: Prints the contents of A and X registers in hexadecimal. This outputs the contents of the A and X as a four-digit hexadecimal value. The contents of the accumulator are changed.

10. PRBLNK

[Address]: F948H

[Function]: Prints three spaces. Outputs three spaces to standard output device. The value of A is usually altered to AOH and that of X contains one zero.

11. PRBL2

[Address]: F94AH

[Function]: Prints a series of spaces. Outputs from 1 to 256 spaces to standard output devices. The number of spaces to be output should be stored in X. If X=0H, then 256 spaces are to be output.

12. BELL

[Address]: FF3AH
[Function]: Outputs a BELL character (CTRL G) to the current output device. Upon exit, the accumulator contains 87H.

13. BELL1

[Address]: FBD9H
[Function]: Causes the MPF-II's speaker to beep at 1 KHz for Ø.1 second. The subroutine alters the contents of A and X.

14. RDKEY

[Address]: FDØCH
[Function]: Fetches an input character. This is the standard character input subroutine. It puts the input cursor on the screen to the position of the current output cursor and jumps to the current input subroutine whose address is stored in locations 38H and 39H, usually KEYIN subroutine.

15. GETLN

[Address]: FD6AH
[Function]: Gets an input line with prompt. It collects input lines. Your machine language programs can use GETLN with the proper prompt character in location 33H. It returns with the input line in the input buffer and X containing the value which represents the length of the input line.

16. GETLNZ

[Address]: FD67H [Function]: Gets an input line. It is an alternate entry point for GETLN which generates a carriage return to the standard output before entering into GETLN.

17. GETLN1

[Address]: FD6FH

[Function]: Gets an input line without prompt.

GETLN1 is also an alternate entry point

for GETLN which does not issue a prompt before it gathers an input line. But if a user deletes a line, GETLN1 will issue the contents of location 33H as a prompt and gets another line.

18. WAIT

[Address]: FCA8H

[Function]: Delays for a specific period of time and then returns to the program which called WAIT. The period of time of the delay is controlled by the value of A. The formula for calculating a time delay is 1/2(26+27A+52AxA)microsecond. A is the value of the accumulator. It returns with the value of A being changed to Ø, but keeps the values of X and Y intact.

19. SETCOL

[Address]: F864H

[Function]: Sets low resolution graphics color.

The value of A decides the color to be displayed.

20. NEXTCOL

[Address]: F85FH

[Function]: Increments the value of low resolution color currently in use by 3.

21. PLOT

[Address]: F800H

[Function]: Plot a block on the low resolution graphics screen with preset color. The value of block's vertical coordinate is stored in the accumulator, and the

value of the block's horizontal coordinate is stored is stored in Y register. It returns with the value of the accumulator changed. But the vallues of the X and Y registers remain the same.

22. HLINE

[Address]: F819H
[Function]: Draws a horizontal line of blocks in preset color. The value of vertical coordinate is stored in the accumulator. The value of the horizontal coordinate of the leftmost block is stored in the register Y, and the value of the rightmost block's position is put in memory location 2CH. It returns with the value of the values of A, Y changed. But the value of X remains the same.

23. VLINE

[Address]: F828H [Function]: Draws a vertical line of blocks resolution preset color in low call graphics. When you subroutine, the value of the horizontal coordinate should be stored in register, the value of the top vertical coordinate in the accumulator, and the value of the bottom vertical coordinate in 2DH. It returns with the value in A changed.

24. CLRSCR

[Address]: F832H
[Function]: Clears the whole low resolution graphics screen. It returns with the values of the A and Y altered.

25. CLRTOP

[Address]: F836H
[Function]: The function of this subroutine is the same as CLRSCR. The only difference is that CLRTOP simply clears the top 40 lines of the low resolution graphics screen.

26. SCRN

[Address]: F869H [Function]: This subroutine reads the color of a

single block on the low resolution graphics screen. You can call SCRN the same way as calling PLOT. The value of the block it reads is returned in the accumulator. All other registers are

not changed.

27. PRERR

[Address]: FF2DH

[Function]: Sends the word "ERR" and character to the standard output device. The contents of the accumulator are changed.

28. IOSAVE

[Address]: FF4AH

[Function]: Saves the contents of all registers in the order of A, X, Y, P, S in locations from 07F0H through 07F4H. The contents of A and X are changed. The decimal

mode is cleared.

29. SCAN1

[Address]: FØ43H

[Function]: Scans the keyboard once. If carry = Ø, no key is pressed. If carry = 1, a key is entered, and the entered key code is stored in the accumulator. Warning! After SCAN1 is executed, the contents in locations 6, 7, 8, 9, 26, 27 on page

l are changed.

CHAPTER 4

MEMORY STRUCTURE

4 • 1 Introduction

The 6502 microprocessor of the MPF-II can access 65,536 memory locations. You can regard the entire memory of the MPF-II is divided into 256 sections or "pages" with each page containing 256 memory locations. Thus, on page 30, the memory locations range from 3000H to 30FFH, totaling 256 locations. Since each address consists of four hexadecimal digits, the first two hex digits (high order byte) can be regarded as the page number, and the low order byte (the last two hex digits) as the location within a page.

The 256 pages of MPF-II memory is divided into three types: 1) RAM, 2) ROM, and 3) input/output (I/O) locations. Different types of memory are used for different purposes. Table 4-1 shows the memory map of the MPF-II.

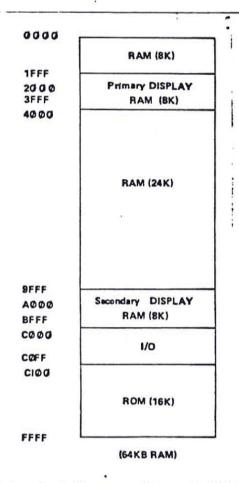


Table 4-1 Memory Map of MPF-II

4 · 2 RAM Area

The RAM area begins from the bottom of page 0 to the end of page 191. This memory range's starting address is 0000H and ends at BFFFH. Most of the locations in the RAM is used to store your program and data. But some areas in the RAM are reserved for the monitor, various programming languages, and other system functions. You can refer to Table 4-2 for a description of the uses of the RAM.

Page Number: Decimal	Hex	Used for
Ø	\$00	System Programs
1	\$Ø1	System Stack
2	\$Ø2	GETLN Input Buffer
3	\$03	Reserved for Peripheral devices
4	\$04	
5	\$Ø5	Monitor :
6	\$06	Program
7	\$07	
8	\$Ø8	User's
9	\$09	RAM
10	\$ØA	and the second of the second o
11	\$ØB	
12	\$ØC	
through		
31	\$1F	
32	\$20	Primary Page for Text,
through		Low-Res, Hi-Res
63	\$3F	Low-Res, III-Res
64	\$40	User's
through		RAM
159	\$9F	
160	\$AØ	Secondary Page for Text,
through	1	Low-Res, Hi-Res
191	\$BF	DOWNED / ME NOD

Table 4-2 Description of RAM Usage

The usage of the RAM's various areas is described below:

4.2.1 Zero Page

Nearly 20 locations of this page are assigned to the system monitor, while the remaining locations in this page are assigned for use of the MPF-II BASIC. Refer to Table 4-3 and 4-4.

Decir	nal	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
	Hex	\$0	\$1	\$2	\$3	\$4	\$5	\$ 6	\$7	\$8	\$9	\$A	\$B	\$C	\$D	\$E	\$F
0	\$00							•	•	•	•				,		
16	\$10																
32	\$20	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
48	\$30	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
64	\$40	•	•	•	•	•	•	•	•	•	•					•	•
80	\$50	•	•	•	•		•										
96	\$60																
112	\$70																
128	\$80																
144	\$90																
160	\$A0																
176	\$B0																
192	\$C0																
208	\$D0									,							
224	\$E0											1					
240	\$F0																

Table 4-3 Monitor Zero Page Usage

Decir	nal	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
	Hex	\$0	\$1	\$2	\$3	\$4	\$5	\$6	\$7	\$8	\$9	\$A	\$В	\$C	\$D	\$E	\$F
0	\$00	•	•	•	•	•	•				*	•	•	•	•	•	•
16	\$10	•	•	•	•	•	•	•		•							
32	\$20																
48	\$30																
64	\$40																
80	\$50	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
96	\$60	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
112	\$7.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
128	\$80		•	•	•	•	•	•	•	•		•	•	•	•	•	•
144	\$90	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
160	\$A0	•	•	•	•	•	•	•	•	•	•	•		•	•	•	•
176	\$B0	•	•	•	•	•	•	•	•	•	•	. •	•	•		•	•
192	\$C0	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
208		•	•	•	•	•	•			•	•	•	•	•	•	•	•
224	177-117		•	•		•		•	•	•	•	•					
240			•	•	•	•			•								

Table 4-4 MPF-II BASIC Zero Page Usage

4.2.2 Page One

The 6502 microprocessor of the MPF-II uses the 256-byte locations of page 1 as a stack. Therefore, make sure your program and data are not stored in this area.

4.2.3 Page Two

The locations of this page are reserved for the GETLN subroutine as a memory buffer for an input line of characters.

4.2.4 Page Three

The locations of page three are reserved for use of peripheral devices to be added in the future.

4.2.5 Page Four through Page Seven

The 1024-byte locations of this area are reserved for the monitor.

4 . 3 KUW Area

The MPF-II is built with 16K ROM, which can hold 16,384 bytes of data. The ROM is mainly used for system monitor, the BASIC Interpreter, utility programs, and subroutines.

The ROM occupies the top 16K locations of the MPF-II's memory map, beginning at location C000H and ending at FFFFH. Once the MPF-II is turned on, the 6502 micro-processor jumps to the top of the memory map and begins executing programs. Thus, the programs which begins at the top of the memory map are responsible for initializing the entire system.

Table 4-5 shows the memory map of the ROM of the MPF-II, the programs and subroutines in the ROM.

$C\phi\phi\phi$	
CØFF	1/0
$C1\phi\phi$	FLOPPY DISK
C1FF	BOOTSTRAP
C2 \(\phi \)	PRINTER SOFTWARE
C2CF	DRIVER
C2Dø	
ΕC φ 9	BASIC
ECØA	MONITOR ROM
FFFF	•

Table 4-5

4 · 4 Input/Output Locations

A total of 256 locations in the memory map of MPF-II are dedicated to input and output functions. This range of memory begins at location C000H (49152 or -16384 in decimal) and extends up through location C0FFH (49407 or -16129). The I/O locations ranging from C000H to C07FH are used by the MPF-II main board, and the remaining are reserved for external use.

CHAPTER 5

INPUT/OUTPUT

チウ

Almost all programs and programming languages requires certain types of input from the keyboard, and displays some information (output) on the screen. There is a set of subroutines resided in the MPF-II's ROM, controlling the standard input and output of information.

For the convenience of users to call them, those subroutines are identified by various names.

5 · 1 Standard Output

The standard output subroutine is called COUT (character output), which is used to display upper-case letters, numbers, and special symbols in normal or inverse mode on the screen. In addition to the carriage return, BELL, and backspace, COUT ignores other control characters.

COUT subroutine has its own invisible "output cursor" which points to the position at which the next output character is to be placed. Each time COUT is called, it will put an output character at the current cursor position, replacing the character previously displayed, and moves the cursor one column to the left. If the cursor is moving off the last column of a line (the left edge of the screen), COUT will move the cursor to the first postion on the next line. If the cursor passes the last position of the last line, the COUT scrolls up one line and put the cursor to the first column of the new blank line.

When COUT receives a carriage return character, it will move the cursor to the first location on the next line.

5.1.1 Stop-List Feature

When your program or language sends a carriage return code to COUT, it will examine the keyboard. If you press the CONTROL S key, COUT will stop functioning until you press CONTROL Q. This feature is useful when you list the instructions (statements) of your program. By pressing CONTROL S, the listing of a program will suspend. CONTROL Q will continue the listing of a program.

Anytime pressing the RESET key will suspend the listing or execution of a program.

A backspace character causes COUT to move the invisible cursor one space to the right. If the cursor is at the first position of a line, it remains there even a backspace character was sent to COUT.

The BELL character (CONTROL G) does not cause the COUT to change the display on the screen. However, it causes the MPF-II to generate a tone, whose frequency is 100Hz and lasts for one tenth of a second.

5.1.2 Adjusting the text window of the screen

In our discussions of the motions of the output cursor, the words "right", "left", "top", "bottom" are used to describe the physical movements of the sursor on a standard screen 40-column wide and 24-character high. you don't want a full screen which can display 960 characters, you can change the screen display size with the method discussed later. The segregated portion of a screen, whose size is smaller than a full-size screen and which is used for text display, is called a "window". Four memory locations are used to tell COUT the four values that decide the size and position of text window. After the four values are stored in the four memory locations, COUT will display output characters and move the cursor within the window. special memory locations are:

- Location 32 (20H) is assigned to hold the column position of the leftmost column of the window. If the value of this position has never been changed, the default value is normally 0. The value of this location should never be more than 39 (27H).
- 2) Location 33 (21H) is assigned to hold the column position of the rightmost column of the window. If the value of this position has never been changed, the initial value is normally 40. When setting the value of this location, be sure that the sum of the two values stored in location 33 and 32 should never exceed 40. In case the sum of the two values exceeds 40, your program and data may be seriously damaged.
- 3) Location 34 (22H) holds the number of the top line of the window. The value of this location is normally 0.
- 4) Location 35 (23H) holds the number of the lines of the desired text window plus one, 24 (16H). The value contained in location 35 can never exceed 24.

Table 5-	-1 : T	ext win	dow Special Lo	ocations
Function:	Location: Decimal Hex		Minimum/Norma Decimal	al/Maximum Value Hex
Left Edge	32	\$ 20	0/0/39	\$0/\$0/\$17
Width:	33	\$ 21	0/40/40	\$ 0/\$ 28/\$ 28
Top Edge	34	\$ 22	0/0/24	\$ 0/\$ 0/\$ 18
Bottom Edge	35	\$ 23	0/24/24	\$0/\$18/\$18

5.1.3 Setting display mode: Normal or Inverse

When COUT outputs a character, how will the character be displayed? In normal or inverse? This requires you to look into the contents of the location 50 (32H). If the value of location 50 is 00 (00H), COUT will displays characters in normal mode. If the value of location 50 is 127 (7FH), the output character will appear in inverse mode. In addition to the two values mentioned above, other values may cause COUT to malfunction.

Table 5-2 Control Values for Inverse/Normal Mode

Value Hex	Decimal	Effect
ØØ	ØØН	Display characters in normal mode
127	7FH	Display characters in inverse mode

Everytime a character is to be displayed, a logical "AND" operation is performed between the bits contained in location 50 and the outgoing character code. The results of the AND operation is stored in the screen buffer. Thus, the characters to be displayed in inverse mode have character codes range from 0 to 127.

5 · 2 Standard Input

Two subroutines are dedicated to perform the standard input. They are:

- * RDKEY (read key): Read a key press from keyboard.
- * GETLN (get a line): Get one input line of keystrokes.

5.2.1 RDKEY

The major task of RDKEY is to wait for a key press and report the key code of the pressed key to the program which calls the RDKEY. While RDKEY does this, it also performs two other tasks.

1) Prompting Input: Once RDKEY is called, it first displays the invisible output cursor on the screen. accomplishes two things: It reminds the user that the MPF-II is waiting for input. . And it indicates to the user where the input information is to be placed on the screen. Usually, the input prompt cursor follows a phrace or a word telling the user what information is now being requested. Since the input cursor is a representation of whatever it was at the position of the invisible output cursor, and the position is usually occupied by a blank space, the input cursor usually appears as a blank square.

When the user presses a key, RDKEY returns the key code to the program that called it and removes the input cursor. Note that the output cursor represents a position on the screen, but the input cursor is a blank character on the screen. They are usually at the same position and rarely separated from each other, but when the input cursor disappear, the output cursor is still there.

2) Random Number Generating:
While RDKEY waits for the user to press a key, it continually adds 1 to the values of a pair of locations in memory. After a key is pressed, the sum of the values in the two memory locations is set to a number within the range of from Ø to 65,535. The exact sum of the two values is quite unpredictable. Many programs and programming languages use this number as the base of a random number generator. The two memory locations involved are 4EH (78) and 4FH (79).

5.2.2 GETLN

GETLN is the subroutine used to request an input line from the keyboard. After the subroutine gets one line, it returns to the program which called it.

Every time GETLN is called, it first prints a prompt (prompting character). The promptinc character tells you which program has called GETLN, prompting you to enter a line. If it is the monitor, an "@" will appear as a prompt. If it is MPF-II BASIC, the prompt ">" will appear.

From the user's point of view, the MPF-II simply prints a prompt and a cursor. As you type, the characters you type are displayed on the screen and the cursor moves one space to the right each time you stroke a key until you press the carriage return key. After the carriage return key is pressed, GETLN will send the whole input line to your program or the language you are using.

The sequence of actions is: After a prompt appears, GETLN calls RDKEY, which then displays an input cursor. Every time RDKEY returns a key code, GETLN stores the key code in the input buffer and places the corresponding character on where the input cursor was on the screen. The GETLN keeps calling RDKEY until a carriage return key is entered. When GETLN receives a carriage return code, it places this code at the end of the input buffer, clears the remainder of the screen line the input cursor was on, and sends a carriage return code to COUT. GETLN then returns to the program which calls it.

You can press CONTROL X to cancel an entire line, while typing an input line. GETLN will erase the whole line, print a backslash "\", jump to a new line, and print a prompt, enabling you to type in a new input line.

GETLN can receive an input line of up to 255 characters. If your input line exceeds this limit, it will cancel the entire line, and you must retype the line. Thus, GETLN will generate a sound as you proceed to the 249th character.

GETLN allows you to revise and edit the line you are typing so you can make corrections. Listed below is the editing features of GETLN, using the two arrow keys: \leftarrow , \rightarrow .

- Backspace (←): Pressing backspace key once causes GETLN to erase the one character to the left of the input cursor and send a backspace character to COUT in order to let the input cursor return to the position where a character was erased. If the number of backspace characters sent to COUT is more than the number of characters you have typed, GETLN will erase the entire line.
- 2) The backspace key can only be used to change the characters on the same input line. In other words, we can not move the cursor to a previous line to make corrections.
- 3) Retype (→) key: We have mentioned that the backspace key can be used to backspace to a previous position on an input line to modify a character. After you moved back the cursor and made corrections, you may wish to move the cursor leftward to continue typing an input line. In some cases, you may want to skip over several characters of an input line without erasing the characters already typed there. Then retype key is used. Every time the retype key is pressed, the cursor will move one space to the right.

There are two other keys with arrowhead—the line feed key and the up—arrow key. The two keys are designed for playing games. So they do not have editing functions. In other words, you can not move the cusor with the updown arrow keys to change the characters on an input line.

- 4) Line feed character : This character causes COUT to move the input cursor one line down, but does not move the cursor horizontally. In case the cursor is on the bottom line on the screen, the screen will scroll up one line.
- .5) The \(\bar{\text{ key:}} \) this key causes the cursor to move up one line, but does not move the cursor horizontally. When the cursor is on the top line on the screen, pressing the \(^{\text{key}}\) key will not change the screen.

5 · 3 Internal I/O

The input/output functions of MPF-II's main board are controlled by 128 locations in the memory map, extending from C000H up to C07FH (49152 to 49279 or - 16384 to -16257 in decimal). The 128 locations are divided into four types: data output, data input, soft switch, and toggle switch.

5.3.1 Data output

The on-board data output has two functions: an 8-bit data is sent via the data bus to

the printer for producing hard copies,

2) the keyboard for keyboard scanning. (Please refer to Appendix C the schematic for keyboard scanning).

5.3.2 Data input

The 8-bit data input to the MPF-II's mainboard is used as:

 Bit Ø through bit 5 reflect the the current keyboard state. Each time the keyboard is being read, the results are stored in the six bits.

2) Bit 6 reflects the state of the printer.

3) Bit 7 is used to transfer the data input from tape.

5.3.3 Toggle switches

Two strobe outputs are connected to two-state flip-flops. Each time the two locations cooresponding to the strobe are read, the flip-flop will toggle to its other state. The toggle switches are used to drive cassette output and an internal speaker. Because they have only two states, your program can only read from their cooresponding switches, and not write to them. The following example is to cause the speaker to beep continually. First we will enter the monitor program

Then you are required to key in the following program:

38 48 E9 01 DO FC 68 E9 01 DO F6 60 FF

DBOOL

0800-	20 0	5 08	JSR	\$0806
0803-	4C 00	08	JMP	\$0800
0806-	A9 40	0	LDA	#\$40
0808-	20 19	7 08	JSR	\$0819
080B-	AO CO)	LDY	#\$C0
OBOD-	A9 00	2	LDA	#SOC
OBOF-	20 19	7 08	JSR	\$0819
0812-	AD 30	03 0	LDA	\$C030
0815-	88		DEY	•
0816-	DO F	5	BNE	\$0BOD
0818-	60		RTS	
0819-	38		SEC	
081A-	48		PHA	
081B-	E9 0:	1	SBC	#\$01
081D-	DO FO	2	BNE	\$081B
081F-	68		PLA	
0820-	E9 01	ı	SBC	#\$01
0822-	DO F	5	BNE	\$081A
0824-	60		RTS	
0825-	FF	•	???	
98006				

To stop beeping, you can press the RESET key.

5.3.4 Soft switches

Soft switches are two-position switches. Each side of a soft switch is controlled by a memory location. If you reference the location for one side of a switch, the switch will be set according to the referenced location. If the location for the other side of the switch is referenced, the switch will be set according to the other referenced location. Since the switch is set irrelevant to its former setting, and there is no way to determine the state of a soft switch, you can either read or write the related memory locations to control the soft switches. Table 5-3 is a summary of I/O locations:

FUNCTION	ADDRESSS	(Read/Write)
DATA OUTPUT	C000	w
DATA INPUT	C010 .	: R
TAPE OUT	C020	R
SPEAKER	C030	R
B / W	C051	R W
COLOR	C050	R W
DRINTED CTROPE	C059 HIGH	R W
PRINTER STROBE	C058 LOW	R W
DIEDIAN DACE	C054 (PRI-	R W
DISPLAY PAGE	C055 (SECON -DARY)	R W
DAM (DOW SELECT	C05A (ROM)	R W
RAM/ROM SELECT	C05B (RAM)	R W
CONTROL (FOR	COSE LOW	R W
KEYBOARD USE)	COSF HIGH	R W

Table 5-3 Input/output Locations

A summary of Table 5-3:

DATA OUTPUT: When you output 8-bit data to the printer or for keyboard scanning, you have to write a value to the location C000H. The value you write to the location is irrelevant, because it is the referencing the address that works.

DATA INPUT: You have to read a value from the location C010H in case you intend to inform the 6502 CPU: a) the results stored in bit 0 through bit 6--the state of the keyboard, b) if the printer is busy, c) the data input from tape.

TAPE OUT: Read a value from location C020H in case you want to output data to tape.

SPEAKER: Read a value from location C030H if you want to generate a tone using the internal speaker.

B/W: Read or write to the location CØ51H for a black and white video display.

COLOR: Read or write to the location C050H for a color diplay.

PRINTER STROBE: Read or write to the locations CØ58H, CØ59H, CØ58H consecutively to create a strobe pulse. You can also read or write to the locations in the order CØ59H, CØ58H, CØ59H, depending on the pulse you intend to create.

DISPLAY PAGE: Read or write to the two locations controlling the two screen pages for selecting a specific screen page.

ROM/RAM SELECT: Read or write to the location C05BH will set the memory range C100H through FFFFH as a RAM area. Reference the location C05AH will make this memory range a ROM area.

CONTROL: Read the CONTROL keys on the keyboard.

Example 1: Change the video display from black and white to color.

After turning on the MPF-II, you can read from the location C050H to change the video display from black and white to color.

Example 2: Use two screen pages--primary page and secondary page--to produce alternating screen display.

The I/O location for page 1 or primary page is C054H. After the MPF-II is turned on, the primary page is used for screen display. The memory range used for page 1 is from location 2000H and extends up to 3FFFH, totaling 8K bytes.

The secondary page's I/O location is C055H. It occupies the memory range starting from location A000H up to location BFFFH, totaling 8K bytes. Page 2 is extremely useful for displaying information instantly. You can program the MPF-II to draw cartoon. You can draw a picture on one of the two pages, and another picture on another page. By displaying the picture on one page and then displaying the picture on another page, you can achieve the cartoon effect. Note if your MPF-II only has a RAM of 16K bytes, the primary page is identical to the secondary page.

Example 3: Send a printer strobe.

When information is to be sent to a printer, you must first check whether the printer is busy or not. If the printer is not busy, you can produce a pulse by first reading the location CØ59H (high), and then the location CØ58H (low) and location CØ59H (high). If a pulse is to be sent, you should read the locations in the order of CØ58H, CØ59H, CØ58H.

Example 4: Select ROM or RAM.

The memory range from Cl00H to FFFFH is occupied by the monitor and the BASIC Interpreter. To change this memory range to RAM (you can only do this on MPF-II with 64K byte RAM.), you can read the location C05BH.

5 · 4 Peripheral Connector

At the upper left edge of the MPF-II, there is a 50-pin connector used for interfacing with ROM cartridges or other peripheral devices. The pin-out of the edge connector is illustrated in Fig. 5-1

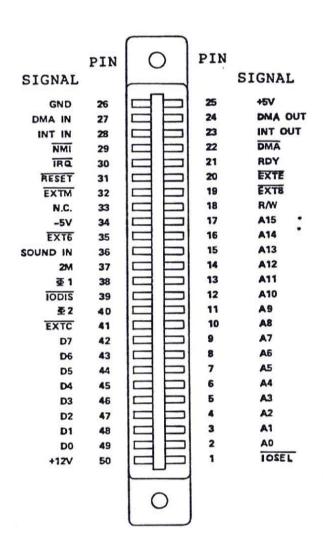


Fig. 5-1 Pin-out of MPF-II Peripheral Connector

Table 5-1 Description of Peripheral Connector Pin-out

	150g=150" = 1.50	
Pin number		Description
1	IOSEL (OUTPUT)	This pin is normally high. When the microprocessor accesses the memory range from location C000H to C0FFH, this line will become low. This line is active only during \$\overline{\Phi}\$1.
2-17	AØ - A15 (OUTPUT)	Pin AØ to A15 are buffered address bus. These lines are valid only during $\underline{\Phi}$ 1 and remain valid through $\underline{\Phi}$ 0.
18	R∕₩ (OUTPUT)	Buffered Read/Write signal. This line is valid only when the address bus is valid. The pin goes high during a read cycle, and is low during a write cycle.
19	EXT8	When the microprocessor references the memory location starting from 8000H to 9FFFH, this line becomes low. The signal is active during \$\overline{\Phi}\$0.
20	EXTE (OUTPUT)	This line becomes low when the CPU references the memory range from E000H to FFFFH. The signal is active during $\Phi \Phi$.
21	RDY (INPUT)	6502's RDT input. Pulling this line low during \$\overline{\rho}\$1 will halt the 6502 with the address bus holding the address of the location currently being accessed.
22	DMA (INPUT)	Pulling this line low will halt the CPU and disable the CPU's address bus. This line is normally held high by a 1K ohm resistor connected to +5V.
23	INT OUT (OUTPUT)	Daisy-chained interrupt output to lower priority devices.
24	DMA OUT (OUTPUT)	DMA output to lower priority devices.

- -		+5 v	+5V power supply. 2A current is available to all devices.
Ì	26	GND	System electrical ground.
	27	DMA IN	Daisy-chained DMA input line (connected to higher priority DMA OUT line.
	28	INT IN (INPUT)	Daisy-chained interrupt input from higher priority INT OUT line.
	29	NMI (INPUT)	Non-maskable interrupt request.
	3Ø	IRQ(INPUT)	Interrupt request. When this line is pulled low, MPF-II begins an interrupt cycle only when the 6502's I flag (interrupt disable) is 0.
	31	RESET (INPUT)	When this line is pulled low, MPF- II starts a RESET cycle.
ı	32	EXTM (INPUT)	When a user accesses the external memory through EXTE, EXTC, EXT8, EXT6, the signal is also connected to EXTM. When EXTM is pulled low, the memory on the MPF-II main board will not be accessed. Instead, the external memory will be accessed. EXTM is normally connected to +5V through a 1K ohm resister.
1	33	N.C.	
	34	-5v	-5V power supply. The current supplied should be no more than 80mA.
•	35	EXT6 (OUTPUT)	When the CPU accesses the memory range beginning from 6000H to 7FFFH, this line becomes low. It is active during $\underline{\sigma}0$.
	36	SOUND IN (INPUT)	Audio signal input. Enable the audio signal from MPF-II to be output from speaker or TV speaker. The peak value should be less than 5V.

37	2M (OUTPUT)	OW:- + / / " - · · · · · · · · · · · · · · · · · ·
37	ZM (OUTPUT)	2MHz timing clock pulse output.
38	1 (OUTPUT)	6502's phase one clock pulse output.
39	IODIS (INPUT)	This line, when pulled low, disables all internal I/O address decoding.
4Ø 41	₹2(OUTPUT) EXTC (OUTPUT)	When the CPU accesses the memory range starting from Cl00H to DFFFH, this line becomes low. This line is active during \$\overline{\pi}0\$.
42- 49	DØ - D7 (INPUT/OUTPUT)	Buffered data bus.
50	+12V	+12V power supply. This line supplies up to 125mA for peripheral devices.

Note: The word "OUTPUT" in the above table means that the signal on that pin goes out from the MPF-II, and the word "INPUT" indicates that the signal on that pin is destined for the MPF-II.

APPENDIX A

6502 INSTRUCTION SET

6502 MICROPROCESSOR INSTRUCTIONS


ADC	Add Memory to Accumulator with	LDA	Load Accumulator with Memory
	Carry	LDX	Load Index X with Memory
AND	"AND" Memory with Accumulator	LDY	Load Index Y with Memory
ASL	Shift Left One Bit (Memory or	LSR	Shift Right one Bit (Memory or
	Accumulator)		Accumulator)
BCC	Branch on Carry Clear	NOP	No Operation
BCS	Branch on Carry Set	ORA	"OR" Memory with Accumulator
BEQ	Branch on Result Zero	PHA	Push Accumulator on Stack
BIT	Test Bits in Memory with	PHP	Push Processor Status on Stack
	Accumulator	PLA	Pull Accumulator from Stack
BMI	Branch on Result Minus	PLP	Pull Processor Status from Stack
BNE	Branch on Result not Zero	ROL	Rotate One Bit Left (Memory or
BPL	Branch on Result Plus		Accumulator)
BRK	Force Break	ROR	Rotate One Bit Right (Memory or
BVC	Branch on Overflow Clear		Accumulator)
BVS	Branch on Overflow Set	RTI	Return from Interrupt
CLC	Clear Carry Flag	RTS	Return from Subroutine
CLD	Clear Decimal Mode	SBC	Subtract Memory from Accumulator
CLI	Clear Interrupt Disable Bit		with Borrow
CLV	Clear Overflow Flag	SEC	Set Carry Flag
CMP	Compare Memory and Accumulator	SED	Set Decimal Mode
CPX,	Compare Memory and Index X	SEI	Set Interrupt Disable Status
CPY	Compare Memory and Index Y	STA	Store Accumulator in Memory
DEC	Decrement Memory by One	STX	Store Index X in Memory
DEX	Decrement Index X by One	STY	Store Index Y in Memory
DEY	Decrement Index Y by One	TAX	Transfer Accumulator to Index X
EOR	"Exclusive-Or" Memory with	TAY	Transfer Accumulator to Index Y
	Accumulator	TSX	Transfer Stack Pointer to Index X
INC	Increment Memory by One	TXA	Transfer Index X to Accumulator
INX	Increment Index X by One	TXS	Transfer Index X to Stack Pointer
INY	Increment Index Y by One	TYA	Transfer Index Y to Accumulator
JMP	Jump to New Location		
JSR	Jump to New Location Saving		


Return Address

THE FOLLOWING NOTATION APPLIES TO THIS SUMMARY:

Α	Accumulator	FIGURE 1 ASL-SHIFT LEFT ONE BIT OPERATION
X, Y	Index Registers	
M C	Memory	C 7 6 5 4 3 2 1 0 0
P	Borrow	
S _.	Processor Status Register	
٥,	Stack Pointer	FIGURE 2 ROTATE ONE BIT LEFT (MEMORY
~	Change	OR ACCUMULATOR)
_	No Change	MORA
+	Add	
Λ	Logical AND	└┤ 7 6 5 4 3 2 1 0
-	Subtract	
*	Logical Exclusive Or	FIGURE 3
Ť	Transfer From Stack	
1	Transfer To Stack	•
→	Transfer To	$C \rightarrow 7 \mid 6 \mid 5 \mid 4 \mid 3 \mid 2 \mid 1 \mid 0 \mid$
+	Transfer To	
V	Logical OR	
PC	Program Counter	
PCH	Program Counter High	NOTE 1 BIT - TEST BITS
PCL	Program Counter Low	
OPER	Operand	Bit 6 and 7 are transferred to the status register If the
#	Immediate Addressing Mode	result of A \wedge M is zero then Z = 1, otherwise Z = 0

PROGRAMMING MODEL

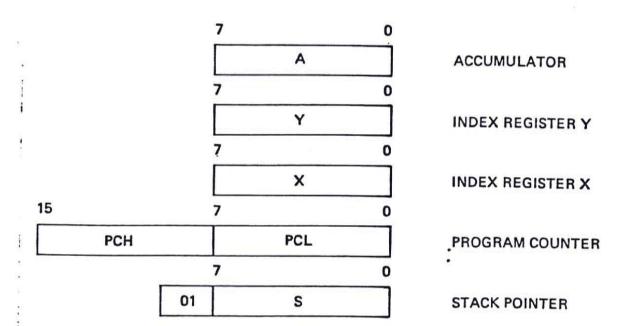

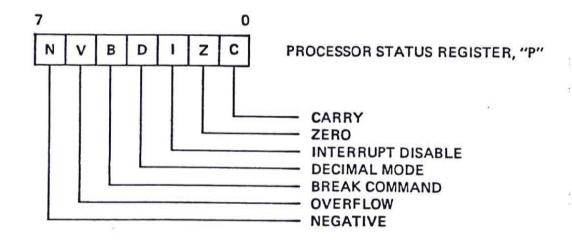

INSTRUCTION CODES

Name Description	Operation	Addressing Mode	Assembly Language Form	HEX OP Code	No. Bytes	"P" Status Reg. N Z C I D V
ADC Add memory to accumulator with carry	A-M-C → A.C	Immediate Zero Page Zero Page, X Absolute Absolute, X Absolute, Y (Indirect, X) (Indirect), Y	ADC #Oper ADC Oper, X ADC Oper, X ADC Oper, X ADC Oper, X ADC (Oper, X) ADC (Oper), Y	69 65 75 6D 7D 79 61 71	2 2 2 3 3 3 2 2 2	₩
AND "AND" memory with accumulator	A∧M→A	Immediate Zero Page Zero Page, X Absolute Absolute, X Absolute, Y (Indirect, X) (Indirect); Y	AND #Oper AND Oper AND Oper, X AND Oper AND Oper, X AND Oper, Y AND (Oper, X) AND (Oper), Y	29 25 35 2D 3D 39 21 31	2 2 2 3 3 3 2 2	. W ——
ASL Shift left one bit (Memory or Accumulator)	(See Figure 1)	Accumulator Zero Page Zero Page, X Absolute Absolute, X	ASL A ASL Oper ASL Oper, X ASL Oper ASL Oper	OA 06 16 OE IE	1 2 2 3 3	₩
BCC Branch on carry clear	Branch on C=0	Relative	BCC Oper	90	2	
BCS Branch on carry set	Branch on C=1	Relative	BCS Oper	во	2	
BEQ Branch on result zero	Branch on Z=1	Relative	BEQ Oper	FO	2	
BIT Test bits in memory with accumulator	A ∧ M. M ₇ → N. M ₆ → V	Zero Page Absolute	BIT* Oper BIT* Oper	24 2C	2 3	M ₇ √M ₆
BMI Branch on result minus	Branch on N=1	Relative	BMI Oper	30	2	
BNE Branch on result not zero	Branch on Z=0	Relative	BNE Oper	D0	2	
BPL Branch on result plus	Branch on N=0	Relative	BPL Oper	10		
BRK Force Break	Forced Interrupt PC+2 J P J	Implied .	BRK*	00	1	——1—
BVC Branch on overflow crear	Branch on V=0	Relative	BVC Oper	50	2	

Aptel Bit C and 7 are transferred to the status register if the result of AVM is zero then Z=1 otherwise Z=0 foute2. A BHK command cannot be masked by setting

Name Description	Operation	Addressing Mode	Assembly Language Form	HEX OP Code	No. Bytes	"P" Status Reg. NZCIDV
BVS Branch on overflow set	Branch on V=1	Relative	BVS Oper	70	2	
CLC Clear carry flag	0 → C	Implied	CLC	18	1	o_
CLD Clear decimal mode	0 → D	Implied	CLD	D8	1	-0
CLI	0 → 1	Implied	CLI	58	1	0
CLV Clear overflow flag	0 → V	Implied	CLV	B8	1	0
CMP Compare memory and accumulator	A – M	Immediate Zero Page Zero Page, X Absolute Absolute, X Absolute, Y (Indirect, X) (Indirect), Y	CMP #Oper CMP Oper, X CMP Oper, X CMP Oper, X CMP Oper, X CMP (Oper, X) CMP (Oper), Y		2 2 2 3 3 2 2	
CPX Compare memory and index X	x – M	Immediate Zero Page Absolute	CPX #Oper CPX Oper CPX Oper	E0 E4 EC	2 2 3	₩
CPY Compare memory and index Y	Y – M	Immediate Zero Page Absolute	CPY #Oper CPY Oper CPY Oper	80 84 80 80	2 2 3	₩—
DEC Decrement memory by one	M — 1 → M	Zero Page Zero Page, X Absolute Absolute, X	DEC Oper DEC Oper, X DEC Oper DEC Oper, X	C6 D6 CE DE	2 2 3 3	₩
DEX Decrement index X by one	X – 1 → X	Implied	DEX	CA	1	₩
DEY Decrement index Y by one	Y – 1 → Y	Implied	DEY	88	1	w

Name Description	Operation	Addressing Mode	Assembly Language Form	HEX OP Code	No. Bytes	"P" Status Reg. NZCIDV
EDR "Exclusive-Or" memory with accumulator	AVM→A	immediate Zero Page Zero Page, X Absolute Absolute, X Absolute, Y (Indirect, X) (Indirect), Y	EOR #Oper EOR Oper, X EOR Oper, X EOR Oper, X EOR Oper, Y EOR (Oper, X) EOR (Oper), Y	49 45 55 4D 5D 59 41 51	2 2 2 3 3 2 2 2	W ——
INC Increment memory by one	M + 1 → M	Zero Page Zero Page, X Absolute Absolute, X	INC Oper INC Oper, X INC Oper INC Oper, X	E6 F6 EE FE	2 2 3 3	<i>~</i>
INX Increment index X by one	X + 1 → X	Implied	inx :	E8	1	<i>w</i>
INY Increment index Y by one	Y+1→Y	Implied	INY	C8	1	₩
JMP Jump to new location	(PC+1) → PCL (PC+2).→ PCH	Absolute Indirect	JMP Oper JMP (Oper)	4C 6C	3	
JSR Jump to new location saving return address	PC+2↓ (PC+1) → PCL (PC+2) → PCH	Absolute	JSR Oper	20	3	2
LDA Load accumulator with memory	M → A	Immediate Zero Page Zero Page, X Absolute Absolute, X Absolute, Y (Indirect, X) (Indirect), Y	LDA Oper LDA Oper, X LDA Oper, Y	AD BD	2 2 2 3 3 2 2 2	₩
LDX Load index X with memory	M → X	Immediate Zero Page Zero Page, Y Absolute Absolute, Y	LDX #Oper LDX Oper LDX Oper, Y LDX Oper LDX Oper, Y	AE	2 2 2 3 3	w
LDY Load index Y with memory	M → Y	Immediate Zero Page Zero Page, X Absolute Absolute, X	LDY #Oper LDY Oper LDY Oper, X LDY Oper LDY Oper, X	AC	2 2 2 3 3	W

Name Description	Operation	Addressing Mode	Assembly Language Form	OP Code	No. Bytes	"P" Status Reg. N Z C I D V
LSR Shift right one bit (memory or accu- mulator)	(See Figure 1)	Accumulator Zero Page Zero Page, X Absolute Absolute, X	LSR Oper	4A 46 56 4E 5E	1 2 2 3 3	ο₩
NOP No operation	No Operation	Implied	NOP .	EA	1	
ORA "OR" memory with accumulator	AVM→A	Immediate Zero Page Zero Page, X Absolute Absolute, X Absolute, Y (Indirect, X) (Indirect), Y	ORA Oper, X ORA Oper, Y	09 05 15 0D 1D 19 01	2 2 2 3 3 2 2 2	₩
PHA Push accumulator on stack	A‡	Implied	РНА	48	1	
PHP Push processor status on stack	P ↓	Implied	PHP	08	1	
PLA Pull accumulator from stack	AŤ	Implied	PLA	68	1	w
PLP Pull processor status from stack	Ρ↑	Implied	PLP	28	1	From Stack
ROL Rotate one bit left (memory or accu- mulator)	(See Figure 2)	Accumulator Zero Page Zero Page, X Absolute Absolute, X	ROL Oper	2A 26 36 2E 3E	1 2 2 3 3	w
ROR Rotate one bit right (memory or accu- mulator)	(See Figure 3)	Accumulator Zero Page Zero Page, X Absolute Absolute, X	ROR Oper	6A 66 76 6E 7E	1 2 2 3 3	₩

Name Description	Operation	Addressing Mode	Assembly Language Form	HEX OP Code	No. Bytes	"P" Status Reg. NZCIDV
RTI Return from interrupt	P†PC†	Implied	RTI	40	1	From Stack
RTS Return from subroutine	PC 1. PC+1 → PC	Implied	RTS	60	1	
SBC Subtract memory from accumulator with borrow	A-M-C→A	Immediate Zero Page Zero Page, X Absolute Absolute, X Absolute, Y (Indirect, X) (Indirect), Y	SBC #Oper SBC Oper, X SBC Oper, X SBC Oper, X SBC Oper, X SBC (Oper, X) SBC (Oper, X)	ED FD	2 2 2 3 3 2 2	₩
SEC Set carry flag	1 → C	Implied	SEC :	38	1	—1— <u> </u>
SED . Set decimal mode	1 → D	Implied	SED .	F8	1	1-
SEI Set interrupt disable status	1 + 1	Implied	SEI	78	1	1
STA . Store accumulator in memory	A → M	Zero Page Zero Page, X Absolute Absolute, X Absolute, Y (Indirect, X) (Indirect), Y			2 2 3 3 3 2 2	
STX Store index X in memory	x → M	Zero Page Zero Page, Y Absolute	STX Oper STX Oper, Y STX Oper	86 96 8E	2 2 3	
STY Store index Y in memory	Y - M	Zero Page Zero Page, X Absolute	STY Oper STY Oper, X STY Oper	84 94 8C	2 2 3	
TAX Transfer accumulator to index X	A-X	Implied	TAX	AA	1	w
TAY Transfer accumulator to index Y	A - Y	Implied	TAY	A8	1	w
TSX Transfer stack pointer to index X	s-x	Implied	TSX	ВА	1	w

Name Description	Operation	Addressing Mode	Assembly Language Form	HEX OP Code	No. Bytes	"P" Status Reg. NZCIDV
TXA Transfer index X to accumulator	X+A	Implied	TXA	8A	1	. ~~
TXS Transfer index X to stack pointer	x → s	Implied	TXS	9A	1	(
TYA Transfer index Y to accumulator	Y → A	Implied	TYA	98	1	w

HEX OPERATION CODES

00	– BRK	2F - NO	•		5E - LSR - Absolute, X
01	- ORA- (Indirect, X)	30 - BMI			
	- NOP				5F — NOP
			D- (Indirect), Y		60 - RTS
	- NOP	32 - NO	•		61 - ADC- (Indirect, X)
04	- NOP	33 - NOI	•		62 - NOP
05	- ORA- Zero Page	34 - NO			
	- ASL - Zero Page				63 — NOP
	[[[[[[[[[[[[[[[[[[[D— Zero Page, X		64 — NOP
	- NOP		L - Zero Page, X		65 — ADC— Zero Page
08	— PHP	37 - NO	•		66 - ROR- Zero Page
09	 ORA— Immediate 	38 - SEC			67 - NOP
0A	- ASL - Accumulator		D- Absolute, Y		
	- NOP				68 - PLA
		3A - NOF			69 - ADC- Immediate
	- NOP	3B - NO	•		6A - ROR- Accumulator
0 D	- ORA- Absolute	3C - NO	•		6B - NOP
0E	 ASL — Absolute 	3D - ANI	D- Absolute, X		6C - JMP - Indirect
	- NOP		- Absolute, X	2	
	- BPL			•	6D - ADC- Absolute
		3F - NOF			6E - ROR- Absolute
	ORA— (Indirect), Y	40 - RTI			6F - NOP
12	- NOP	41 - EOF	R- (Indirect, X)		70 - BVS
13	- NOP	42 - NOF			
	- NOP	43 - NOF			71 - ADC- (Indirect), Y
					72 — NOP
	- ORA- Zero Page, X	44 - NOF			73 — NOP
	ASL — Zero Page, X	45 — EOF	R — Zero Page		74 - NOP
17	- NOP	46 - LSR	- Zero Page		75 - ADC- Zero Page, X
18	- CLC	47 - NOF			
	- ORA- Absolute, Y	48 - PHA			76 - ROR- Zero Page, X
					77 — NOP
	- NOP		R — Zero Page		78 – SEI
	- NOP		- Accumulator		79 - ADC- Absolute, Y
1C	- NOP	4B - NOF	•		7A - NOP
1D	 ORA— Absolute, X 		- Absolute		7B - NOP
	- ASL - Absolute, X		R – Absolute		
	- NOP				7C — NOP
			 Absolute 		7D - ADC - Absolute, X NOP
	- JSR	4F - NOP	•		7E - ROR- Absolute, X NOP
	AND— (Indirect, X)	50 - BVC			7F — NOP
22	- NOP		- (Indirect), Y		
23	- NOP				80 - NOP
	- BIT - Zero Page	52 - NOP			81 - STA - (Indirect, X)
		53 - NOP			82 - NOP
	- AND- Zero Page	54 - NOP	,		83 - NOP
	- ROL- Zero Page	55 - EOR	- Zero Page, X		84 - STY - Zero Page
27	- NOP		- Zero Page, X		
28	- PLP				85 — STA — Zero Page
	- AND- Immediate	57 - NOP			86 - STX - Zero Page
		58 - CLI			87 - NOP
	- ROL- Accumulator	59 - EOR	- Absolute, Y		88 - DEY
	- NOP	5A - NOP	Car control of the last of the		89 - NOP
2C	 BIT — Absolute 	5B - NOP			
	- AND- Absolute				BA - TXA
	- ROL- Absolute	5C - NOP			8B - NOP
	HOL- Absolute	5D - EOR	 Absolute, X 		8C - STY - Absolute

8E - STX - Absolute B5 - LDA - Zero Page, X DC - NOP 8F - NOP B6 - LDX - Zero Page, Y DD - CMP - Absolute, 90 - BCC B7 - NOP DE - DEC - Absolute, 91 - STA - (Indirect), Y B8 - CLV DF - NOP 92 - NOP B9 - LDA - Absolute, Y E0 - CPX - Immediate 93 - NOP BA - TSX E1 - SBC - (Indirect, Indirect, Indirec		manage and analysis of the same	
8F - NOP B6 - LDX - Zero Page, Y DD - CMP - Absolute, 90 - BCC B7 - NOP DE - DEC - Absolute, 91 - STA - (Indirect), Y B8 - CLV DF - NOP 92 - NOP B9 - LDA - Absolute, Y E0 - CPX - Immediate 93 - NOP BA - TSX E1 - SBC - (Indirect, Indirect,	8D - STA - Absolute	B4 — LDY — Zero Page, X	DB - NOP
8F - NOP B6 - LDX - Zero Page, Y DD - CMP - Absolute, 90 - BCC B7 - NOP DE - DEC - Absolute, 91 - STA - (Indirect), Y B8 - CLV DF - NOP 92 - NOP B9 - LDA - Absolute, Y E0 - CPX - Immediate 93 - NOP BA - TSX E1 - SBC - (Indirect, J 94 - STY - Zero Page, X BB - NOP E2 - NOP 95 - STA - Zero Page, Y BD - LDA - Absolute, X E3 - NOP 96 - STX - Zero Page, Y BD - LDA - Absolute, X E4 - CPX - Zero Page 97 - NOP BE - LDX - Absolute, X E4 - CPX - Zero Page 98 - TYA BF - NOP E6 - INC - Zero Page 99 - STA - Absolute, Y C0 - CPY - Immediate E7 - NOP 90 - STA - Absolute, Y C0 - CPY - Immediate E7 - NOP 90 - STA - Absolute, X C4 - CPY - Zero Page EB - INX 91 - NOP C5 - CMP - Zero Page EB - NOP 92 - NOP C5 - CMP - Zero Page EB - NOP 94 - NOP C5 - CMP - Zero Page ED - SBC - Absolute 95 - NOP C6 - DEC - Zero Page ED - SBC - Absolute 96 - LD		B5 - LDA - Zero Page, X	DC - NOP
90 — BCC 91 — STA — (Indirect), Y 92 — NOP 92 — NOP 93 — NOP 93 — NOP 94 — STY — Zero Page, X 94 — STY — Zero Page, X 95 — STA — Zero Page, X 96 — STX — Zero Page, X 97 — NOP 98 — LDA — Absolute, X 98 — NOP 96 — STA — Zero Page, X 97 — NOP 98 — LDA — Absolute, X 98 — NOP 99 — STA — Zero Page, X 90 — STA — Zero Page, Y 99 — STA — Absolute, Y 99 — STA — Absolute, Y 90 — STA — Absolute, Y 91 — STA — Absolute, Y 92 — NOP 93 — STA — Absolute, Y 94 — TXS 95 — NOP 96 — STA — Absolute, Y 97 — NOP 97 — NOP 98 — NOP 99 — STA — Absolute, Y 99 — STA — Absolute, Y 90 — STA — Absolute, Y 91 — NOP 91 — STA — Absolute, X 92 — NOP 92 — NOP 93 — NOP 94 — NOP 95 — NOP 96 — NOP 97 — NOP 97 — NOP 98 — NOP 99 — STA — Absolute, X 90 — STA — Absolute, X 91 — NOP 95 — STA — Absolute, X 96 — NOP 96 — NOP 97 — NOP 97 — NOP 98 — NOP 99 — STA — Absolute, X 99 — STA — Absolute, X 99 — NOP 90 — STA — Absolute, X 90 — STA — Absolute, X 91 — NOP 91 — STA — Absolute 95 — NOP 96 — NOP 97 — NOP 97 — NOP 98 — NOP 99 — STA — Absolute 10 — NOP 11 — STA — Absolute 11 — SBC — Immediate 12 — NOP 13 — NOP 14 — NOP 15 — NOP 15 — NOP 16 — NOP 17 — NOP 18 — SBC — Absolute 18 — NOP 19 — SBC — Absolute 10 — NOP 11 — CMP — (Indirect), Y 16 — NOP 16 — NOP 17 — NOP 18 — SBC — Absolute 18 — NOP 19 — SBC — Absolute, Y 19 — SBC — Absolute, FE — NOP 19 — SBC — Absolute, FE — NOP 10 — SBC — Absolute, FE — NOP 10 — SBC — Absolute, FE — NOP 11 — CMP — Zero Page, X 10 — SBC — Absolute, FE — NOP 15 — SBC — Absolute, FE — NOP 16 — DEC — Zero Page, X 17 — NOP 17 — NOP 18 — SBC — CLD 18 — SBC — CLD 19 — SBC — Absolute, FE — NOP 19 — CMP — Absolute, Y 19 — SBC — Absolute, FE — NOP 19 — CMP — Absolute, Y 10 — SBC — SBC — Absolute, FE — NOP 17 — NOP 18 — NOP 18 — NOP 18 — NOP 18 — NOP 19 — CMP — Absolute, Y 18 — NOP 19 — CMP — A	1000 To	B6 - LDX - Zero Page, Y	DD - CMP - Absolute, X
91 - STA - (Indirect), Y	90 - BCC	B7 - NOP	
92 — NOP 93 — NOP 94 — STY — Zero Page, X 95 — STA — Zero Page, X 96 — STX — Zero Page, X 97 — NOP 98 — TYA 99 — STA — Absolute, Y 90 — STA — Absolute, Y 91 — NOP 91 — C3 — NOP 92 — NOP 93 — NOP 94 — STA — Absolute, Y 95 — SBC — Zero Page 96 — INC — Zero Page 97 — NOP 98 — TYA 99 — STA — Absolute, Y 99 — STA — Absolute, Y 99 — STA — Absolute, Y 99 — STA — Absolute, X 99 — NOP 90 — C3 — NOP 91 — STA — Absolute, X 91 — NOP 92 — NOP 93 — NOP 94 — STA — Absolute, X 95 — NOP 95 — NOP 96 — NOP 97 — NOP 98 — NOP 99 — STA — Absolute, X 99 — STA — Absolute, X 99 — STA — Absolute, X 90 — STA — Absolute, X 91 — NOP 99 — STA — Absolute, X 90 — STA — Absolute, X 90 — STA — Absolute, X 91 — NOP 90 — STA — Absolute, X 91 — NOP 91 — STA — Absolute, X 92 — NOP 93 — NOP 94 — STA — Absolute 95 — NOP 96 — NOP 97 — NOP 98 — NOP 99 — STA — Absolute 10 — STA — Absolute 10 — STA — Absolute 10 — STA — NOP 11 — STA — NOP 12 — NOP 13 — NOP 14 — NOP 15 — STA — NOP 16 — NOP 17 — NOP 18 — NOP 19 — STA — Absolute 19 — NOP 10 — STA — NOP 10 — STA — NOP 11 — STA — NOP 11 — STA — NOP 12 — NOP 13 — NOP 14 — NOP 15 — STA — NOP 15 — STA — NOP 16 — NOP 17 — NOP 18 — NOP 18 — NOP 19 — STA — NOP 19 — STA — NOP 19 — STA — NOP 10 — STA — NOP 10 — STA — NOP 10 — STA — NOP 11 — STA — NOP 11 — STA — NOP 12 — NOP 13 — NOP 14 — NOP 15 — NOP 16 — NOP 17 — NOP 18 — NOP 18 — NOP 19 — STA — NOP 10 — STA	91 - STA - (Indirect), Y	B8 - CLV	
93 - NOP BA - TSX E1 - SBC - (Indirect, 20) 94 - STY - Zero Page, X BB - NOP E2 - NOP 95 - STA - Zero Page, Y BD - LDA - Absolute, X E3 - NOP 96 - STX - Zero Page, Y BD - LDA - Absolute, X E4 - CPX - Zero Page 97 - NOP BE - LDX - Absolute, Y E5 - SBC - Zero Page 98 - TYA BF - NOP E6 - INC - Zero Page 99 - STA - Absolute, Y C0 - CPY - Immediate E7 - NOP 99 - STA - Absolute, Y C2 - NOP E9 - SBC - Immediate 90 - NOP C3 - NOP E8 - INX 90 - NOP C3 - NOP EA - NOP 90 - STA - Absolute, X C4 - CPY - Zero Page EB - NOP 90 - STA - Absolute, X C4 - CPY - Zero Page EB - NOP 91 - NOP C5 - CMP - Zero Page EB - NOP 92 - NOP C6 - DEC - Zero Page ED - SBC - Absolute 93 - NOP C6 - DEC - Zero Page ED - SBC - Absolute 94 - LDA - Immediate C7 - NOP EE - INC - Absolute 95 - LDA - Zero Page CB - NOP F2 - NOP 94 - LDA - Zero Page <td< td=""><td>92 - NOP</td><td>B9 - LDA - Absolute, Y</td><td></td></td<>	92 - NOP	B9 - LDA - Absolute, Y	
94 - STY - Zero Page, X BB - NOP E2 - NOP 95 - STA - Zero Page, X BC - LDY - Absolute, X E3 - NOP 96 - STX - Zero Page, Y BD - LDA - Absolute, X E4 - CPX - Zero Page 97 - NOP BE - LDX - Absolute, Y E5 - SBC - Zero Page 98 - TYA BF - NOP E6 - INC - Zero Page 99 - STA - Absolute, Y C0 - CPY - Immediate E7 - NOP 9A - TXS C1 - CMP - (Indirect, X) E8 - INX 9B - NOP C2 - NOP E9 - SBC - Immediate 9C - NOP C3 - NOP E9 - SBC - Immediate 9C - NOP C3 - NOP EA - NOP 9D - STA - Absolute, X C4 - CPY - Zero Page EB - NOP 9E - NOP C5 - CMP - Zero Page EB - NOP 9F - NOP C6 - DEC - Zero Page ED - SBC - Absolute A0 - LDY - Immediate C7 - NOP EE - INC - Absolute A1 - LDA - (Indirect, X) C8 - INY EF - NOP A2 - LDX - Immediate C7 - DEC - Absolute F0 - BEQ A3 - NOP CA - DEX F1 - SBC - (Indirect), A4 - LDY - Zero Page CC - CPY -	93 - NOP	마음을 하는 것 같습니다. 그런 그리트 전에 가장 보면 하는 것이 있는 사람들이 되었습니다. 그런 사람들이 가장 사람들이 되었습니다. 그런 사람들이 다른 사람들이 되었습니다. 그런	
95 - STA - Zero Page, X BC - LDY - Absolute, X E3 - NOP 96 - STX - Zero Page, Y BD - LDA - Absolute, X E4 - CPX - Zero Page 97 - NOP BE - LDX - Absolute, Y E5 - SBC - Zero Page 98 - TYA BF - NOP E6 - INC - Zero Page 99 - STA - Absolute, Y C0 - CPY - Immediate E7 - NOP 9A - TXS C1 - CMP - (Indirect, X) E8 - INX 9B - NOP C2 - NOP E9 - SBC - Immediate 9C - NOP C3 - NOP E9 - SBC - Immediate 9C - NOP C3 - NOP E9 - SBC - Immediate 9E - NOP C5 - CMP - Zero Page EB - NOP 9E - NOP C5 - CMP - Zero Page EC - CPX - Absolute 9F - NOP C6 - DEC - Zero Page EC - CPX - Absolute A0 - LDY - Immediate C7 - NOP EE - INC - Absolute A1 - LDA - (Indirect, X) C8 - INY EF - NOP A2 - LDY - Immediate C9 - CMP - Immediate F0 - BEQ A3 - NOP CA - DEX F1 - SBC - (Indirect), A4 - LDY - Zero Page CB - NOP F2 - NOP A5 - LDA - Zero Page CC			
96 - STX - Zero Page, Y BD - LDA - Absolute, X E4 - CPX - Zero Page 97 - NOP BE - LDX - Absolute, Y E5 - SBC - Zero Page 98 - TYA BF - NOP E6 - INC - Zero Page 99 - STA - Absolute, Y C0 - CPY - Immediate E7 - NOP 9A - TXS C1 - CMP - (Indirect, X) E8 - INX 9B - NOP C2 - NOP E9 - SBC - Immediate 9C - NOP C3 - NOP EA - NOP 9D - STA - Absolute, X C4 - CPY - Zero Page EB - NOP 9C - NOP C3 - NOP EA - NOP 9E - NOP C5 - CMP - Zero Page EB - NOP 9F - NOP C6 - DEC - Zero Page ED - SBC - Absolute A0 - LDY - Immediate C7 - NOP EE - INC - Absolute A1 - LDA - (Indirect, X) C8 - INY EF - NOP A2 - LDX - Immediate C9 - CMP - Immediate F0 - BEQ A3 - NOP CA - DEX F1 - SBC - (Indirect), A4 - LDY - Zero Page CC - CPY - Absolute F3 - NOP A6 - LDX - Zero Page CC - CPY - Absolute F3 - NOP A6 - LDX - Zero Page DC - CMP - Absolute			
97 - NOP BE - LDX - Absolute, Y E5 - SBC - Zero Page 98 - TYA BF - NOP E6 - INC - Zero Page 99 - STA - Absolute, Y C0 - CPY - Immediate E7 - NOP 9A - TXS C1 - CMP - (Indirect, X) E8 - INX 9B - NOP C2 - NOP E9 - SBC - Immediate 9C - NOP C3 - NOP E9 - SBC - Immediate 9C - NOP C3 - NOP E8 - NOP 9E - NOP C5 - CMP - Zero Page EB - NOP 9F - NOP C6 - DEC - Zero Page EC - CPX - Absolute 9F - NOP C6 - DEC - Zero Page ED - SBC - Absolute 9F - NOP C6 - DEC - Zero Page ED - SBC - Absolute 9F - NOP C6 - DEC - Zero Page ED - SBC - Absolute 9F - NOP C6 - DEC - Zero Page ED - SBC - Absolute 9F - NOP C8 - INY EF - NOP 9F - NOP C9 - CMP - Immediate F0 - BEQ A3 - NOP CA - DEX F1 - SBC - (Indirect), A4 - LDY - Zero Page CB - NOP F2 - NOP A5 - LDA - Zero Page CC - CPY - Absolute F3 - NOP <t< td=""><td></td><td></td><td></td></t<>			
98 - TYA BF - NCP E6 - INC - Zero Page 99 - STA - Absolute, Y C0 - CPY - Immediate E7 - NOP 9A - TXS C1 - CMP - (Indirect, X) E8 - INX 9B - NOP C2 - NOP E9 - SBC - Immediate 9C - NOP C3 - NOP E9 - SBC - Immediate 9D - STA - Absolute, X C4 - CPY - Zero Page EB - NOP 9E - NOP C5 - CMP - Zero Page EB - NOP 9F - NOP C6 - DEC - Zero Page ED - SBC - Absolute 9F - NOP C6 - DEC - Zero Page ED - SBC - Absolute A0 - LDY - Immediate C7 - NOP EE - INC - Absolute A1 - LDA - (Indirect, X) C8 - INY EF - NOP A2 - LDX - Immediate C9 - CMP - Immediate F0 - BEQ A3 - NOP CA - DEX F1 - SBC - (Indirect), A4 - LDY - Zero Page CC - CPY - Absolute F3 - NOP A5 - LDA - Zero Page CC - CPY - Absolute F3 - NOP A6 - LDX - Zero Page CC - CPY - Absolute F5 - SBC - Zero Page, A8 - TAY CF - NOP F6 - INC - Zero Page, A9 - LDA - Immediate D0		[48] [48] [48] [48] [48] [48] [48] [48]	
99 - STA - Absolute, Y C0 - CPY - Immediate E7 - NOP 9A - TXS C1 - CMP - (Indirect, X) E8 - INX 9B - NOP C2 - NOP E9 - SBC - Immediate 9C - NOP C3 - NOP EA - NOP 9C - NOP C3 - NOP EB - NOP 9E - NOP C5 - CMP - Zero Page EB - NOP 9F - NOP C6 - DEC - Zero Page EC - CPX - Absolute A0 - LDY - Immediate C7 - NOP EE - INC - Absolute A1 - LDA - (Indirect, X) C8 - INY EF - NOP A2 - LDX - Immediate C9 - CMP - Immediate F0 - BEQ A3 - NOP CA - DEX F1 - SBC - (Indirect), A4 - LDY - Zero Page CB - NOP F2 - NOP A5 - LDA - Zero Page CC - CPY - Absolute F3 - NOP A6 - LDX - Zero Page DC - CMP - Absolute F4 - NOP A7 - NOP CE - DEC - Absolute F5 - SBC - Zero Page, A8 - TAY CF - NOP F6 - INC - Zero Page, A9 - LDA - Immediate D0 - BNE F7 - NOP AA - TAX D1 - CMP - (Indirect), F8 - SED		(B. 1) [
9A - TXS C1 - CMP - (Indirect, X) E8 - INX 9B - NOP C2 - NOP E9 - SBC - Immediate 9C - NOP C3 - NOP EA - NOP 9D - STA - Absolute, X C4 - CPY - Zero Page EB - NOP 9E - NOP C5 - CMP - Zero Page EB - NOP 9F - NOP C6 - DEC - Zero Page ED - SBC - Absolute A0 - LDY - Immediate C7 - NOP EE - INC - Absolute A1 - LDA - (Indirect, X) C8 - INY EF - NOP A2 - LDX - Immediate C9 - CMP - Immediate F0 - BEQ A3 - NOP CA - DEX F1 - SBC - (Indirect), A4 - LDY - Zero Page CB - NOP F2 - NOP A5 - LDA - Zero Page CC - CPY - Absolute F3 - NOP A6 - LDX - Zero Page CC - CMP - Absolute F3 - NOP A6 - LDX - Zero Page DC - CMP - Absolute F5 - SBC - Zero Page, A9 - LDA - Immediate DO - BNE F5 - SBC - Zero Page, AA - TAX D1 - CMP - (Indirect), Y F8 - SED AB - NOP D2 - NOP F8 - SED AC - LDY - Absolute D3 - NOP F8 - NOP </td <td></td> <td></td> <td> "다니다면 (Control of the Control o</td>			"다니다면 (Control of the Control o
9B - NOP C2 - NOP E9 - SBC - Immediate 9C - NOP C3 - NOP EA - NOP 9D - STA - Absolute, X C4 - CPY - Zero Page EB - NOP 9E - NOP C5 - CMP - Zero Page EC - CPX - Absolute 9F - NOP C6 - DEC - Zero Page ED - SBC - Absolute A0 - LDY - Immediate C7 - NOP EE - INC - Absolute A1 - LDA - (Indirect, X) C8 - INY EF - NOP A2 - LDX - Immediate C9 - CMP - Immediate F0 - BEQ A3 - NOP CA - DEX F1 - SBC - (Indirect), A4 - LDY - Zero Page CB - NOP F2 - NOP A5 - LDA - Zero Page CC - CPY - Absolute F3 - NOP A6 - LDX - Zero Page DC - CMP - Absolute F4 - NOP A7 - NOP CE - DEC - Absolute F5 - SBC - Zero Page, A8 - TAY CF - NOP F6 - INC - Zero Page, A9 - LDA - Immediate D0 - BNE F7 - NOP AA - TAX D1 - CMP - (Indirect), Y F8 - SED AC - LDY - Absolute D3 - NOP F9 - SBC - Absolute, AF - NOP D4 - NOP F0 - DEC - Zero			
9C - NOP 9D - STA - Absolute, X 9E - NOP 9D - STA - Absolute, X 9E - NOP 9F - NOP 9D - STA - Absolute, X 9C - CPY - Zero Page 9F - NOP 9F - NOP 10 - C6 - DEC - Zero Page 11 - CPX - Absolute 12 - CPX - Absolute 13 - CPX - Absolute 14 - CPX - Absolute 15 - CPX - Absolute 16 - DEC - Zero Page 17 - SEC - CPX - Absolute 18 - NOP 18 - CPX - Absolute 19 - CPX - Absolute 10 - SEC - INC - Absolute 11 - SEC - Indirect) 11 - SEC - Indirect) 12 - NOP 13 - NOP 14 - NOP 15 - SEC - Indirect) 16 - INC - Zero Page 17 - NOP 18 - SED 18 - NOP 19 - SEC - Absolute 19 - NOP 10 - DEC - Zero Page 10 - SEC - CPX - Absolute 10 - SEC - CPX - Absolute 10 - SEC - CPX - Absolute 10 - SEC - INC - Absolute 11 - CPX - NOP 12 - NOP 13 - NOP 15 - CMP - Indirect) 16 - INC - Zero Page 17 - NOP 18 - SEC - Absolute 19 - NOP 10 - SEC - INC - Absolute 10 - SEC - INC - Absolute 10 - SEC - INC - Absolute 11 - CPX - NOP 12 - NOP 13 - NOP 15 - CMP - Zero Page 16 - INC - SEC - Absolute 17 - NOP 18 - NOP 19 - CMP - Absolute 10 - CPX - CPX - Absolute 10 - CPX - CPX - Absolute 10 - SEC - CPX - Absolute 10 - SEC - CPX - Absolute 11 - CPX - NOP 11 - CPX - NOP 12 - NOP 13 - NOP 14 - NOP 15 - CMP - Zero Page 16 - INC - CPX - NOP 16 - INC - CPX - NOP 17 - NOP 18 - NOP 19 - CMP - Absolute 19 - CMP - Absolute 19 - CMP - Absolute 19 - NOP 10 - CMP - Absolute 19 - CMP - Absolute 19 - CMP - CPX -			
9D - STA - Absolute, X 9E - NOP 9E - NOP 9F - NOP A0 - LDY - Immediate A1 - LDA - (Indirect, X) A2 - LDX - Immediate A3 - NOP A5 - LDA - Zero Page A6 - LDX - Zero Page A7 - NOP A8 - TAY A9 - LDA - Immediate AA - TAX AB - NOP AC - LDY - Absolute AD - Abso			
9E - NOP C5 - CMP - Zero Page EC - CPX - Absolute 9F - NOP C6 - DEC - Zero Page ED - SBC - Absolute A0 - LDY - Immediate C7 - NOP EE - INC - Absolute A1 - LDA - (Indirect, X) C8 - INY EF - NOP A2 - LDX - Immediate C9 - CMP - Immediate F0 - BEQ A3 - NOP CA - DEX F1 - SBC - (Indirect), A4 - LDY - Zero Page CB - NOP F2 - NOP A5 - LDA - Zero Page CC - CPY - Absolute F3 - NOP A6 - LDX - Zero Page DC - CMP - Absolute F4 - NOP A7 - NOP CE - DEC - Absolute F5 - SBC - Zero Page, A8 - TAY CF - NOP F6 - INC - Zero Page, A9 - LDA - Immediate D0 - BNE F7 - NOP AA - TAX D1 - CMP - (Indirect), Y F8 - SED AB - NOP D2 - NOP F9 - SBC - Absolute, AC - LDY - Absolute D3 - NOP FA - NOP AC - LDY - Absolute D4 - NOP FB - NOP AB - NOP D5 - CMP - Zero Page, A - NOP B0 - BCS D7 - NOP FD - SBC - Absolute,			
9F - NOP A0 - LDY - Immediate A1 - LDA - (Indirect, X) A2 - LDX - Immediate A3 - NOP A4 - LDY - Zero Page CB - NOP CA - DEX A4 - LDY - Zero Page CB - NOP A5 - LDA - Zero Page CC - CPY - Absolute CF - NOP A6 - LDX - Zero Page CC - CPY - Absolute CF - NOP A7 - NOP A8 - TAY A9 - LDA - Immediate CF - NOP AC - LDY - Absolute AD - Absolute AF - NOP BO - BCS B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP C6 - DEC - Zero Page CC - CPY - Absolute CF - NOP CE - DEC - Absolute AD - Absolute AF - NOP BO - BCS B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP B3 - NOP B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP B4 - NOP B5 - CMP - Absolute, Y B5 - CMP - Absolute, Y B5 - CMP - Absolute, Y B5 - NOP B6 - DEC - Zero Page, X FF - NOP FF			
A0 - LDY - Immediate A1 - LDA - (Indirect, X) A2 - LDX - Immediate C3 - CMP - Immediate C4 - DEX C5 - DEX C6 - DEX C7 - NOP C6 - DEX C7 - NOP C8 - INY C8 - INY C9 - CMP - Immediate C9 - CMP - Absolute C9 - CMP - Immediate C9 - CMP - Absolute C9 - CMP - Immediate C9 - CMP - Absolute C0 - CMP - Absolute C0 - CMP - Absolute C1 - NOP C2 - NOP C3 - NOP C4 - NOP C5 - NOP C6 - INC - Zero Page, C7 - NOP C9 - CMP - (Indirect), Y C9 - CMP - Absolute C1 - NOP C2 - NOP C3 - NOP C4 - NOP C5 - CMP - CMP - CMP C6 - NOP C7 - NOP C8 - NOP C9 - CMP - Absolute C9 - CMP			
A1 - LDA - (Indirect, X) A2 - LDX - Immediate A3 - NOP A4 - LDY - Zero Page A5 - LDA - Zero Page A6 - LDX - Zero Page A7 - NOP A8 - TAY A9 - LDA - Immediate AA - TAX AB - NOP AC - LDY - Absolute AD - Absolute AD - Absolute AF - NOP AE - LDX - Absolute AF - NOP BO - BCS B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP A2 - LDX - Immediate A3 - NOP C4 - LDX - Absolute C5 - NOP C6 - INC - Zero Page C7 - NOP C8 - NOP C9 - CMP - Absolute C9 - CMP - Immediate C9 - CMP - Absolute C9 - CMP - Immediate C9 - CMP - Absolute C9 - CMP - Immediate C9 - CMP - Absolute C9 - CMP - Absolute CA - DEX CA - DOP CA - DEX CA - DOP CA - DEX CA - DEX CA - DE			ED - SBC - Absolute
A2 - LDX - Immediate A3 - NOP A4 - LDY - Zero Page A5 - LDA - Zero Page A6 - LDX - Zero Page A7 - NOP A8 - TAY A9 - LDA - Immediate AA - TAX AB - NOP AC - LDY - Absolute AD - Absolute AD - Absolute AF - NOP AE - LDX - Absolute AF - NOP BO - BCS B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP CA - DEX CB - NOP CC - CPY - Absolute CC		C7 — NOP	EE — INC — Absolute
A3 - NOP A4 - LDY - Zero Page CB - NOP A5 - LDA - Zero Page CC - CPY - Absolute A6 - LDX - Zero Page CC - CPY - Absolute CF - NOP CE - DEC - Absolute CF - NOP A9 - LDA - Immediate AA - TAX AB - NOP AC - LDY - Absolute AD - Absolute AD - Absolute AD - Absolute AF - NOP AF - NOP BO - BCS B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP AS - CMP - Absolute, Y B2 - NOP B3 - NOP AC - LDY - Absolute AD - Absolute AD - Absolute AD - Absolute AF - NOP BC - DEC - Absolute, AB - NOP AC - LDY - Absolute AF - NOP BC - DEC - Zero Page, ACC - NOP ACC - LDA - (Indirect), ACC - CMP - Zero Page, ACC - NOP BC - DEC - Zero Page, ACC - Absolute, ACC - NOP BC - DEC - Zero Page, ACC - Absolute, ACC - NOP BC - DEC - Zero Page, ACC - Absolute, ACC - NOP BC - DEC - Zero Page, ACC - Absolute, ACC - NOP BC -		C8 - INY	EF - NOP
A4 - LDY - Zero Page CB - NOP F2 - NOP A5 - LDA - Zero Page CC - CPY - Absolute F3 - NOP A6 - LDX - Zero Page DC - CMP - Absolute F4 - NOP A7 - NOP CE - DEC - Absolute F5 - SBC - Zero Page, A8 - TAY CF - NOP F6 - INC - Zero Page, A9 - LDA - Immediate DO - BNE F7 - NOP A9 - LDA - Immediate DO - BNE F7 - NOP AC - LDY - Absolute D3 - NOP F9 - SBC - Absolute, AD - Absolute D4 - NOP F9 - SBC - Absolute, AF - NOP D5 - CMP - Zero Page, X FC - NOP BO - BCS D7 - NOP F9 - SBC - Absolute, B1 - LDA - (Indirect), Y D8 - CLD FF - NOP B2 - NOP D9 - CMP - Absolute, Y		C9 - CMP - Immediate	FO - BEQ
A4 - LDY - Zero Page A5 - LDA - Zero Page CC - CPY - Absolute A6 - LDX - Zero Page CC - CPY - Absolute CE - DEC - Absolute F5 - SBC - Zero Page A8 - TAY CF - NOP A9 - LDA - Immediate AA - TAX AB - NOP AC - LDY - Absolute AD - Absolute AD - Absolute AE - LDX - Absolute AF - NOP BO - BCS B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP CB - NOP CC - CMP - Absolute CE - DEC - Absolute F4 - NOP F5 - SBC - Zero Page, F6 - INC - Zero Page, F7 - NOP F6 - INC - Zero Page, F7 - NOP F8 - SED F9 - SBC - Absolute, FA - NOP FB - NOP FB - NOP FB - NOP FF - NOP		CA - DEX	F1 - SBC - (Indirect), Y
A5 - LDA - Zero Page		CB - NOP	
A6 - LDX - Zero Page A7 - NOP A8 - TAY A9 - LDA - Immediate AA - TAX AB - NOP AC - LDY - Absolute AD - Absolute AE - LDX - Absolute AF - NOP BO - BCS B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP A8 - TAY CF - NOP CE - DEC - Absolute CF - NOP CE - DEC - Absolute F5 - SBC - Zero Page, F6 - INC - Zero Page, F7 - NOP F8 - SED F7 - NOP F8 - SED F9 - SBC - Absolute, FA - NOP FB - NOP FB - NOP FB - NOP FF - NOP	A5 — LDA— Zero Page		
A7 - NOP A8 - TAY A9 - LDA - Immediate AA - TAX AB - NOP AC - LDY - Absolute AD - Absolute AE - LDX - Absolute AF - NOP BO - BCS B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP CF - NOP D0 - BNE D0 - BNE D1 - CMP - (Indirect), Y D2 - NOP D3 - NOP D4 - NOP D5 - CMP - Zero Page, X D7 - NOP D6 - DEC - Zero Page, X D7 - NOP D9 - CMP - Absolute, Y F5 - SBC - Zero Page, F7 - NOP F8 - SED F9 - SBC - Absolute, FA - NOP FB - NOP FB - NOP FE - INC - Absolute, FF - NOP FF - NOP	A6 — LDX — Zero Page		
A8 — TAY A9 — LDA — Immediate AA — TAX AB — NOP AC — LDY — Absolute AD — Absolute AE — LDX — Absolute AF — NOP BO — BCS B1 — LDA — (Indirect), Y B2 — NOP AS — NOP AS — NOP B3 — NOP AS	A7 - NOP		
A9 - LDA - Immediate AA - TAX AB - NOP AC - LDY - Absolute AD - Absolute AE - LDX - Absolute AF - NOP BO - BCS B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP AB - NOP BA - DA - Immediate D0 - BNE D1 - CMP - (Indirect), Y D1 - CMP - (Indirect), Y D2 - NOP D2 - NOP D3 - NOP D4 - NOP D5 - CMP - Zero Page, X D7 - NOP D6 - DEC - Zero Page, X D7 - NOP D8 - CLD D9 - CMP - Absolute, Y D8 - CLD FF - NOP FF - NOP FF - NOP	A8 - TAY		그렇고 맞은 이 스러워 얼마나 하다 그 그 그 그 그 그 그 그 그 그 그 그 그 그 그 그 그 그
AA - TAX AB - NOP AC - LDY - Absolute AD - Absolute AE - LDX - Absolute AF - NOP BO - BCS B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP AC - LDY - Absolute AD - CMP - (Indirect), Y D1 - CMP - (Indirect), Y D2 - NOP D3 - NOP D4 - NOP D5 - CMP - Zero Page, X D7 - NOP D6 - DEC - Zero Page, X D7 - NOP D8 - CLD D9 - CMP - Absolute, Y D8 - CLD D9 - CMP - Absolute, Y D8 - CLD FF - NOP FB - SED F9 - SBC - Absolute, FF - NOP FB - NOP FB - NOP FB - NOP FF - NOP FF - NOP	A9 - LDA - Immediate		
AB - NOP AC - LDY - Absolute AD - Absolute AE - LDX - Absolute AF - NOP BO - BCS B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP D2 - NOP D3 - NOP D4 - NOP D5 - CMP - Zero Page, X D6 - DEC - Zero Page, X D7 - NOP D8 - CLD D9 - CMP - Absolute, Y F9 - SBC - Absolute, FA - NOP FB - NOP FB - NOP FB - NOP FB - NOP FF - NOP FF - NOP FF - NOP	AA – TAX		
AC - LDY - Absolute AD - Absolute AE - LDX - Absolute AF - NOP BO - BCS B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP D3 - NOP D4 - NOP D5 - CMP - Zero Page, X D6 - DEC - Zero Page, X D7 - NOP D8 - CLD D8 - CLD D9 - CMP - Absolute, Y FA - NOP FB - NOP FB - NOP FB - NOP FE - INC - Absolute, FF - NOP FF - NOP	AB — NOP		
AD - Absolute AE - LDX - Absolute AF - NOP BO - BCS B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP D4 - NOP D5 - CMP - Zero Page, X D6 - DEC - Zero Page, X D7 - NOP D8 - CLD D8 - CLD D9 - CMP - Absolute, Y FB - NOP FB - NOP FB - NOP FB - NOP FC - NOP FE - INC - Absolute, FF - NOP FF - NOP	AC - LDY - Absolute		[자] 그리 : 10 사람이다.
AF - LDX - Absolute AF - NOP BO - BCS B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP B3 - NOP D5 - CMP - Zero Page, X D6 - DEC - Zero Page, X D7 - NOP D8 - CLD D8 - CLD D9 - CMP - Absolute, Y FC - NOP FF - NOP FF - NOP FF - NOP	AD - Absolute		Made and the state of the state
BO - BCS B1 - LDA- (Indirect), Y B2 - NOP B3 - NOP B3 - NOP B0 - DEC - Zero Page, X D6 - DEC - Zero Page, X D7 - NOP D8 - CLD D8 - CLD D9 - CMP - Absolute, Y FD - SBC - Absolute, FE - INC - Absolute, FF - NOP	AE - LDX - Absolute		
B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP D9 - CMP - Absolute, Y FE - INC - Absolute, FF - NOP D9 - CMP - Absolute, Y	AF — NOP ·		
B1 - LDA - (Indirect), Y B2 - NOP B3 - NOP D9 - CMP - Absolute, Y FE - INC - Absolute, FF - NOP FF - NOP FF - NOP	BO - BCS		
B2 - NOP B3 - NOP D9 - CMP - Absolute, Y	B1 - LDA- (Indirect), Y		
R3 - NOP D9 - CMP - Absolute, 1			FF - NOP
DA - NOP		DA - NOP	



GLOSSARY

6502: The name of the microprocessor which is the brain of the MPF-II. Manufacturers of this microprocessor include Rockwell, Synertek, MOS Technology.

Address: When used as a noun, it is the specific value given to a memory location. The memory of the MPF-II ranges from Ø to 65535. As a verb, to refer to a specific memory location.

Addressing Mode: The methods with which a microprocessor refers to memory locations. The 6502 has thirteen addressing modes. Thus, it has thirteen ways of referring to memory.

Analog: Using continously variable numbers to represent physical quantities such as voltage, length, resistance, etc. (Contrasted with digital).

AND: A logical operator or binary function that has the property that if P (an input) statement and Q (another input) statement are both true, then P AND Q are true (positive or on), false (negative or off) if either is false or both are false.

ASCII: American Standard Code for Information Interchange (often called USASCII). A standard 8-bit information coding system that assigns a unique value from Ø to 127 to each of 128 characters, numbers, special characters, and control characters. It is used widely with most computers and terminals and can be transmitted parallel or serial.

Assembler: A program used to convert a source assembly language program, including mnemonics and symbols, to an object code (in binary representation) that can be recognized by the computers.

Assembly language: The structure of this programming language is similar to that of machine code language. Programs written in assembly language consist of mnemonics, symbols, and values. It is much more efficient to program in assembly language than to program in other programming languages.

BASIC: Beginner's All-purpose Symbolic Instruction Code. Developed at Dartmouth College by Kemney and Kurtz in 1963, is probably one of the easiest programming languages to learn and master, and is probably the most widely used language for home and personal computers.

Binary: A number system with only two digits "0" and "1". Inside all computers, binary arithmetic operations are used for quick computing.

Binary function: An operation performed by an electronic circuit which has one or more inputs and only one output. All inputs and outputs are binary signals.

Bit: The most basic unit of data that can be recognized and processed by all computers. A bit is either Ø or 1. Bits can be grouped to form larger unit of information—nibble, byte.

Board: See Printed circuit board.

Bootstrap (boot): To start a system from a "cold" reset cycle. This term was derived from the sense that the computer intends to get itself started by pulling its bootstraps.

Buffer: An area in the memory in which information is to be stored temporarily, and will be output or processed later.

Bug: An error. A hardware bug is an electrical, mechanical, or electronic defect that interfers with the normal operation of a computer. A software bug is a mistake in programming.

Bus: A group of wires used to carry a set of related signals or information from one place to another.

Byte: A basic unit of information that is stored or processed by the computer. In some computers, a byte consists of seven bits. But in most of today's computers, a byte is made up of eight bits. For a byte consisted of eight bits, one byte can represent or hold a value of from Ø up to 255. Each character in the ASCII character set can be represented by one byte. Each and every memory location of the MPF-II is one 8-bit byte.

Call: As a verb. To leave the program or the subroutine which is now being executed, jump to another program and execute that program, and then return to the original program. As a noun, an instruction that calls a subroutine or program.

Character: One symbol of a set of basic symbols such as those corresponding to the keys on a standard type-writer keyboard. The symbols usually include the decimal letters from Ø to 9, the letters from A through Z, punctuation marks, operation symbols, or other special signs the computer can read, write, and process.

Chip: The equivalent of integrated circuit--tiny silicon chip on which electronic circuits are implemented on a thin metal oxide film.

Code: As a noun. A system of symbols for representing data or instructions.

Cold-start: To begin to operate computer which has just been turned on.

Color burst: The signal that color TV sets recognize and convert to the color dots which are then displayed on the TV screen. Without the color busrt signal, all pictures would be black-and-white.

Computer: Any device that can receive and store a set of instructions and information and process them in a predeermined and predictable way.

Control character: Characters in ASCII character set which have no graphic represenation, and thus can not be seen on the screen. These characters are used for various control functions.

CRT: Cathod ray tube. Usually used to describe any device that has a TV screen.

Cursor: A special symbol on a screen, showing the position where a character can be typed in.

Data: Information of any type.

Debug: Find and correct errors.

DIP: Dual in line package. It is the most popular package method for integrated circuits. It has two parallel rows of pins. The numbers of pins usually come in 14, 16, 18, 20, 24, 40.

Disassembler: A program used to convert object machine code programs to assembly language programs.

Display: As a noun, denotes any device that displays. Usually, the video display is a TV screen.

Edge connector: A connector to which the edge of a printed circuit board can plug for electronic signal exchanging.

Entry point: Specific points or places in a subroutine where control can be transferred and re-entered. The entry point usually corresponds to a new or different function to be performed.

Exclusive OR: A binary function whose result is "off" or "false" when both inputs are "on" (true) or "off" (false); "on" when only one input is "on" (true).

Format: A predetermined ways to arrange characters, lines, punctuation, lines, etc. As a verb, to specify the form of a format.

Graphic: Visiable as a distinct, recognizable shape or color.

Graphics: A capability or a system to display graphic items.

Hardware: The physical components of a computer.

HC: Hard copy. As a verb, to print what is on the screen onto paper, using a printer.

Hexadecimal: A number system in which the decimal Ø through 9 are used to represent the hexadecimal Ø through 9, and the decimal values 10 through 15 are represented by the letters from A to F. The hexadecimal values in this manual end with an H.

High level language: The programming languages that are close to human languages.

High order: The most important, or item which contains the highest value, of a set of similar items. The high order bit is the leftest or the most significant bit.

High part: The high order byte of a two-byte address. In decimal, the high part of an address is the quotient of the address divided by 256. In 6502 and many other microprocessors, the high part of an address comes last when stored in memory.

Hz: Hertz, a measurement unit of frequency, cycle per second. 6502 operates at 1,023,000 Hz.

I/O: Input/Output.

Input: As a noun, data which flows from external devices to a computer. As a verb, to send data from external components.

Input/Output: The software or hardware that exchanges data with the external devices.

Instruction: In a program, the smallest unit of data that can be operated upon, processed by a microprocessor (CPU). In 6502 machine language, a instruction may come in one, two, or three bytes.

Integrated circuit: A small, thin silicon wafer into which complicated electronic circuit has been implemented. A single IC can hold from ten to ten thousand discrete electronic components. These ICs are usually packaged in DIP.

Interface: An exchange of information between one device and another, or the device that makes such exchange possible.

Interpreter: A program that converts high level programs to executable machine codes and execute the interpreted machine codes.

Interrupt: A physical effect that causes the computer to jump to and execute an interrupt service subroutine (a subroutine that requests the CPU to halt its current job and service the subroutine that made the request.) When the computer completed servicing the requesting subroutine, control is returned to where the CPU was previously interrupted.

K: Stands for the Greek prefix "kilo", meaning one thousand. In computer usuage, it means 210, or 1,024.

Kilobyte: K bytes, 1024 bytes.

Language: A computer language is a set of characters or a code that is used to form symbols, words, etc., and the rules for combining these into meaningful communications that can be understood by man and the computer.

Line: On a screen, a line is a horizontal string of graphic symbols, extending from one end of the screen to the other. In the MPF-II, an input line is a string of up to 256 characters, terminated by the control character return.

Low level language: Fundamental computer languages whose structure is suitable for the computer to recognize and process. The assembly language is a low level language.

Low order: The least important, or item with the least value in a set of similar items. The low order bit of a byte is the rightmost bit of the byte.

Low part: In a two-byte address, the low order part is the low order byte of the two-byte address.

Machine language: The language that can be understood by the computer. Basically, it comes in binary. Sets of binary values are grouped to form operation codes (opcode) that specify the operations to be performed by the computer. The opcodes operate upon, or sometimes without, operands (represented also by binary values). An instruction may consist of an opcode and an operand, it may also be an opcode.

Memory address: A value assigned to a memory location. An address only corresponds to a single memory location. The address of a memory location may be expressed in hexadecimal or decimal. For the MPF-II, an address is a two-byte value.

Memory location: The smallest unit of data that can be processed by the computer. It is also the smallest unit of information of a memory map to which the computer can refer. A memory location corresponds with a specific address and a unique value.

Memory map: The set of all memory locations which the microprocessor can address directly. It is used as a graphic representation of a computer system's memory.

Microcomputer: A computer whose CPU is a microprocessor.

Microprocessor: An IC that understands and executes machine language programs.

Mnemonic: A set of symbols designed to help memorize data that is difficult to remember. In assembly language, each instruction is represented by a mnemonic.

Mode: A condition or set of conditions under which a set of rules apply.

Monitor: 1) A program that supervises and services all user's programs. It enables a programmer to operate the computer with assembly programs. 2) a close-circuit TV receiver.

Multiplexer: An electronic circuit which has many data inputs, several selector inputs, and one output.

Mux: Multiplexer.

Nibble: Half of a byte, or four bits.

Opcode: A machine language instruction.

Or: A binary function whose output is true or "on" if both or one input is true ("on").

Output: As a noun, data generated by the computer whose destination is the outside world. As a verb, the process of generating such a data.

Page: 1) A unit of measurement for the quantity of memory. A page of memory holds 256 bytes. 2) A full screen of information on a video display.

Pascal: 1) A famous French scientist. 2) A programming language.

PC board: Printed circuit board.

Peripheral: Devices connected to the computer. Most peripherals are input and/or output devices.

Personal computer: Computers with memory, languages, and peripherals which are suitable for use in a home, office, or school.

Pin-out: A description of the function of each pin on an IC.

Printed circuit board: A board of fiberglass or epoxy on which a thin layer of metal has been applied, and then etched away to form traces. Electronic components can be attached to the traces for exchanging signals. Small PC board are usually called cards.

Program: A sequence of instructions created for perform a specific task.

PROM: Programmable Read Only Memory. It is a ROM whose contents can be altered by electrical means. Information stored in PROM remains unchanged when the power is turned off. The contents in PROMs can be erased by ultraviolet light and be reprogrammed.

Prompt: A special symbol which indicates the beginning of an input line.

RAM: Random Access Memory, the memory IC to and from which data can be written and retrieved freely. The contents of RAM will disappear as soon as the power is turned off.

ROM: Read Only Memory, the memory IC in which data is stored permanently and can not be altered. The data in ROM remains intact even if the power is turned off. ROMs are ususally used to store important programs or data such as the monitor program. Data in ROMs is implemented there in the manufacturing process.

Reference: 1) The source of information, such as reference books. 2) As a verb, the action of accessing a memory location.

program which calls it.

Run: Execute a program in accordance with the sequence of the instrucions in the program.

Scan line: A single beam of a cathode beam across the inner surface of a cathode ray tube.

Schematic: A diagram which illustrates the electrical interconnections and the circuitry of an electronic device.

Scroll: To move all the text on a screen up one line.

Soft switch: A switch, usually a toggle type (on/off) switch, controlled by the software.

Software: Programs that request the hardware to do something.

Stack: An area in memory used to temporarily store data. Data is stored in a stack first-in last-out. The data which is first stored in the stack is retrieved last. A programmer stores (PUSH) data onto the stack, and retrieves (POP) it from the stack.

Strobe: A selection signal which indicates the occurence of a specific event.

Subroutine: A program that can be executed, using the CALL instruction.

Syntax: The rules governing sentence structure in a language.

Text: A collection of characters.

Toggle switch: An on/off switch which has two states--either on or off.

Trace: An etched conducive line on a PC board.

Video: 1) Any information that is displayed on a cathode ray tube. 2) Anything that is visible.

Warm-start: To re-initialize a computer system after a programmer lost control of a program or the operating system.

Window: The segmented portion of a screen is called a window within which information is displayed.


APPENDIX C

SCHEMATIC OF KEYBOARD



FOI-MPF-II

FLOPPY DISK INTERFACE INSTALLATION GUIDE

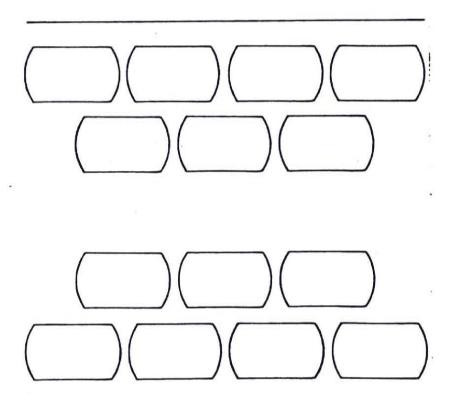



MULTITECH INDUSTRIAL CORPORATION

FDI-NIPE-II

FLOPPY DISK INTERFACE INSTALLATION GUIDE

TABLE OF CONTENTS

CHAPTER 1

Unpacking and Installation

CHAPTER 2

Convert Your Apple II DOS to MPF-II DOS

CHAPTER 3

Convert the COPYA program for MPF-II

CHAPTER 4

Convert the FID program for MPF-II

It is assumed that the reader is already familiar with the Apple II DOS Manual

1. Unpacking the Floppy Disk Interface (FDI)

Welcome to the Multitech floppy disk interface card. Upon unpacking, you will find:

- 1) The FDI itself.
- 2) This manual.

1.)

3) The diskette containing the following convertor programs:

Filename	Function
	Apple DOS to MPF-II DOS, which has no filename.
FID.COVT	The Apple FID (file developer) to MPF-II FID, whose filename is
	FID. COVT.
COPY.COVT COPYM.OBJ	The Apple COPYA to MPF-II COPYM, whose filename is COPYA.COVT.

Other programs on the diskette are:

HELLO	The greeting programHELLO.
O/X GAME	The O/X game.
NURSE	The MPF-II self-diagnosis program
	Micro-Nurse.
DEMO-GRAPH	The graphics demonstration program.
DEMO-300-CCC	The demostration program for
	Chinese Character Controller (CCC).
RENUMBER	The RENUMBER utility program.
RENUMBER INSTRUCTION	S

The instructions on how to use the RENUMBER utility.

DEMO-SONG-SSG The demostration program for Speech and Sound Generator (SSG).

4) Two floppy diskettes: One contains the convertor programs and other programs mentioned above and the other is a blank diskette.


2. Installation


Before inserting the FDI to the edge connector of the MPF-II, make sure the power to the MPF-II is turned off. Otherwise, permanent damage may be caused to the FDI.

1) Insert the FDI to the edge connector of the MPF-II

caused to the FDI.

- Insert the FDI to the edge connector of the MPF-II
 as illustrated in Fig. 1-1. Note that the side
 labeled with the floppy disk interface should face
 up. Otherwise, it can not be plugged into the edge
 connector of the MPF-II.
- 2) Insert the flat cable to the FDI as illustrated in Fig. 1-2. Note that the side of the cable connector with a small protrusion should face downwards when making the connection.
- 3) Turn on the power.

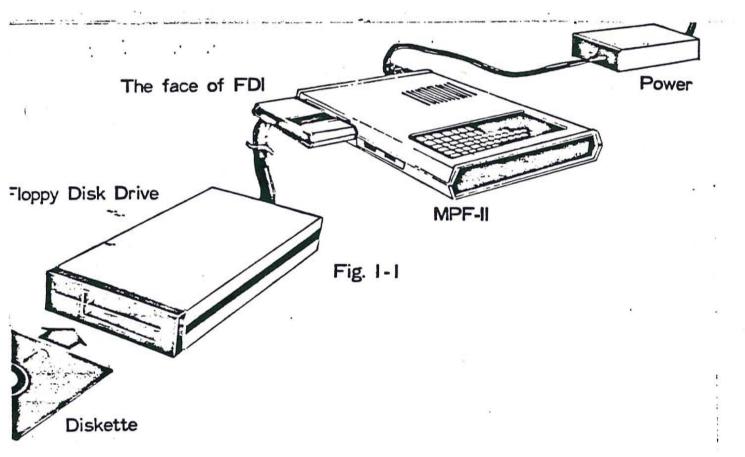

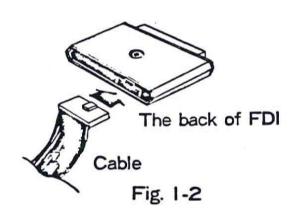



Convert Your Apple II DOS to MPF-II DOS

- 1. Set up the disk drive system while power-off.
- Insert the diskette containing the convertor program into the drive.
- 3. Turn on the power. The display will show

4. When the screen displays

"INSERT DISKETTE CONTAINING APPLE DOS PRESS RETURN KEY TO CONTINUE",

take out the diskette currently in the drive and slide in the diskette containing Apple DOS.

 Press carriage return key and the screen will show

READING.

At this time, the MPF-II is reading in the Apple DOS.

a. If the MPF-II finishes reading correctly, the screen will display

"READ COMPLETE".

You can proceed to step 6.

b. If error message

"APPLE DOS DISKETTE READ ERROR"

shows up on the screen, turn off the power, take out the diskette containing Apple DOS and repeat the reading procedure from step 2.

6. When the screen shows

"PLEASE TAKE ORIGINAL DISKETTE AWAY.
AND INSERT A NEW DISKETTE.
THE NEW INSERTED DISKETTE WILL BE
FORMATTED.
PRESS RETURN TO CONTINUE.",

insert a new diskette.

Press the carriage return key and the screen will display

"FORMATTING".

This is to tell you that the MPF-II is formatting the diskette you just inserted.

a. If the formatting is done successfully, the screen will show

"FORMAT COMPLETE".

You can proceed to step 8.

- b. If the screen shows "FORMAT ERROR", repeat from step 6.
- When the MPF-II starts writing MPF-II DOS, the screen will display

"START WRITING"

a. If the screen shows

"O.K. COMPLETE",

proceed to step 9.

b. If the screen shows

"WRITE ERROR",

repeat from step 6.

Turn off the power off and then turn on the power.
 By doing so, you have finished conversion of Apple DOS to MPF-II DOS.

Note:

1. If the screen gets blurred after you booted the MPF-II DOS with the new, converted master diskette, don't feel bad. Type in the command "HOME" and then press — the blurred display will disappear. Then type in the following HELLO (greeting) program:

10 TEXT
20 PRINT "MPF-II DOS VERSION 2.1 mm/dd/yy"

Save this program will the statement SAVE HELLO.

Note the "mm/dd/yy" is the date on which you convert the Apple DOS to MPF-II DOS.

 After you have made your own MPF-II DOS master diskette, you can use that diskette to boot your DOS the same way as described in Apple II DOS Manual.



Convert the

COPYA program for MPF-II

- 1. When prompted by the ">" on the screen, input "BRUN COPYA.COVT" and press the carriage return key
- . 2. The screen will first get clear and then display

APPLE COPY TO MPF-II COPY CONVERTOR

3. When the screen shows

INSERT DISKETTE CONTAINING APPLE COPYA. PRESS RETURN KEY TO CONTINUE

Put the diskette containing Apple COPYA into the disk drive and press the carriage return key —.

After the carriage return key is hit, the MPF-II will be reading the COPYA program. The screen will show

READING

 When the MPF-II finished reading, the screen will display

READ COMPLETE
PLEASE TAKE THE ORIGINAL DISKETTE AWAY
AND INSERT A NEW DISKETTE
WHICH HAS BEEN FORMATTED BY
MPF-II DOS OR APPLE DOS 3.3
PRESS RETURN KEY TO CONTINUE

In response to the screen message, slide in a diskette which has been formatted by MPF-II DOS or APPLE DOS 3.3 and press the carriage return key

5. At this moment, the MPF-II is writing the revised COPY program to the diskette just inserted into the disk drive. The screen will show

START WRITING

When the write operation is finished, the screen will show

O.K. COMPLETE

- The the converted program is renamed COPYM.
- 8. When you execute the COPYM program itself, you may be prompted by the MPF-II for slot or drive numbers. Enter 1 for both, when prompted, because only one slot and drive are in use.



Convert the

FID program for MPF-II

- 2. The screen will first get clear and then display

3. When the screen shows

INSERT DISKETTE CONTAINING APPLE FID PRESS RETURN KEY TO CONTINUE

Put the diskette containing Apple FID into the disk drive and press the carriage return key —.

After the carriage return key is hit, the MPF-II will be reading the FID program. The screen will show

READING

 When the MPF-II finished reading, the screen will display

READ COMPLETE
PLEASE TAKE THE ORIGINAL DISKETTE AWAY
AND INSERT A NEW DISKETTE
WHICH HAS BEEN FORMATTED BY
MPF-II DOS OR APPLE DOS 3.3
PRESS RETURN KEY TO CONTINUE

In response to the screen message, slide in a diskette which has been formatted by MPF-II DOS or APPLE DOS 3.3 and press the carriage return key

5. At this moment, the MPF-II is writing the revised FID program to the diskette just inserted into the disk drive. The screen will show

START WRITING

When the write operation is finished, the screen will show

O.K. COMPLETE

7. When you excute the FID program itself, you may be prompted by the MPF-II for slot or drive numbers. Enter 1 for both, when prompted, because only one slot and drive are in use. After you boot the DOS, you can try the other programs provided by Multitech.

 Since a greeting program is already on your MPF-II DOS diskette, each time you boot the DOS the screen should show

MPF-II DOS VERSION 2.1 mm/dd/yy

On the diskette containing the convertor programs, a HELLO program is also provided. You can run this program by typing

>RUN HELLO <--"

2. Run the program whose filename is O/X GAME. This program is on the diskette provided by Multitech together with the convertor programs. To try this program, open the disk drive and insert that diskette. Then type

>RUN O/X GAME <---

- 3. COPYM is the program which moves all the files on a diskette to another. This program is on the new diskette which contains the object code converted by the COPY.COVT convertor.
 - a. Type

>RUN COPYM

On the last line of the screen message, you will see

PRESS RETURN KEY TO BEGIN COPY

b. After typing <--', the last line of the screen will display

INSERT ORIGINAL DISK AND PRESS RETURN

c. Insert the diskette from which files are to be copied, and press the <-- key. The last line on the screen will show

INSERT DUPLICATE DISK AND PRESS RETURN

- d. Insert a blank diskette and press the <-- ' key.
- e. Repeat steps b and c until the screen shows

DO YOU WANT COPY ANOTHER?

Chapter 5 Operating Other Programs

Press "Y" for "YES", and "N" for "NO".

In the following examples demonstrating how to try the various programs. You can use the CATALOG command to locate the related file (program).

4. FID

()

Type

>BRUN FID <---

Chapter 5 Operation of Other Programs

Then the screen will display nine functions. To perform the nine functions, follow the instructions displayed on the screen.

5. NURSE

Type

>RUN NURSE <---

Then follow the instructions displayed on the screen to perform a health check for the MPF-II.

6. DEMO-GRAPH

Type

>RUN DEMO-GRAPH <---

Then follow the instructions displayed on the screen to examine the graphics capabilities of the MPF-II. You can also use the LIST command to list this program.

7. DEMO-300-CCC

Note that when you run this program, a CCC should be connected to the MPF-II. Before executing this program, you should follow the procedures listed as follows:

- 1) Connect the CCC and the FDI to your MPF-II.
- 2) Boot the DOS while the switch of the CCC is off.
- 3) Turn on the switch of the CCC.
- 4) Press the RESET key on the MPF-II keyboard.
- 5) Enter the monitor by typing CALL-159.
- 6) Change the values of two memory locations--68 and 1000--by typing

068:10 01000:0 0CONTROL C <---

Then you can run the program by typing

>RUN DEMO-300-CCC <---

Then follow the instructions displayed on the screen.

Why change the two values at step 6? The CCC, when used together with MPF-II, will occupy the memory range (of the MPF-II) from memory location 800 (hexadecimal) to FFF. Therefore, the RAM area from 800 to FFF can not be stored with a program. Then,

where do we load the program DEMO-300-CCC? From location 1000 (hexadecimal) and upwards. Because the value at location 68 points to the starting address of the BASIC program to be exeuted, 10 is stored at location 68. The program of DEMO-300-CCC actually starts from location 1001. The location preceding the starting address of the BASIC program in RAM should always be stored with zero. Therefore, zero is put into location 1000.

After this program is executed, the program pointer—formed by locations 67 and 68—will contain the value 01 and 10, respectively. That means when the monitor searchs for a program to execute, it will search the locations 67 and 68. Please refer to Chapter 6 for a detailed description of memory mapping of the RAM after the MPF—II is connected with the CCC. Thus, you have to follow the procedures described below if you want to execute a program after executing the DEMO-300—CCC program.

- a. Turn off the power of the MPF-II.
- b. Turn off the switch on the CCC (Or disconnect the CCC from the MPF-II.)
- c. Turn the MPF-II DOS on.
- d. Execute the program.

8. DEMO-SONG-SSG

Type

>RUN DEMO-SONG-SSG <---

Note that when you run this program, an SSG should be connected to the MPF-II. When this program is being run, music will be generated by the SSG and musical scores will be displayed on the screen.

9. RENUMBER

It is a utility program that can rearrange the statement numbers of a BASIC program. Before running this program, run the program RENUMBER INSTRUCTIONS for a detailed instructions on how to use the RENUMBER utility.

Before running the RENUMBER utility, note that after execution of the RENUMBER utility program, the pointer (which points to the starting location of the program when the monitor program searches a program to execute in RAM) will point to the location 4001 (hexadecimal).

The locations 67 and 68 are used as program start pointer. The values contained in these two

locations are recognized by the monitor—as the location from where the program to be executed can be fetched. Normally, the values contained in these two locations are 801 (hexadecimal). Refer to Chapter 6 for a detailed description of the memory map of MPF-II-DOS.

After typing

RUN RENUMBER <---

Follow the instructions displayed on the screen. Note that after typing in "RUN RENUMBER <--" the MPF-II will not begin th renumber process until you press the "&" character on the keyboard. Various command tails such as H, M, S, or E can be added to the RENUMBER command "&". (Refer to the instructions printed out by the RENUMBER INSTRUCTIONS on how to add command tails.)

WARNING: You can renumber ONLY BASIC program.

If a program is written in assembly program, wholely or partly, you can not use the RENUMBER utility. Some BASIC program may contains sections of assembly language subroutines. While programming in BASIC, some programmers may use the POKE command to put into a memory block machine code instructions. In this case, the RENUMBER utility may not work.

WARNING: NEVER run a renumbered program immediately after it is renumbered. You should follow the following procedures if you intend to run the renumbered program: 1) Save the renumbered program on diskette. 2) Turn off the power and then turn on the power. 3) Load the renumbered program from diskette into the MPF-II and then run the program. If you don't follow the procedures mentioned above, you are running the risk of ruinning you program.

A second way to run the renumbered program is: 1) Save the renumbered program on diskette. 2) Set the values of two memory locations--68 and 800--by following the following procedures

Type

>CALL-159 (Enter the monitor)
@68:08 (Set the starting address of the BASIC program you want to execute to 800.)
@800:00 (The starting address of the BASIC program actually starts from 801 in RAM. The value in the memory location in front of the starting address of the BASIC program should always be zero.)

Chapter 5 Operating Other Programs DOS1:file

@CONTROL C <-- (Reenter BASIC)

3) Execute the renumbered program or other programs.

Note that after using the RENUMBER utility, if you want to execute other programs contained on the diskette provided by Multitech, you must reset the program start pointer--put Øl to location 67 and Ø8 to location 68--with the following POKE command:

POKE 104,8

(The content of location 67 is 1 constantly.)

10. COPY.COVT

Type

>BRUN COPY.COVT <---

11. FID.COVT

Type

>BRUN FID.COVT <---

To enable a user to use MPF-II DOS, a memory map of the MPF-II is provided as follows (Fig. 6-1):

When the MPF-II is connected with a disk drive, or a Chinese Character Controller (CCC), some RAM space will be occupied or used by these peripneral devices. In case your MPF-II is connected to external devices such as a disk drrive, you must understand the exact RAM area which is available to you. Fig. 6-2 provides a comparative memory map of the MPF-II.

Page Number: Decimal	Hex	用於:
Ø	\$00	系統程式
1	\$01	系統堆叠
2	\$02	CETLN 輸入投資區
3	\$03	週邊裝置保留區
4	804	
5	\$05	監督程式
6	\$Ø6	保留區
7	\$07	2) ×
8	\$Ø8	可使用的
9	\$09	RAM
10	\$ØA	- 300 ECO 410
11	\$ØB	
12	\$0C	
through	100 C	
31	\$1F	
32 .	\$20	
through		本文、低解像度和高解像度
63	\$3F	圖形首頁儲存區
64	840	
through		
159	\$9F	
160	SAØ	本文、低解像度和高解
through	100.000	
191	\$BF	像度圖形次頁傑存區

下1g.6-1 表十、RAM組織和用途

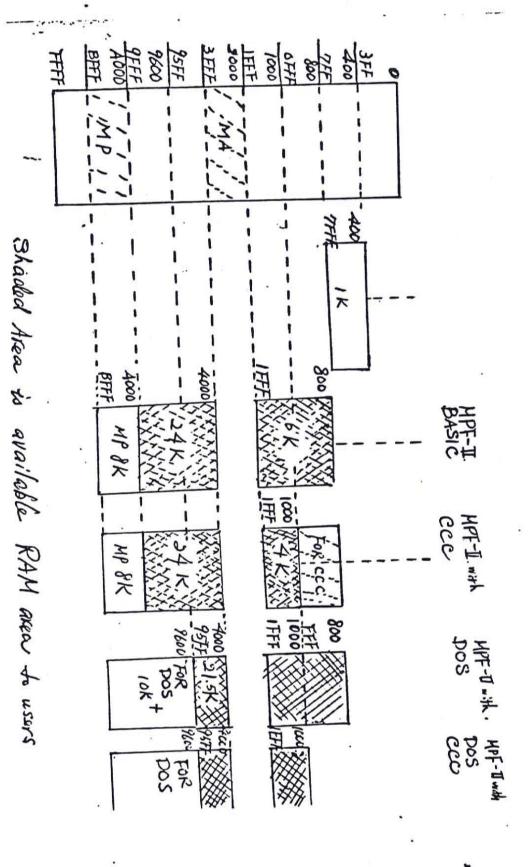


Fig. 6-2

6.1 Ram Available to a User --When the MPF-II stands alone

When the MPF-II is not connected with the CCC or disk drive, the RAM area available to a user (the area which you can write your program) is the memory range from 800 (hexadecimal) to 1FFF and the memory range from 4000 to BFFF. From Fig. 6-2, you will see that the RAM area available is separated.

Note that the area from 2000 to 3FFF is used as the primary screen display buffer (or page 1), and the RAM area from A000 to BFFF is also used as the secondary display buffer (or page 2). If the secondary page is not used, then data and program can be stored in this area.

If your program is less than 6K bytes, you can store your program in the memory block ranging from 800 to 1FFF. If your program takes more than 6K bytes of space, you can store the program after typing in the MP command (A special MBASIC command).

The MP Command

What the MP command does is to set the primary display buffer to the area from A000 to BFFF and make the area from 2000 to 3FFF available as a RAM area where you can store your program. After typing in the MP command, you can store your program beginning from the memory location 800 to 9FFF, totaling 38K bytes.

Another way to store program of longer than 6K bytes is to store the program into the RAM area beginning from 4000 to 9FFF, totaling 24K bytes. Using this method, a programmer can only store the program which takes less than 24K bytes of space.

As soon as the power to the MPF-II is turned on, the values of two memory locations—67 (hexadecimal) and 68—are set to 01 and 08, respectively. The contents (values) of the two locations serve as a pointer which points to the location (address) from where the program to be executed can be fetched. The byte that precedes the starting address of the program to be executed should always be stored with the value "0". Thus, a BASIC program to be executed normally is stored in the RAM beginning from location 801 (hexadecimal). The byte preceding 801—800—should always be stored with zero.

Using the POKE Command

To store a BASIC program starting from 4001 in RAM, you have to use the following commands

POKE 103,01 (Put 1 to location 67--The decimal equivalent to 67 is 103.)

POKE 104,64 (Put 40 to location 68--The decimal equivalents to 40 and 68 are 104 and 64 respectively.)

POKE 16384,0 (Put 0 to location 4000--The decimal equivalent to 4000 is 16384.)

For details of the POKE command, refer to the MPF-II BASIC Programming Manual.

~÷.

6.2 RAM Available to a User --When the MPF-II is connected with the Chinese Character Controller (CCC)

When the MPF-II is connected with the Chinese Character Controller (CCC), the RAM available to a user is the two memory blocks—one from 1000 to 1FFF and the other from 4000 to BFFF. Since the two memory blocks are separated by the primary display buffer, and the RAM area from 1000 to 1FFF can only store 4K bytes, you have to use the MP command or the POKE command as mentioned above when your program needs more than 4K bytes of space.

6.3 RAM Available to a User --When the MPF-II is connected with the Disk Drive

WARNING: When your MPF-II is connected with a disk drive, it will not respond to the MP command.

When your MPF-II is connected with a disk drive, the RAM area from 9600 to BFFF will be occupied or used by the MPF-II DOS. The RAM area available to a programmer are two separate memory blocks--one from 800 to 1FFF and the other from 4000 to 95FF. Remember you can use either the RAM area from 800 to 1FFF, which totals 6K bytes, or the area from 4000 to 95FF, which totals 21.5K bytes.

Considering the facts that MP command is invalid and that the RAM area from 800 to 1FFF can only store 6K bytes, the maximum RAM area available to a user is 21.5K bytes. If you write a program which takes more than 21.5K bytes, you may lose your program.

6.4 RAM Available to a User
--When the MPF-II is connected with the Disk Drive
and the CCC

When the MPF-II is connected with the Disk Drive and the CCC, the RAM area available to a user is two

separate memory blocks--one from 1000 to 1FFF (4K bytes) and the other from memory location 4000 to 95FF (21.5K bytes).

When you write a program, make sure it does not exceed the 21.5K-byte limit. Use the POKE command to store your program into the RAM beginning from 4000.

在此將DOS 命令歸納爲五大類: Appendix: MPF-II DOS Command Summary Horaskocping Commands 管理類命令 RENAME VERIFY INIT MON DELETE CATALOG NOMON LOCK SAVE MAXFILES UNLOCK LOAD RUN Accoss Commands 取存類命令 CHA IN FP 顺序文字資料協定命令 Sequential Text file Commands. APPEND OPEN POSITION CLOSE EXEC READ WRITE DEN READ READ

機器語言梳從命合Machine Language File Commands

WRITE

OPEN

CLOSE

BSAVE BLOAD BRUN

GENERAL GUIDE LINE TO CONVERT THE APPLE-II MACHINE PROGRAM TO MPF-II PROGRAM:

1.Find the instruction "LDA OCOOOH" in the APPLE-II machine program and replace it by the following instructions in the MPF-II machine program:

LDA	\$26	\longrightarrow	INX	
PHA			PLA	
LDA	\$27		STA	\$0100,X
PHA			PLA	
LDA	\$06		STA	\$09
PHA			PLA	
LDA	\$07		STA	\$08
PHA			PLA	
LDA	\$08		STA	\$07
PHA			PLA	
LDA	\$09		STA	\$06
PHA			PLA	
JSR	\$F043		STA	\$27
PHA			PLA	
TXA			STA	\$26
PHA			LDA	\$0100,X
TSX			PHA	
TXA	•		DEX	
EOR	#\$80		LDA	\$0100,X
TAX			TAX	
PLA		0	PLA	
STA	\$0100,X		RTS	

2.Secondary Screen display:

Find all the instructions which refer to the secondary screen buffer of APPLE-II (0400H to 05FFFH) and change them to the corresponding address of the MPF-II secondary screen buffer (0A000H to 0B000H).

3. Text mode display: find the instructions used to display the APPLE-II text: "LDA @OC1H STA 0401H" and convert them to the following instructions in the MPF-II machine profram:

```
LDA @001H ;X axis
STA 024H
LDA @000H ;Y axis
STA 025H
LDA @0C1H
JSR 0FDF0H
```



C000-FFFF

MULTITECH ELECTRONICS INC.

I/O port, system monitor program area.

195 W. EL CAMINO REAL • SUNNYVALE, CA 94086 • [408] 773-8400

MPF-II MEMORY MAP

Memory Range	Description
01 FF	Reserve for system, Single Monitor.
2002FF	Keyboard buffer.
3003FF	Machine code Program.
4004FF	System Variables, special Ultilities Program.
800.—1FFF	MBASIC Program and Variables.
2000-3FFF	Whem Power ON or MA command, these memory are reserved for Low/High resolution and text mode.
4000 - 9FFF	application program, Data and variables area.
A000 - BFFF	MP Command.these memory are reserved for low/high resolution and text mode.

THE MEMORY LOCATION OF RAM OCCUPIED BY THE SCREEN

	APPLE-II	MPF-II
TEXT PRIMARY BUFFER	400H-7FFH	2000H-3FFFH
Text Secondary Buffer	800H-8FFH	A000H-BFFFH
Low Resolution Primary Low Resolution Secondary	400H-7FFH 800H-8FFH	2000H-3FFFH A000H-BFFFH
High-resolution primary High-Resolution secondary	2000H-3FFFH 4000H-5FFFH	2000H-3FFFH A000H-BFFFH

The Difference in BASIC Commands

	APPLE-II		MPF-II			
FLASH	YES		NO			
IN#	YES		NO			
PR#	YES		NO			
MA	NO	-,	YES			
MP	NO		YES			
PRTON	NO		YES			
PRTOFF	NO		YES			
HC	NO		YES			
GR, HGR	Clear the	screen	Clear	the	window	only



MULTITECH ELECTRONICS INC.

195 W. EL CAMINO REAL • SUNNYVALE, CA 94086 • [408] 773-8400

LOADING APPLE-II TAPES INTO MPF-II

Set up

: Use any Cassette Recorder, volume and tone control are set at mid-high range.

Procedure

: After power on, type MP command, then CR screen shows the bar pattern similar to that immediately after turn on power.

This pattern stays through the LOADA process.

It clears after RUN & CR command. Also, the cursor is half height.

APPLE-SOFT PROGRAM L		LOADA	RUN
1.	Penny Arcade	O.K.	Text display O.K. Partial picture Bouncing ball sound O.K.
2.	Finance I	O.K.	O.K.
3.	Little Brick out	O.K.	Text O.K. (No paddle to use)
4.	Color Demosoft	О.К.	Choice 1 & 2 picture flashes then returns to Menu choice 3 & 4. (No picture)
5.	Hopalong cassity	O.K.	O.K.
6.	Lemonade	O.K.	Syntax error in 10010
7.	Phone list	о.к.	O.K.
8.	Brians Theme	о.к.	O.K.
9.	Alignment test tone	Errerr	Can not load into APPLE either
10,	Renumber/Append	O.K.	Starts O.K. then entered monitor mode.



MULTITECH ELECTRONICS INC.

195 W. EL CAMINO REAL • SUNNYVALE, CA 94086 • [408] 773-6400

MPF_II MEMORY MAP


Memory Range	Description
0. 1 FF	Reserve for system, Single Monitor.
200. 2FF	Keyboard buffer.
300. 3FF	Machine code Program.
400. 4FF	System Variables, special Ultilities Program.
800. 1FFF	MBASIC Program and Variables.
2000.3FFF	Whem Power ON or MA command, these memory are reserved for Low/High resolution and text mode
4000.9FFF	application program, Data and variables area.
A000.BFFF	MP Command.these memory are reserved for low/high resolution and text mode.
C000.FFFF	I/O port, system monitor program area.


THE MEMORY LOCATION OF RAM OCCUPIED BY THE SCREEN

	APPLE-II	MPF-II
TEXT PRIMARY BUFFER Text Secondary Buffer	400H-7FFH 800H-8FFH	2000H-3FFFH A000H-BFFFH
Low Resolution Primary Low Resolution Secondary High-resolution primary	400H-7FFH 800H-8FFH 2000H-3FFFH	2000H-3FFFH A000H-BFFFH 2000H-3FFFH
High-Resolution secondary	4000H-5FFFH	A000H-BFFFH

The Difference in BASIC Commands

The Difference		APPLE-II				
FLASH	YES		NO			
IN#	YES		NO			
PR#	YES		NO			
MA	NO		YES		•	
MP	NO		YES			
PRTON	NO		YES			
PRTOFF	NO		YES			
HC	NO		YES			
GR, HGR	Clear	the screen	Clear	the	window	only.

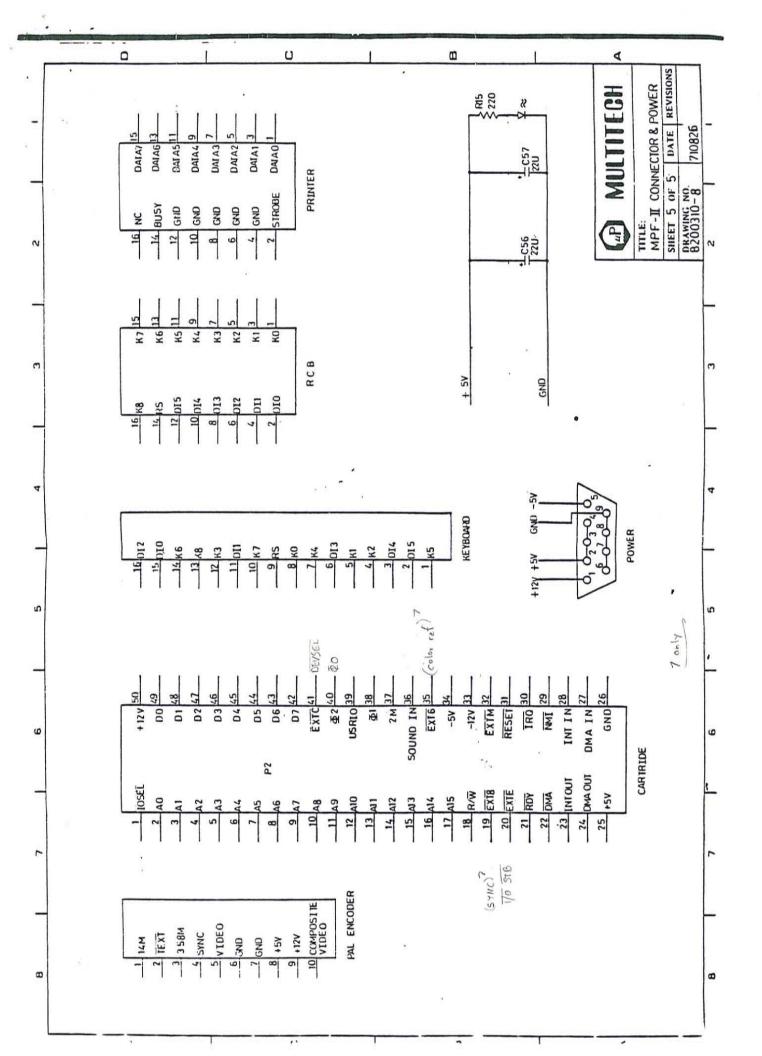

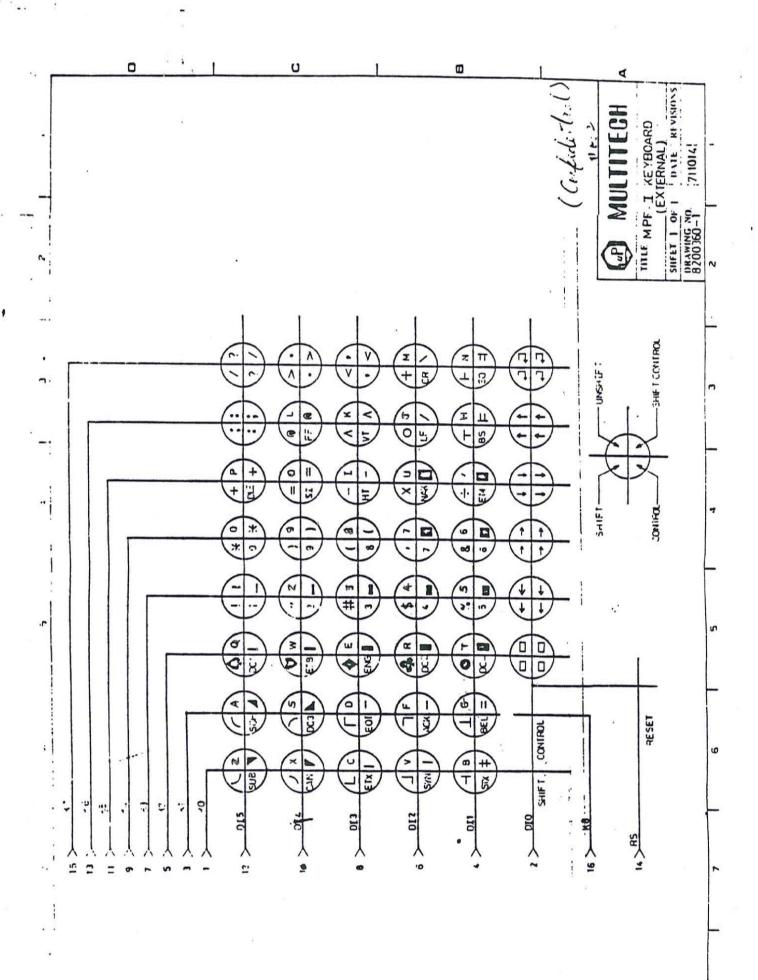



MULTITECH ELECTRONICS INC.

195 W. EL CAMINO REAL • SUNNYVALE, CA 94086 • [408] 773-8400

NOTE FOR ASSEMBLY LANGUAGE PROGRAMMING

1.Monitor subroutine entry:

All the monitor subroutine entry on the Chapter 3 of APPLE-II manual is the same as MPF-II except "KEYIN" and "PREAD" which MPF-II does not support. and the Address of "SCRN" is \$F871 in Apple-II and is \$F869 in MPF-II.

2.Zero Page Usage:

MPF-II id the same with APPLE-II except the four memory location-'6'.'7'.'8','9' are used as TEMP buffer.

"21H" represents :window width in the APPLE-II. for MPF-II, it represents :the window right margin.


3,Text area:

Some parts of text area are used as system parameter in the MPF-II. MPF-II can't display the APPLE-II assembly program which is written directly into the text area.


4. Key Reading:

In the MPF-II, using the command JSR F043H (JSR SCAN1) instead of LDA 000H in the APPLE-II for scanning keyboard.

SCHEMATIC

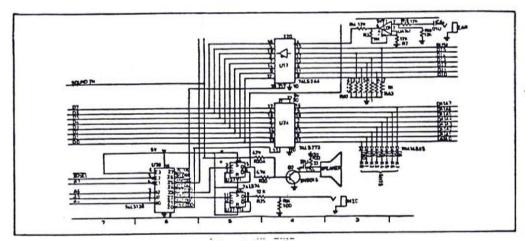

Keyboard

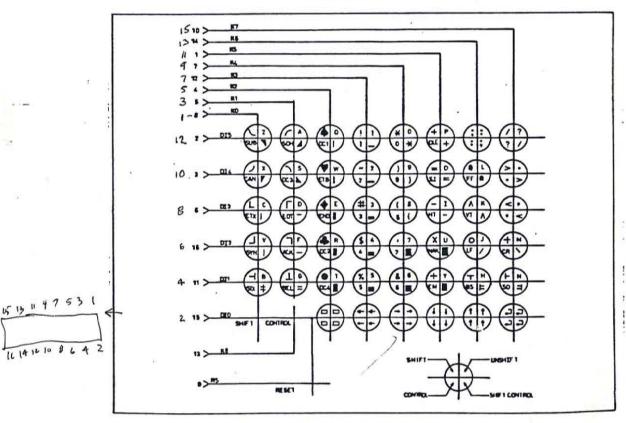

MPF-II Keyboard

Your guide to the world of microprocessors.

The Micro-Professor™-A low cost tool for learning, teaching and prototyping.

Here in one attractive package and at a price of only \$149.00 is a Z80* based microcomputer to lead you step by step to a thorough knowledge of the world of microprocessors.

The Micro-Professor is a complete hardware and software system whose extensive teaching

* Z80 is a trademark of Zilog Inc.

manual gives you detailed schematics and examples of program code. A superb learning tool for students, hobbyists and microprocessor enthusiasts, as well as an excellent teaching aid for instructors of electrical engineering and computer science courses.

But the Micro-Professor is much more than a teaching device. With it you can do bread-boarding and prototyping, designing your own custom hardware and software applications with Z80, 8080 and 8085 compatible code.

The standard 2K bytes of RAM is expandable to 4K, and the standard 2K bytes of ROM can be increased to 8K.

All this plus a built-in speaker, a cassette interface, and

EPB-MPF EPROM Programming Board \$169

For all +5V 1KB/2KB/ 4KB EPROMs.

Read/Copy/List/Verify Capability.

BASIC-MPF Tiny Basic \$19

2KB BASIC interpreter with hardware control capability. Machine-code subroutine accessible.



sockets to accept optional

CTC/PIO. Bus is extendable.

is a great low-cost board for

OEM's. Call for details.

As well as being an exciting

learning tool, the Micro-Professor

SSB-MPF Speech Synthesizer Board \$129

vocabulary of up to 400 words based on the TMS 5200 chip.

The Back had a second of the Back had a second

MICRO-PROFES



Multitech Electronics Inc.

Card No

Signature

State

Name (Please Print)

Address



Call toll free to order.

MPF-I Micro-Professor

\$149.00

	Price	Qty.	Amount
MPF-I Micro-Professor	\$149.00		
SSB-MPF Speech Synthesizer Board	\$129.00		
EPB-MPF EPROM Programming Board	\$169.00		
BASIC-MPF	\$ 19.00		
Shipping and Handling	\$ 4.95		4.95
California resident	s add sales	tax.	
	T	OTAL	

In U.S. and Canada mail to:

Check or money order enclosed isa Mastercharge

Expires

Multitech Electronics Inc. 195 West El Camino Real Sunnyvale, CA 94086 California Tel. (408) 773-8400 Elsewhere (800) 538-1542 Outside of North America mail to:

Multitech Industrial Corporation 977 Min Shen E Road, 105 Taipei, Taiwan, ROC Tel. 02-769-1225 TWX 19162 MULTIIC, 23756 MULTIIC

Features and Specifications

MPF-1

CPU Z80 CPU high performance microprocessor with 158 instructions.

RAM 2K bytes expandable to 4K bytes.

ROM 2K bytes of sophisticated monitor expandable to 8K bytes.

Input/Output 24 system I/O lines.

Monitor 2K bytes of sophisticated monitor. Monitor includes system initialization, keyboard scan, display scan, tape write and tape read.

Display 6-digit, 0.5" red LED display.

Audio Cassette Interface 165-bit/sec average rate for data transfer between memory and cassette tape.

Extension Connectors All buses of CPU, channel signals of CTC, and I/O port bus of PIO usable for expansion.

Counter Timer Circuit Socket is provided.

Parallel I/O Circuit Socket is provided.

Speaker & Speaker 2.5" diameter speaker Driver Circuits

User Area Provides a $3.5'' \times 1.36''$ wire wrapping area for user's expansion. Power Requirement 9V, 0.5A adaptor is provided.

User's Manual Complete self-learning text with experiments and applications.

Keyboard 36 keys including 19 function keys, 16 hex-digit keys, and 1 user-defined key.

RS	Reset the system.	GO	Execute the user's program.
ADDR	Set memory address and display content.	INS	Insert data of the address fol- lowed by the current display
DATA	Input data to memory or register.		address.
PC	Recall program counter.	DEL	Delete data of the current display address.
REG	Select register and display con- tents of register.	MOVE	Move memory block in the RAM.
+	Display content of next memory or register.	RELA	Relative address calculation. Calculates and stores relative
_	Display content of last memory address or register.	TAPE WR	address. Store data to the cassette tape.
STEP	Single step execution of user's	TAPE RD	Load data from the recorder.
	program.	INTR	Maskable interrupt.
SBR	Set break point of user's	USER KEY	User defined key.
	program.	O-F	Hex-digits or register selection.
MONI	User's program break and return		

EPB-MPF Specifications

Hardware Specifications Sc

Compatible with MPF-1. Use 40-pin flat ribbon cable and male connector to interface with MPF-1.

ROM: Single +5V EPROM 2516 × 1. Total of 2K bytes. Monitor EPROM address: 9000—97FF.

RAM: Static RAM, 6116 × 2. Total of 4K bytes. Basic RAM address: 8000—8FFF.

I/O Port: Programmable I/O port, 3255× 1. Total of 24 parallel I/O lines.I/O address: CC-CF

System Power Consumption: 25V/ 30mA and 5V/350mA

Main Power Input: 30V/75mA and 9V/400mA adaptor is provided. Power adaptor input 110V.

Textool: 24-pin, zero insertion force socket.

Software Specifications

to monitor.

READ: Read data from EPROM onto RAM buffer.

VERIFY: Verify EPROM data with RAM buffer.

LIST: Display or modify data on RAM buffer.

RESTART: Restart to initial state of EPB-MPF.

PROGM: Write data from RAM buffer to EPROM.

DEL: Delete data from the current display address in RAM buffer.

INS: Insert data onto the address followed by the current display address of RAM BUFFER.

SSB-MPF Features

- Uses high reliability TI speech synthesis chip.
- 4KB EPROM for time-clock program and speech utility.
- Two EPROM sockets for expanding speech vocabulary.
- Shares the Z80 CPU of MPF-1 as host controller.
- Uses keyboard and speaker of MPF-1 as input/output device.
- · Adjustable voice pitch and volume.
- 9V, 0.5A adaptor is provided.
- Complete accessories including 40-pin, double-headed connector, audio jumper, operation manual, etc.



195 W. El Camino Real, Sunnyvale, CA 94086 (408) 773-8400