

SC-3000

USER'S MANUAL
SC-3000

Before using your SC-3000, be sure to read this manual very carefully. When you are not using it, store this manual safely with the warranty certificate. Use only SEGA's original cartridges in this computer.

Console Unit



AC adapter



 
Antenna switch box



Cable




Back view of console unit

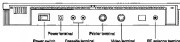

Precautions

Turn power switch on only after making sure that everything is ready.
If power SW is turned on before cartridge is inserted, problems may occur.

 Side view of console unit

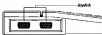

Game cartridge



Joystick SL-3000



Cable for video input



For home TV with video input terminal


SC-3000

CONNECTION TO TV AND ANTENNA



Disconnect TV antenna and connect it to the antenna input. Set switch on switch box to "Antenna" or to "Antenna" as required.

After disconnecting them from the TV antenna connector, connect the wires to the SC-3000 connector.

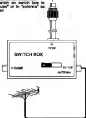

If your home TV has a video input, connect SC-3000 to your TV with the specified cable (separate option purchase).

External TV antenna



SC-3000

HOW TO USE SC-3000

 
1. Set the switch on the switch box to **COMPUTER** (for watch TV), and to **TV**.




2. Turn TV channel to unoccupied channel.



3. Insert a cartridge you want to use.
Turn power switch on before inserting cartridge.

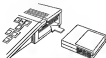

 4. After all connections have been made correctly, plug in the AC adaptor, and then turn the main switch of the SC-3000 on.

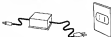

While using the game cartridge, you can not use a tape recorder. Tape recorder should be used only for BASIC or Macrocartridges.



PRECAUTIONS

The control unit of SC-3000 has a very precise mechanism. Be careful when using or handling it. When it is not in use, disconnect the AC adaptor. If any problems (such as noise) occur at the computer, immediately turn off the power from which you brought the computer.



THE FOLLOWING ARE PROBLEMS WHICH MAY BE CORRECTED EASILY

Before requesting repair, check the following items.
If after checking, the problem still remains, please contact store from which you bought the computer.

NO PICTURES ON SCREEN

- Is the power source correctly connected?
- Is the video cable properly plugged in?
- Is the power switch on the TV turned on?
- Does the remote control (after watch) agree with the TV channel being used?
- Make sure that the switch has setting is set to "game".
- Make sure that you have not connected the PC terminal and the video terminal.

SCREEN FLAKERS OR THERE IS NO SOUND

- Make sure that the interface wires are properly connected.
- Make sure that the TV channel line adjustment has not been incorrectly changed.
- Make sure that the TV audio adjustment is correctly set.
- Make sure that the game settings are properly cleared.

NO GAME SOUND

- Check to see if the TV volume setting is the low.
- Check to see if the connection cable are loose or have come off.

PICTURE ON TV SCREEN IS NOT STRAIGHT

- Make sure that the TV synchronization (SETTING) for vertical and horizontal pictures are all correctly set.

POINTER APPEARS ON TV SCREEN DURING A GAME

- Turn the manual line adjustment channel knob and adjust it until the problem disappears.

FIMERS ON TV SCREEN DURING A PROGRAM

- Make sure that the switch has is set to "TV".
- Make sure that the TV interface is properly connected.

SERVICE

- If you have any questions or problems, please contact the store from which you bought the computer.

SEGA®

Sega Enterprises, Ltd.
3-12, Honcho 1-chome
Chiba, Tokyo 145, Japan
Tel.: (03) 742-9111
Telex: 333317-5 (SEGA/JPN)
Fax: (03) 742-2248

Sega Europe, Limited
12 Old World Street
Mayfair/London W1C, England
Tel.: 01-494-2000
Telex: 95002 SEGA/UK G
Fax: (01) 494-2025