

Apple II

Disk II
Installation Manual



Notice

Apple Computer, Inc. reserves the right to make improvements in the product described in this manual at any time and without notice.

Disclaimer of All Warranties and Liabilities

Apple Computer, Inc. makes no warranties, either express or implied, with respect to this manual or with respect to the software described in this manual, its quality, performance, merchantability, or fitness for any particular purpose. Apple Computer, Inc. software is sold or licensed "as is." The entire risk as to its quality and performance is with the buyer. Should the programs prove defective following their purchase, the buyer (and not Apple Computer, Inc., its distributor, or its retailer) assumes the entire cost of all necessary servicing, repair, or correction and any incidental or consequential damages. In no event will Apple Computer, Inc. be liable for direct, indirect, incidental, or consequential damages resulting from any defect in the software, even if Apple Computer, Inc. has been advised of the possibility of such damages. Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This manual is copyrighted. All rights are reserved. This document may not, in whole or part, be copied, photocopied, reproduced, translated or reduced to any electronic medium or machine readable form without prior consent, in writing, from Apple Computer, Inc.

© 1982 by Apple Computer, Inc.
20525 Mariani Avenue
Cupertino, California 95014
(408) 996-1010

The word Apple and the Apple logo are registered trademarks of Apple Computer, Inc.

Simultaneously published in the U.S.A and Canada.



Warning

This equipment has been certified to comply with the limits for a Class B computing device, pursuant to Subpart J of Part 15 of FCC Rules. Only peripherals (computer input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this computer. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.



apple computer

20525 Mariani Avenue
Cupertino, California 95014
(408) 996-1010
TLX 171-576
030-0415-A

Radio and Television Interference

The equipment described in this manual generates and uses radio-frequency energy. If it is not installed and used properly, that is, in strict accordance with our instructions, it may cause interference with radio and television reception.

This equipment has been tested and complies with the limits for a Class B computing device in accordance with the specifications in Subpart J, Part 15, of FCC rules. These rules are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that the interference will not occur in a particular installation, especially if you use a "rabbit ear" television antenna. (A "rabbit ear" antenna is the telescoping-rod type usually contained on TV receivers.)

You can determine whether your computer is causing interference by turning it off. If the interference stops, it was probably caused by the computer or its peripheral devices. To further isolate the problem:

- Disconnect the peripheral devices and their input/output cables one at a time. If the interference stops, it is caused by either the peripheral device or its I/O cable. These devices usually require shielded I/O cables. For Apple peripheral devices, you can obtain the proper shielded cable from your dealer. For non-Apple peripheral devices, contact the manufacturer or dealer for assistance.

If your computer does cause interference to radio or television reception, you can try to correct the interference by using one or more of the following measures:

- Turn the TV or radio antenna until the interference stops.
- Move the computer to one side or the other of the TV or radio.
- Move the computer farther away from the TV or radio.
- Plug the computer into an outlet that is on a different circuit than the TV or radio. (That is, make certain the computer and the radio or television set are on circuits controlled by different circuit breakers or fuses.)
- Consider installing a rooftop television antenna with coaxial cable lead-in between the antenna and TV.

If necessary, you should consult your dealer or an experienced radio/television technician for additional suggestions. You may find helpful the following booklet, prepared by the Federal Communications Commission:

"How to Identify and Resolve Radio-TV Interference Problems"

This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, stock number 004-000-00345-4.

Table of Contents

	Preface	v
1	Introduction 3 Getting Familiar 3 Unpacking Your Drive 4 How Do I Start?	1
2	Installation for Apple IIe 7 Preparing to Install Your Drive 8 Installing Clamps and Cables	5
3	Installation for Apple II and Apple II Plus 13 Preparing to Install Your Drive 14 Installing Clamps and Cables	11
4	Installation of the Disk II Controller Card 19 Installing the Controller Card	17

Figures and Tables

- 3 Figure 1-1 Disk II
- 7 Figure 2-1 Things You'll Need
- 8 Figure 2-2 Outside View of the Back Panel
- 9 Figure 2-3 Grasp the Cable
- 9 Figure 2-4 Hold U-shaped Clamp
- 9 Figure 2-5 Place the Clamp Over the Metal Flap
- 10 Figure 2-6 Position the Clamp Over the Opening
- 10 Figure 2-7 Install screws
- 13 Figure 3-1 Things You'll Need
- 14 Figure 3-2 Prepare the Clamp
- 14 Figure 3-3 Position the Cable in the Clamp
- 15 Figure 3-4 Position Two Cables in the Clamp
- 15 Figure 3-5 Position Four Cables in the Clamp
- 19 Figure 4-1 Connect DRIVE 1 to the Controller Card
- 20 Figure 4-2 Connect DRIVE 2 to the Controller Card
- 20 Figure 4-3 Install the Controller Card

Preface

Your Disk II is a valuable addition to your computer. Several individual files can be stored on a disk and each file can be accessed directly, by name. The Disk II also transfers data to your computer more rapidly than a tape recorder. In this manual you will learn how to unpack and install your Disk II.

Before attempting to use Disk II, read the manuals that come with your computer.

This manual contains four chapters. Chapter 1 introduces you to the drive and explains how to unpack it. Chapter 2 tells how to connect the drive to the Apple IIe. Chapter 3 tells how to connect the drive to the Apple II and Apple II Plus. You should refer only to the chapter that applies to your computer. Finally, Chapter 4 explains how to install the controller card in your computer.

To learn how to use your Disk II, refer to the Disk Operating System (DOS) Manual that comes with your drive.

Throughout this manual you will see two visual aids that are used to point out paragraphs of special interest.

Gray boxes contains especially useful or interesting information.



Warning

boxes indicate potential problems or hazards.

Introduction

-
- 3 Getting Familiar
 - 3 Unpacking Your Drive
 - 4 How Do I Start?



Introduction

Figure 1-1. Disk II



Getting Familiar

Your Disk II disk storage system consists of a disk drive in a compact cabinet (Figure 1-1), a controller card that you must install in your computer, and installation hardware.

Disk II's main advantage over a cassette based system is that information can be stored on or retrieved from the Disk II much more quickly and conveniently. Another important advantage of the Disk II is that information is stored and retrieved by a name under which it is filed.

The Disk II operates by performing three basic functions: positioning its read/write heads to a specified location on the disk, writing data, or reading data. However, it cannot do any of these things on its own. It must be directed by the controller card which you will later install in one of the computer's peripheral card slots. The controller interprets commands from the computer and causes the drive to perform its seek, read, and write functions.

Disk II is controlled by an operating system that automatically keeps track of files, saves and retrieves information, and does a multitude of other housekeeping tasks. The few special commands needed to manipulate files and use the drive are described in the reference manual for the particular programming language being used. For a complete understanding of your operating system refer to the Disk Operating System (DOS) Manual packed with your drive.

Unpacking Your Drive

Your Disk II is packed in a cardboard shipping carton. Among the items you will find in the carton is a packing list. Before going on, read over your packing list and then check each item as it is unpacked.

Carefully remove the disk drive so you do not damage it or the packing materials. Save the packing material in case you wish to transport your disk — or in the unlikely event you must return it to your dealer or to the factory for service.

How Do I Start?

You are now ready to remove the Apple's top cover to get access to the inside of the computer. Before you do however, notice that both Chapter 2 and 3 describe installation. This is because the procedure for installing your Disk II will differ slightly, depending on whether your computer is an Apple IIe or an Apple II. If you have an Apple IIe, refer to Chapter 2 for specific instructions on how to connect the drive to your computer. If your computer is an Apple II or Apple II Plus, you will find appropriate installation instructions in Chapter 3. In either case, you should only be concerned with the chapter that pertains to your computer.

Installation for Apple IIe

-
- 7 Preparing to Install Your Drive
 - 8 Installing Clamps and Cables




Installation for Apple IIe

Preparing to Install Your Drive

To install the Disk II on your Apple IIe, you'll need the items listed below and shown in Figure 2-1.

- Your Disk II drive(s), with their ribbon-like cable(s) fully extended
- Your disk controller card(s), unwrapped
- The "U" shaped metal clamp and two screws that come in a plastic bag in your disk drive package
- A small wrench

Figure 2-1. Things You'll Need for Installation on Apple IIe

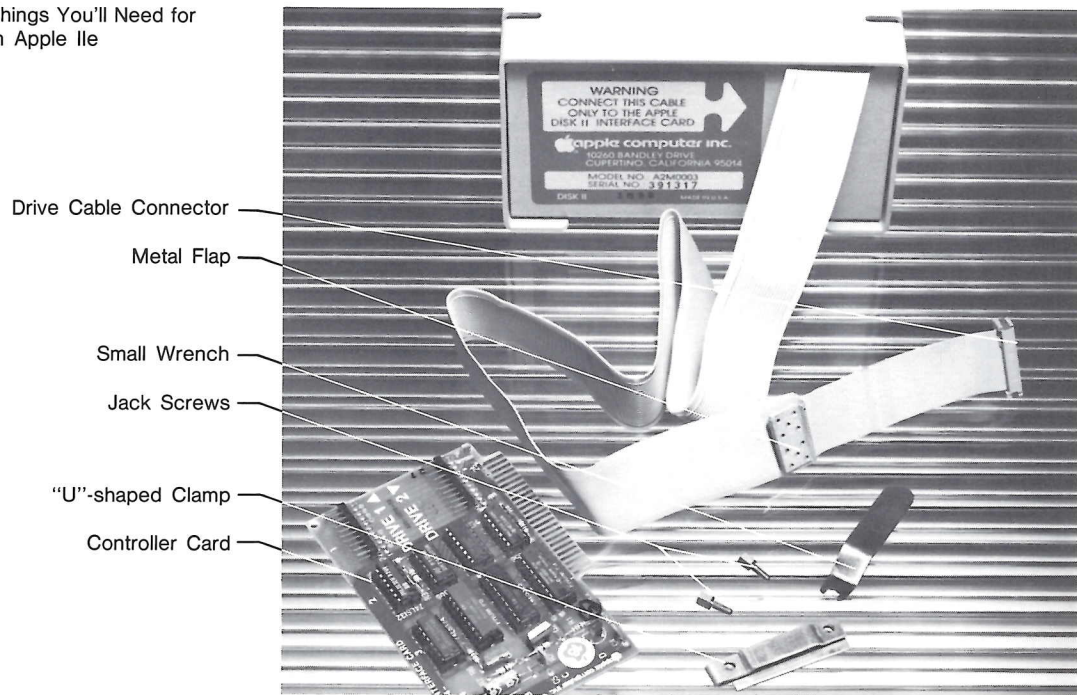

Installing Clamps and Cables

Before beginning, read over the entire procedure. You can cause permanent damage to your computer and your disk drive by not following these steps precisely.

1. Turn off the power switch on the back of your Apple IIe and any other attached peripheral devices. Disconnect the power plug.

Warning


If you try to connect anything to or disconnect anything from the inside of your computer when the power is on, you are likely to damage the circuits and lose any information stored in random access memory (RAM).

2. Reach behind the computer and pull up on the back corners of the cover until the corner fasteners pop apart. Carefully remove the cover and set it aside.
3. Look down into your computer and locate the power supply — the rectangular metal box along the left side of the computer. Touch the power supply case with one hand to discharge any static charge that may be on your clothes or body.

Note: As you are looking into your computer notice that the openings in the back panel are filled with cover plates.

4. Lean over the computer so that you can see the back panel (Figure 2-2). Notice that each cover plate has a number printed beside it.

Figure 2-2. Outside View of the Apple IIe Back Panel

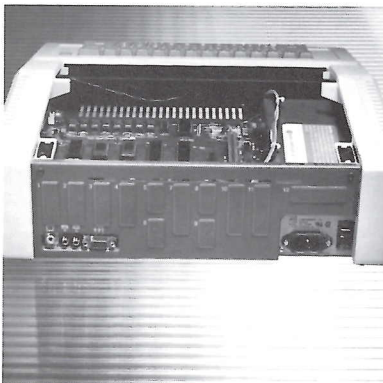


You need only to concern yourself with the openings numbered 1 through 4. Remove the cover plate from a numbered opening for each of your drives, starting with opening #1.

Note: Remove the cover plates by reaching inside the computer and pushing down and out on the plastic tab on the top of each cover plate.

5. Now look at your disk drive's ribbon-like cable (Figure 2-1). It has a connector at its end and a metal flap on its side. Slide the connector through the lowest numbered opening available on the back panel to the inside of your computer.
6. Find the "U" shaped clamp and two Jack screws (Figure 2-1) that came packed with your drive. (Ignore the rectangular clamp and screw; this clamp was designed for installation on the Apple II or Apple II Plus and you do not need it.)

7. Take hold of the cable and bend the flap away from the connector. Hold the flap down against the cable with your thumb as shown in Figure 2-3.

Figure 2-3. Grasp the cable


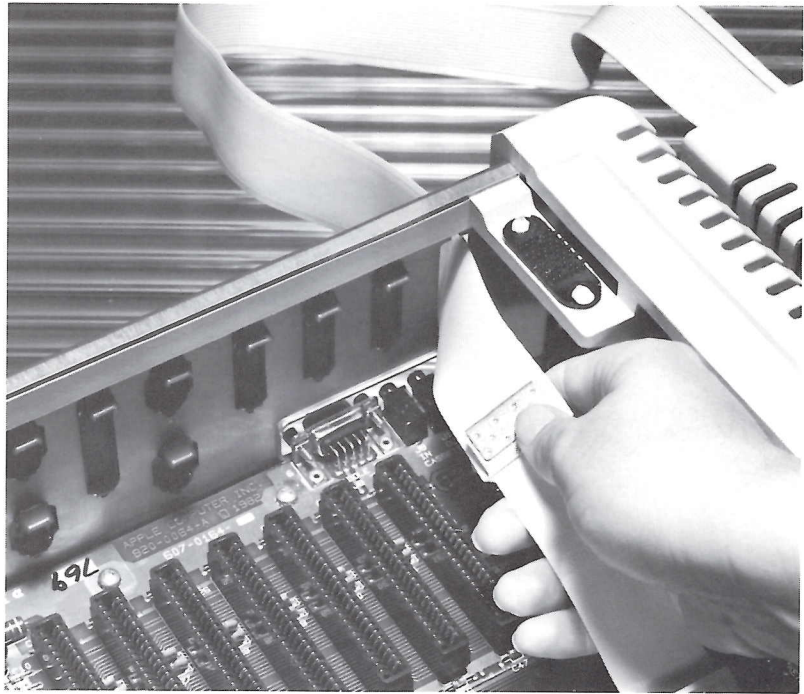


8. Hold the "U" shaped clamp in your other hand so that the raised "bump" on one side of the clamp is under your thumb and the opening in the clamp is pointing up (Figure 2-4).

Figure 2-4 (Left). Hold U-shaped Clamp

Figure 2-5 (Right). Place the Clamp Over the Metal Flap

Bump

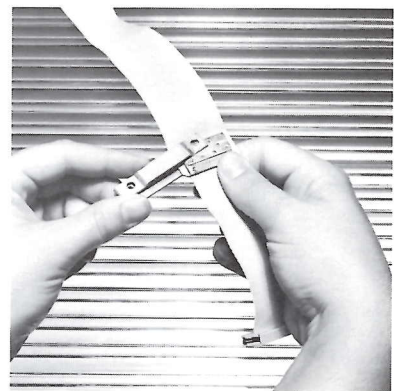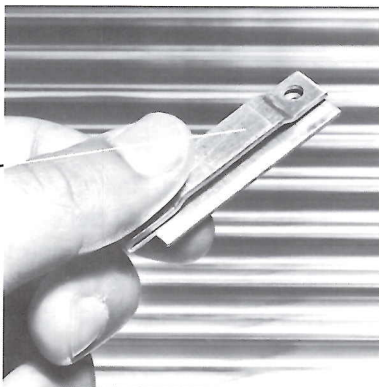

9. Slide the cable and folded-over metal flap into the clamp so that the flap is pressed against the cable and sandwiched between the two sides of the clamp. (You may have to spread the clamp open slightly to make room for the flap.) See Figure 2-5.

10. Using Figure 2-6 as a guide, feed the cable back through the opening until the clamp touches the back panel. Push the clamp against the back panel so that the bump fills the opening and the two round nuts affixed to the clamp are facing you.

Note: In order to arrange the clamp so it's flat against the back panel, you have to bend the cable in an "L" shape at the drive side of the clamp.

Figure 2-6. Position the Clamp Over the Opening


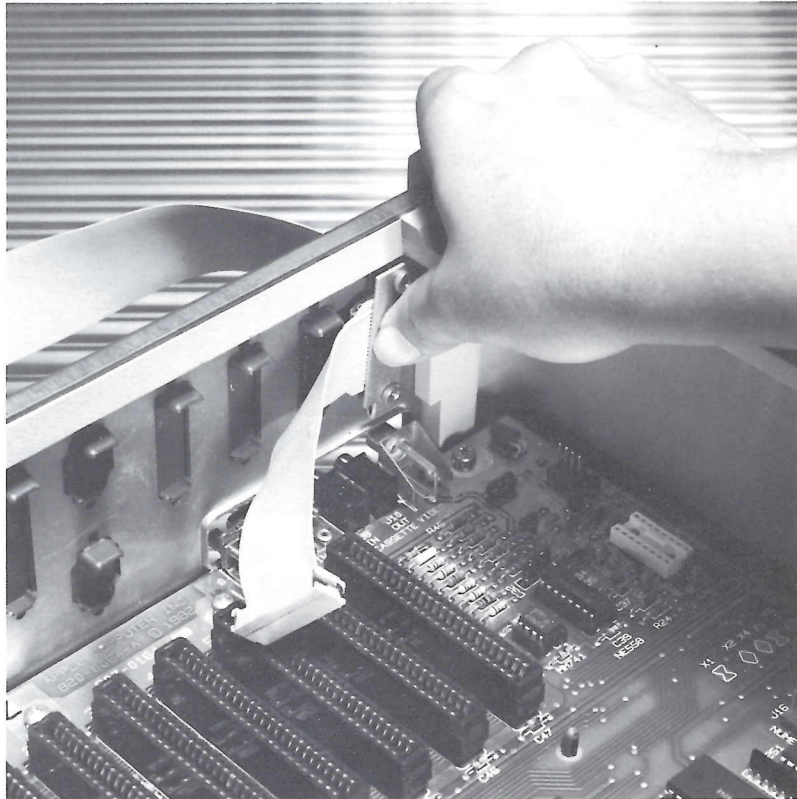


Figure 2-7. Install screws

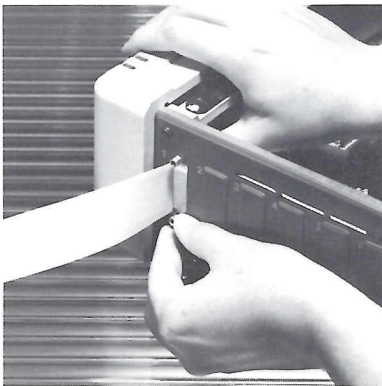

11. Hold the clamp against the opening with one hand as shown in Figure 2-6. Reach behind the computer with the other hand and install screws through the two slots on the top and bottom of the opening into the nuts on the clamp (Figure 2-7). Use your small wrench to tighten the screws.

12. Repeat steps 5 through 11 for each additional Disk II you are connecting to your computer.

Continue with the installation of your Disk II storage system by installing the controller card as explained in Chapter 4.

Installation for Apple II and Apple II Plus

-
- 13 Preparing to Install Your Drive
 - 14 Installing Clamps and Cables
 - 15 For 2 Drives
 - 15 For 4 Drives
 - 16 Note for 3 Drives




Installation for Apple II and Apple II Plus

Preparing to Install Your Drive

To install the Disk II on your computer, you'll need the items listed below and shown in Figure 3-1.

- Your Disk II drive(s), with their ribbon-like cable(s) fully extended
- Your disk controller card(s), unwrapped
- The rectangular metal clamp and the screw that come in a plastic bag in your disk drive package
- A Phillips screw driver

Figure 3-1. Things You'll Need for Installation on Apple II and Apple II Plus

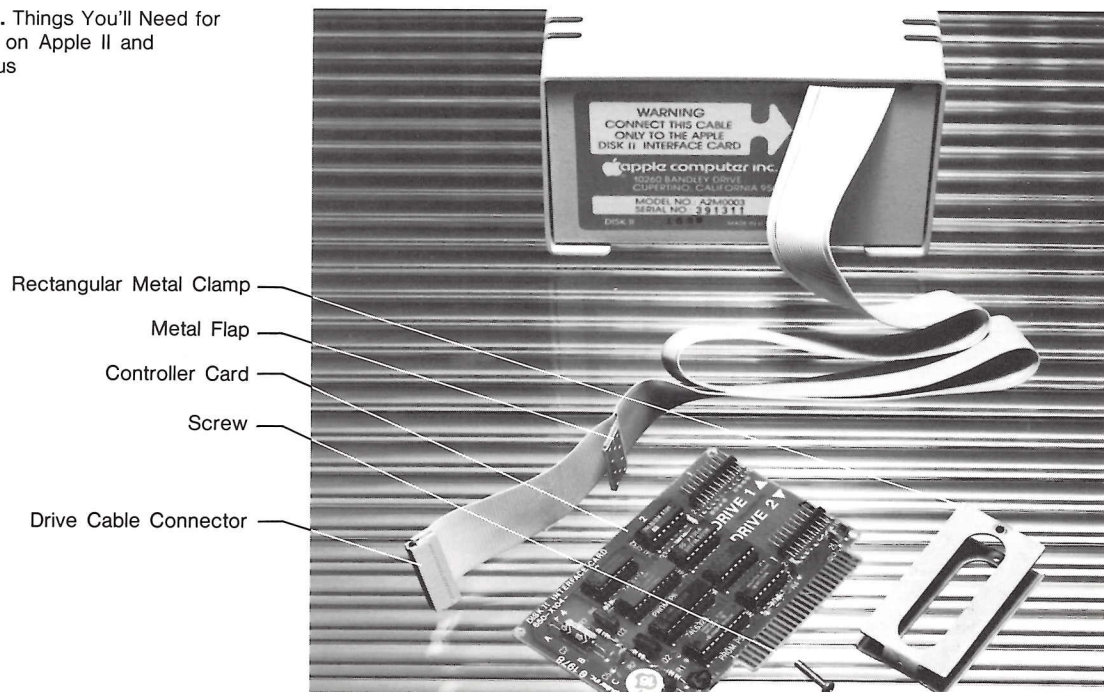

Before beginning, read over the entire procedure. You can cause permanent damage to your computer and your disk drive by not following these steps precisely.

Installing Clamps and Cables

1. Turn off the power switch on the back of your computer and any other attached peripheral devices. Disconnect the power plug.



Warning

If you try to connect anything to or disconnect anything from the inside of your computer when the power is on, you are likely to damage the circuits and lose any information stored in random access memory (RAM).

Figure 3-2. Prepare the Clamp


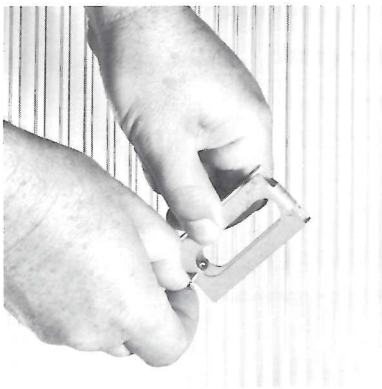


Figure 3-3. Position the Cable in the Clamp

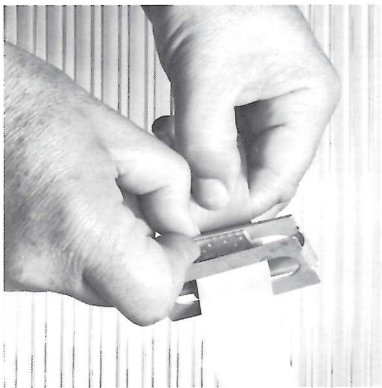

2. Reach behind the computer and pull up on the back corners of the cover until the corner fasteners pop apart. Carefully remove the cover and set it aside.
3. Look down into your computer and locate the power supply — the rectangular metal box along the left side of the computer. Touch the power supply case with one hand to discharge any static charge that may be on your clothes or body.
4. Remove the clamp and screw (Figure 3-1) from their plastic bag. (Ignore the “U” shaped clamp and two Jack screws; this clamp was designed for installation on the Apple IIe and you do not need it.) Note that a small round nut is affixed to one side of the clamp, centered over holes in the clamp. With one hand, squeeze together the sides of the clamp. With the other hand, slide the screw into the hole in the side of the clamp farthest from the nut as shown in Figure 3-2. Slide the screw through to the side of the clamp with the nut. Then give the screw a few turns until its end is flush with the nut.
5. Slide your disk drive's cable connector through the opening in the metal clamp. Make sure the screw head on the metal clamp faces the disk drive.

Pull the cable through the clamp until the cable's metal flap fits between the two sides of the clamp as shown in Figure 3-3. (The metal flap should fit snugly into the curl formed by the long outer edges of the clamp.)

Figure 3-4. Position Two Cables in the Clamp


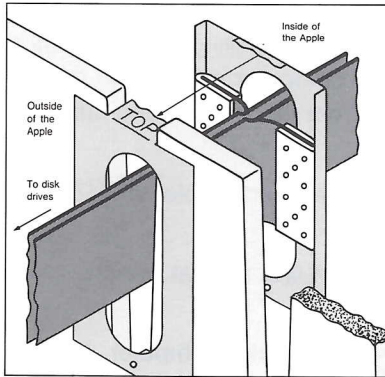


Figure 3-5. Position Four Cables in the Clamp

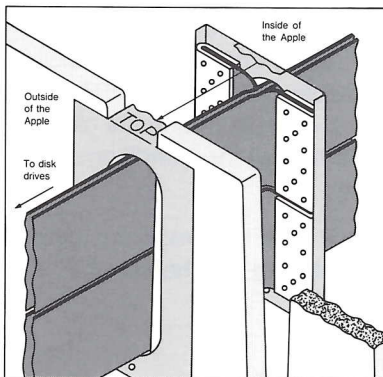

For 2 Drives

One at a time, slide the drive cable connectors through the long, oval opening in the metal clamp, making sure the cable flaps are facing outward and in *opposite* directions. Then pull the cables through until their flaps are between the two sides of the clamp. Position the flaps so that they fit into the clamp's curled edges, as shown in Figure 3-4. This illustration shows a cut-away view of the clamp as viewed from the back of the computer.

Helpful Hint: This may take some wiggling of the cables and even some pushing around of the flaps with your fingers. If so, please wiggle and push CAREFULLY!

For 4 Drives

One at a time, slide the drive cable connectors through the long, oval opening in the metal clamp, making sure that the flaps of two cables face out towards one outer edge of the clamp and that the other two cables' flaps face out towards the other outer edge of the clamp. Then pull the cables through until all their flaps are between the two sides of the clamp. Next separate the four cables into two pairs by sliding two cables down in the oval opening towards the screw and sliding the other two cables up towards the end of the clamp labeled TOP. Make sure each of these pairs has its two flaps facing in opposite directions. Move the flaps into the positions shown in Figure 3-5.

Note for 3 Drives

If you're installing 3 disk drives, follow the procedure described for 4 drives above as closely as possible. Where the instructions tell you to separate the cables into two pairs, slide one of the cables down towards the screw and the other two up toward the TOP label (flaps facing opposite directions). Have the flap of the third, unpaired cable (that you slid down towards the screw) facing outward and towards slot #7 and make sure it's correctly positioned under the curled edge. Use Figure 3-5 for your guide in positioning the flaps, imagining the lower, right-hand flap in that figure absent.

6. Locate the three deep, vertical notches in the back of the computer's case. In this step, you'll slide the clamp down over the third deep notch from the left (as seen from the keyboard side of the computer).

Hold the cables and clamp in the arrangement described in step 5 for the number of drives you're installing. Being careful not to scratch the paint inside the computer case, slide the clamp down over the third notch from the left, making sure that:

- The side of the clamp with the screw head visible is **OUTSIDE** the computer
 - The screw goes down into the notch first so that the clamp's label **TOP** is facing up
 - The drive cable's metal flaps are **INSIDE** the computer, held flat against the inside of the case in the positions described above and not sticking out from under the curled edges of the clamp
 - The metal flaps fit snugly under the curled edges of the clamp, and do not overlap one another
7. Gently push the clamp as far down into the notch as it will go. Tighten the clamp screw from the outside of the computer, making sure the flaps of the disk cables are held **TIGHTLY** against the inside of the computer's case by the metal clamp. As you do this check to make sure that all the conditions listed in step 6 are met.

Continue with the installation of your Disk II storage system by installing the controller card as explained in Chapter 4.

Installation of the Disk II Controller Card

-
- 19** Installing the Controller Card
 - 19** For 2 Drives
 - 20** For 3 or 4 Drives



Installation of The Disk II Controller Card


Installing the Controller Card

1. Hold the cable from the first drive (called DRIVE 1) and line up the holes in its connector with the "DRIVE 1" pins on the controller card.

Warning

Handle your controller card with care. Grasp it by the corners or edges, and try not to touch the components. Above all, don't grasp the card by the gold "fingers" on its bottom edge — they are the medium through which the computer communicates to the card and their efficiency decreases if they are dirty or scratched.

Figure 4-1. Connect DRIVE 1 to the Controller Card

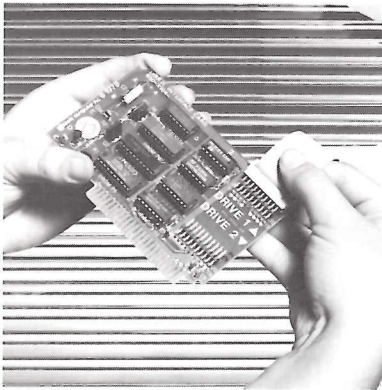

2. Plug the connector onto the pins as shown in Figure 4-1. Make sure that the pins line up with the matching holes in the connector, that there are no pins or holes left over on either end and that the cable exits the connector away from the controller card.

For 2 Drives

Following the instructions in step 1 and 2, above, plug the cable from your next drive (DRIVE 2) onto the "DRIVE 2" pins on the controller card as shown in Figure 4-2.

Figure 4-2. Connect DRIVE 2 to the Controller Card


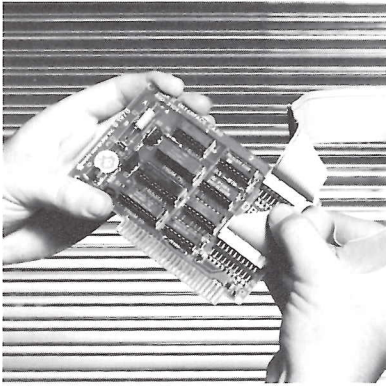


Figure 4-3. Install the Controller Card

For 3 or 4 Drives

Using a second controller card, follow the instructions above but connect the cables from your third and fourth drives to the "DRIVE 1" and "DRIVE 2" pins, respectively.

3. Locate the peripheral card connectors (usually referred to as slots) across the rear of your computer's main circuit board. Each slot is identified by a number on the circuit board. Slot #6, the second slot from the right, is reserved for your first Disk II controller card.
4. Pick up your controller card and position it over slot #6 so that the cable connections are toward the back of your computer.
5. Gently but firmly push the gold "fingers" on the card's edge connector into the slot, rear edge first as shown in figure 4-3. (You may have to exert pressure on the disk drive cables to bend them to get the controller card into position.) Then push the front edge down and gently rock the card back and forth until it is level and firmly seated. Finally, press down on each disk drive cable connector to make sure its plugged firmly into the controller card.

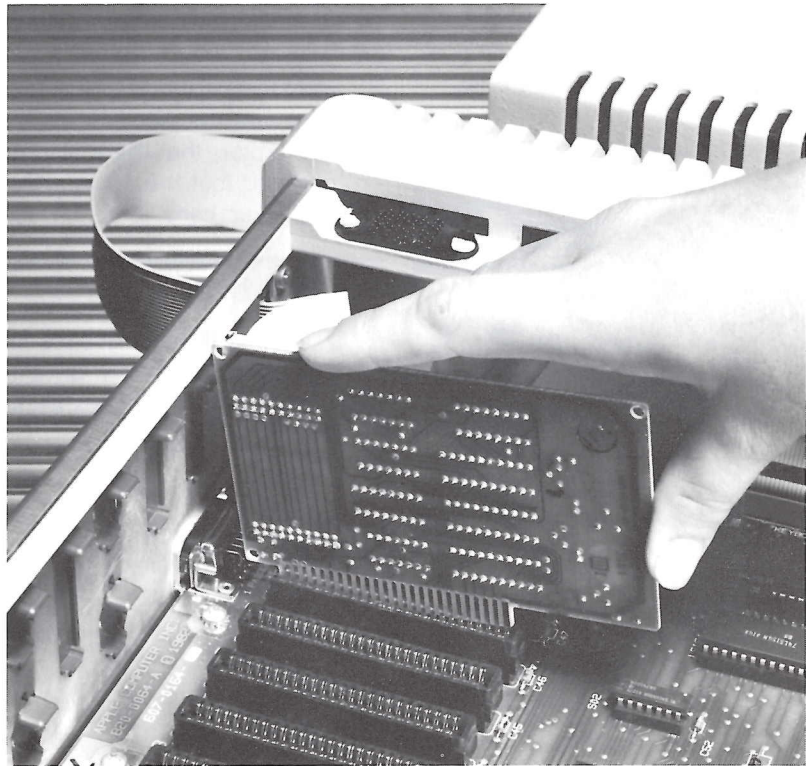

For 3 or 4 Drives

First read and follow steps 1 and 2 above. Then locate slot #4, the fourth slot from the right. You'll use slot #4 for your second controller card, leaving slot #5 empty. Slide your second controller card (attached to the cables for drives 3 and 4) into slot #4. This may require some (gentle!) force to bend the cables to correctly position the card. After the card is in place, press down on each connector to make sure it's plugged firmly into the controller card. Press down once again on the card to ensure that it's firmly seated in the slot.

6. It's a good idea to label the front of each drive with the number that your programs will use to refer to it. Included in the package with your drive and controller is a small plastic bag containing two drive labels for DRIVE 1 and DRIVE 2. Use these labels to identify your drives. For example, label the drive connected to the DRIVE 1 pins of the card in slot #6 as "Drive 1". Refer to the following table and label any additional drives with the appropriate numbers.

Disk Drive Computer Connection	Drive
Slot 6, Drive 1	1
Slot 6, Drive 2	2
Slot 4, Drive 1	1
Slot 4, Drive 2	2

Note: You may want to pencil in the slot numbers on the drive labels if you have more than two drives.

7. Replace the cover on your computer by first sliding the front edge toward the keyboard and then pressing down on the two rear corners until they pop into place.

If you are satisfied that you have correctly installed the Disk II on your computer, you are ready to go to the DOS Manual to learn how to use your new system.



Errata to The DOS Manual

The disks that you receive with your Disk II disk drive have been reorganized for easier use and slightly revised for improved operation on the Apple IIe computer. The version of DOS, the disk operating system for the Apple II, is the same as the current DOS (3.3) and works equally well on the Apple II, Apple II Plus, and Apple IIe computers.

The DOS Manual is being revised into the *DOS User's Manual*, with a tutorial, and the *DOS Programmer's Manual* for easier use. You'll find a coupon for the new books in your disk drive box. Present this coupon to your dealer and you'll receive the new DOS manuals free of charge. In the meantime, this short document will tell you everything you need to know about the changes.

Installing Your Disk Drive

(Pages 2-5 in *The DOS Manual*.)

The cable that connects the disk drive controller card to your disk drive has been redesigned to reduce electromagnetic interference. The new cable must be anchored to the back panel with a special clamp. You'll find installation instructions for the new cable and clamp in the booklet "Disk Drive Installation Instructions," which came packed with your disk drive. Use these instructions instead of the ones in your DOS manual.

If you have an Apple IIe, you may have already read a condensed version of the new disk drive installation instructions on page 19 of the *Apple IIe Owner's Manual*.

Starting Up

(Page 12 in *The DOS Manual*; page 58 in the *Apple IIe Owner's Manual*.)

When you start up, or boot, the DOS 3.3 System Master disk, you'll see this screen instead of the one pictured in *The DOS Manual* and in the *Apple IIe Owner's Manual*.

Apple II
DOS VERSION 3.3 SYSTEM MASTER

JANUARY 1, 1983

COPYRIGHT APPLE COMPUTER, INC. 1980, 1982

If you're using DOS on an Apple IIe, you'll also see this highlighted reminder:

BE SURE CAPS LOCK IS DOWN.

It's important that you have the Apple IIe CAPS LOCK key down because neither DOS nor Applesoft understand lowercase commands.

Using 13-Sector Disks

(Page 182 in *The DOS Manual*; page 67 in the *Apple IIe Owner's Manual*.)

The DOS Manual mentions two disks: the DOS 3.3 SYSTEM MASTER disk and the BASICS disk. The BASICS disk allowed you to start up 13 sector disks. However, you don't need the BASICS disk anymore because that capability is included on the System Master disk. So, when *The DOS Manual* (or the manual that comes with your application software) tells you to start up the BASICS disk, just type

BRUN BOOT13

Slots are expansion sockets for peripheral cards inside the computer. The disk drive controller card is usually in slot 6.

You'll be asked which slot to boot from.

If your 13 sector disk is in a disk drive connected to slot 6 (the default slot number), just press RETURN. Otherwise, type the number of the correct slot and then press RETURN.

For more information on using 13 sector disks, turn to page 182 in *The DOS Manual*.

Sample Programs

The programs on the DOS 3.3 SYSTEM MASTER disk have now been divided between two disks: one called DOS 3.3 System Master, the other called DOS 3.3 Sample Programs. In the redistribution, some programs were renamed, while others were deleted or replaced. See Table 1 to find out what happened to the programs on the original SYSTEM MASTER disk.

Notice in particular that the game Little Brick Out, mentioned on page 63 of the Apple IIe Owner's Manual, is now called Brick Out. Be sure to use the new name or you'll get the message: FILE NOT FOUND.

Be sure to make backup copies of the Sample Programs disk and the System Master disk so you won't accidentally modify your originals.

Table 1. Disk contents.

Original SYSTEM MASTER	New System Master	Sample Programs
HELLO	HELLO	HELLO
ANIMALS		ANIMALS
APPLE PROMS		APPLE PROMS
APPLESOFT	APPLESOFT	APPLESOFT
APPLEVISION		APPLEVISION
#BIORHYTHM		
BOOT13	BOOT13	
#BRIAN'S THEME		
CHAIN	CHAIN	
#COLOR DEMO		
&COLOR DEMOSOFT	COLOR TEST	
COPY	COPY	
COPY.OBJ0	COPY.OBJ0	
COPYA	COPYA	
EXEC DEMO		EXEC DEMO
FID	FID	
FPBASIC	FP BASIC	FP BASIC
INTBASIC	INTBASIC	INTBASIC
&LITTLE BRICK OUT		BRICK OUT
MAKE TEXT		MAKE TEXT
MASTER CREATE	MASTER CREATE	
MUFFIN	MUFFIN	
PHONE LIST		PHONE LIST
RANDOM		RANDOM
RENUMBER	RENUMBER	
#RENUMBER INSTRUCTIONS		
&RETRIEVE TEXT		GET TEXT
# = DELETED PROGRAMS		
& = RENAMED PROGRAMS		

Setting Up A Turnkey System

(Page 177 in *The DOS Manual*.)

If you're setting up a turnkey system with the new DOS 3.3 System Master disk, you need to move the file called LOADER.OBJ0 to your startup disk, as well as the other files mentioned in *The DOS Manual* (HELLO, APPLESOFT, INTBASIC and FPBASIC).

Creating A Turnkey System

(Page 34 in *The DOS Manual*.)

The DOS Manual teaches you how to create a turnkey system by using the sample program COLOR DEMO. You won't find COLOR DEMO on the new DOS 3.3 System Master disk, but the procedure will work if you type

COLOR TEST

every time the manual tells you to type COLOR DEMO.

Since some of the programs were renamed or deleted, you may run into similar situation elsewhere in *The DOS Manual* or the *Apple IIe Owner's Manual*. Don't despair. Just substitute another sample program from Table 1 of this errata.

Apple IIe With An 80-Column Text Card

If you have an Apple IIe 80-Column Text Card installed in your Apple IIe and you want an 80-column display, type

PR#3

after starting up DOS.

Part # 031-0115A